
RAM® LOCKING KNOB INSTRUCTIONS

PARTS INDEX

- A. RAM DOUBLE SOCKET ARM (5-5/8" LONG)
- B. RAM 1.5" DIA BALL BASE W/ AMPS HOLE PATTERN C. RAM LOCKING KNOB WITH KEY



TO ADJUST DOUBLE SOCKET ARM, UNLOCK KNOB (TURN KEY COUNTER-CLOCKWISE) AND LOOSEN BY ROTATING KNOB COUNTER-CLOCKWISE. WHEN DOUBLE SOCKET ARM AND BASES ARE ADJUSTED TO DESIRED POSITION, ROTATE KNOB CLOCKWISE TO TIGHTEN. TO LOCK, TURN KEY CLOCKWISE.

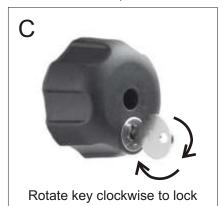

RAM Mounting Systems 8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com

NOTE: WHEN KNOB IS LOCKED, YOU SHOULD BE ABLE TO SPIN THE KNOB FREELY WITHOUT LOOSENING THE DOUBLE SOCKET ARM.



 
This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.


RAM® LOCKING KNOB INSTRUCTIONS

PARTS INDEX

A. RAM DOUBLE SOCKET ARM (5-5/8" LONG) B. RAM 1.5" DIA BALL BASE W/ AMPS HOLE PATTERN C. RAM LOCKING KNOB WITH KEY

В



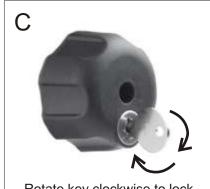

Rotate key clockwise to lock

RAM Mounting Systems 8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com

NOTE: WHEN KNOB IS LOCKED, YOU SHOULD BE ABLE TO SPIN THE KNOB FREELY WITHOUT LOOSENING THE DOUBLE SOCKET ARM.



This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.