RAM TOUGH-DOCK™ FOR PANASONIC TOUGHBOOK CF-H1 PORT SPECIFICATIONS & COMBINATION LOCK INSTRUCTIONS

DC POWER VGA RJ-45 (QTY. 4) DB9 USB 2.0 PORT USB 2.0 PORT SERIAL PORT

UNLOCK MODE:

TO UNLOCK, ALIGN PRESET OR CURRENT COMBINATION (A) AND PULL PLUNGER OUTWARD (B) UNTIL INDENTATION IN PLUNGER IS VISIBLE NEXT TO ARROW (C).

FACTORY PRESET: "1 1 1 1"



RAM Mounting Systems 8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com

CHANGING LOCK COMBINATION:

1. SET LOCK TO UNLOCK MODE.

2. ON REVERSE SIDE, MOVE THE SLOT TO THE LEFT OF THE COMBINATION NUMBERS (D) DOWNWARD UNTIL IT STOPS (E).

3. WHILE HOLDING SLOT DOWN FROM STEP 2, SET NEW COMBINATION ON THE FRONT SIDE OF LOCK IN LINE WITH ARROW.

WARNING: BACKUP CODE NOT AVAILABLE IF COMBINATION IS FORGOTTEN OR LOST.

4. MOVE SLOT UPWARD TO ORIGINAL POSITION UNTIL IT STOPS (F). NEW COMBINATION WILL BE ACTIVE.

LIFETIME WARRANTY ON ALL MOUNTING COMPONENTS THREE YEAR WARRANTY ON ALL INTERNAL ELECTRONICS

The exclusive NPI Lifetime Warranty states that all RAM mounting components and parts are warranted against defects in materials and workmanship for the life of the product or part. NPI's Lifetime Warranty covers the mount and its components only. The mounted device is not covered under the Lifetime Warranty and will not be replaced if damaged as a result of mount failure. This warranty is expressly limited to the persons in the United States, and all foreign countries who purchase RAM for resale or use in the ordinary course of the buyer's business. This warranty does not cover any product or part that has been abused, worn out, heated, ground or otherwise altered, used for a purpose other than that for which it was intended, or used in a manner inconsistent with any instructions regarding its use.







This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

RAM TOUGH-DOCK™ FOR PANASONIC TOUGHBOOK CF-H1 PORT SPECIFICATIONS & COMBINATION LOCK INSTRUCTIONS



UNLOCK MODE:

TO UNLOCK, ALIGN PRESET OR CURRENT COMBINATION (A) AND PULL PLUNGER OUTWARD (B) UNTIL INDENTATION IN PLUNGER IS VISIBLE NEXT TO ARROW (C).



RAM Mounting Systems 8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com

CHANGING LOCK COMBINATION: 1. SET LOCK TO UNLOCK MODE.

1. SET LOCK TO UNLOCK MODE.

2. ON REVERSE SIDE, MOVE THE SLOT TO THE LEFT OF THE COMBINATION NUMBERS (D) DOWNWARD UNTIL IT STOPS (E).

3. WHILE HOLDING SLOT DOWN FROM STEP 2, SET NEW COMBINATION ON THE FRONT SIDE OF LOCK IN LINE WITH ARROW.

WARNING: BACKUP CODE NOT AVAILABLE IF COMBINATION IS FORGOTTEN OR LOST.

4. MOVE SLOT UPWARD TO ORIGINAL POSITION UNTIL IT STOPS (F). NEW COMBINATION WILL BE ACTIVE.

LIFETIME WARRANTY ON ALL MOUNTING COMPONENTS THREE YEAR WARRANTY ON ALL INTERNAL ELECTRONICS

The exclusive NPI Lifetime Warranty states that all RAM mounting components and parts are warranted against defects in materials and workmanship for the life of the product or part. NPI's Lifetime Warranty covers the mount and its components only. The mounted device is not covered under the Lifetime Warranty and will not be replaced if damaged as a result of mount failure. This warranty is expressly limited to the persons in the United States, and all foreign countries who purchase RAM for resale or use in the ordinary course of the buyer's business. This warranty does not cover any product or part that has been abused, worn out, heated, ground or otherwise altered, used for a purpose other than that for which it was intended, or used in a manner inconsistent with any instructions regarding its use.





