Outdoor Speed Dome Hardware Manual

B915, B928, B945, B949 I98, I915

2018/10/19





Table of Contents

Precautions4
Safety Instructions6
Introduction7
List of Models7
Package Contents8
Physical Description9
Mounting Options11
Other Mounting Accessories 12
Before Installation13
Insert the Memory Card (Optional)13
Attach the Safety Strap15
Installation Procedures16
Mount the Camera16
Attach the Ferrite Cores18
Waterproof the Cable Connections
Using the Cable Gland 21
Using the Conduit Gland
Using the Junction Box
Connect to Network
Other Cable Connections

How to Use the Power Adapter...... 32



Hardware Manual

How to Replace the Fuse	33
How to Connect Digital Input / Digital Output Devices	34
Connecting DI/DO Devices	35
How to Connect Audio Devices	39

Accessing the Camera 40

Configure the IP Addresses	40
Access the Camera	44



Precautions

Read these instructions

You should read all the safety and operating instructions before using this product.

Heed all warnings

You must adhere to all the warnings on the product and in the instruction manual. Failure to follow the safety instructions given may directly endanger people, cause damage to the system or to other equipment.

Servicing

Do not attempt to service this video device yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Trademarks

All names used in this manual are probably registered trademarks of respective companies.

Liability

Every reasonable care has been taken during the writing of this manual. Please inform your local office if you find any inaccuracies or omissions. We cannot be held responsible for any typographical or technical errors and reserve the right to make changes to the product and manuals without prior notice.



Federal Communications Commission Statement



This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential

installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to the equipment that are not expressly approved by the responsible party for compliance could void the user's authority to operate the equipment.

European Community Compliance Statement

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to European Standard EN 55022 and EN 55024. In a domestic environment, this product may cause radio interference in which cause the user may be required to take adequate measures.



Safety Instructions

Cleaning

Disconnect this video product from the power supply before cleaning.

Attachments

Do not use attachments or accessories not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture

Install other devices (such as PoE injector, alarm, etc.) that will be used with the camera in a dry place protected from weather.

Servicing

Do not attempt to service this video product yourself. Refer all servicing to qualified service personnel.

Damage Requiring service

Disconnect this video product from the power supply immediately and refer servicing to qualified service personnel under the following conditions:

- 1) When the power-supply cord or plug is damaged.
- 2) If liquid has been spilled or objects have fallen into the video product.
- 3) If the inner parts of the video product have been directly exposed to rain or water.
- 4) If the video product does not operate normally by following the operating instructions in this manual. Adjust only those controls that are covered by the instruction manual, as an improper adjustment of other controls may result in damage, and will often require extensive work by a qualified technician to restore the video product to its normal operation.

Safety Check

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine if the video product is in proper operating condition.



Introduction

List of Models

This hardware manual contains the following model:

B915	3MP Video Analytics Outdoor Speed Dome with D/N, Adaptive IR, Extreme WDR, SLLS, 36x Zoom Lens
B928	5MP Video Analytics Outdoor Speed Dome with D/N, Adaptive IR, Extreme WDR, SLLS, 36x Zoom lens
B945	2MP Video Analytics Outdoor Speed Dome with D/N, Adaptive IR, Extreme WDR, SLLS, 20x Zoom lens
B949	2MP Video Analytics Indoor Speed Dome with D/N, Extreme WDR, ELLS, 30x Zoom lens
198	2MP Video Analytics Outdoor Speed Dome with D/N, Adaptive IR, Extreme WDR, SLLS, 33x Zoom lens
I915	2MP Video Analytics Outdoor Speed Dome with D/N, Adaptive IR, Extreme WDR, ELLS, 36x Zoom lens



Package Contents

Check if the following items come with the camera package. If any of them is missing, please contact your local sales agents or the <u>Customer Help Desk (CHD)</u>.

Camera	Power Cord	Power Adapter or PoE Injector *	Universal Converter
Cable Gland	Conduit Gland	Ferrite Core (x3)	Safety Strap
			0
DI/DO Terminal Blocks (x2)	Screws	Quick Installation Guide	Warranty Card
		QIG	Warranty Card

NOTE: The above pictures are for reference only; actual items may slightly vary.

* Depending on territory, the package may come with a power adapter or a PoE Injector.



Physical Description



No.	ltem	Description
1	Power LED	The Power LED lights red when the camera is powered up and
		goes off when the boot up process is complete.
2	Reset Button	The reset button is used to restore the factory default settings
		of the camera, including the administrator's password.
		To reset the camera, do the following: Press and hold the reset
		button for at least 5 seconds or until the Power LED turns on.
3	Memory Card Slot	Insert a memory card into this slot for local recording purposes.
		See Insert the Memory Card (Optional) on page 13 for more
		information.
		NOTE: Supports microSDHC cards only.
4	Audio Output	This jack connects to an audio output device, such as a
		speaker. See How to Connect Audio Devices on page 39.
5	Audio Input	This jack connects to an audio input device, such as a
		microphone with built-in amplifier. See How to Connect Audio
		Devices on page 39.
		NOTE: Make sure that the connected audio input device has a
		built-in amplifier. Connecting an ordinary microphone will dwarf
		sounds and will result in inaudible recording.



Hardware Manual

No.	ltem	Description
6	Digital Input / Output	The two (2) connectors connect to digital input or output
		devices, such as an alarm trigger, panic button, etc. Digital
		Input (DI) and Digital Output (DO) devices are used for
		applications like motion detection, event triggering, alarm
		notifications, etc. See How to Connect Digital Input / Digital
		Output Devices on page 34 for information.
7	AC 24V Power Input	This jack connects to the power adapter and power cord to
		supply power to the camera. See How to Use the Power
		Adapter on page 32.
8	Ethernet Port	The Ethernet port connects to a network using a standard
		Ethernet cable.



Mounting Options

There are several mounting options that you can use to install the camera. Below are some examples.

For more information about mounting solutions and accessories, please visit our website (<u>http://www.acti.com/mountingselector</u>).

Mount Types	Accessories			
Pendant Mount	Suitable when mounting the Outdoor PTZ on a hard ceiling.			
	PMAX-0102 (Straight Tube w/o Bracket)			
	PMAX-0103 (Straight Tube with Bracket)			
Straight Wall Mount	Suitable when mounting the Outdoor PTZ on a straight wall.			
	PMAX-0312 (PTZ Wall Mount)			
Vertical Pole	Suitable when mounting the Outdoor PTZ on a vertical pole.			
Mount	PMAX-0312		PMAX-0	503
		+		



Horizontal Pole Mount	Suitable when mounting the Outdoor PTZ on a horizontal pole.		
	PMAX-0102		PMAX-0503
		+	
Corner Mount	Suitable when mounting the Outdoor PTZ on a corner wall.		
	PMAX-0312		PMAX-0402
		+	

Other Mounting Accessories

Accessories	
PMAX-0702 (Junction Box)	PMAX-0104 (Extension Tubes)



Before Installation

This section describes the procedures that can be done to prepare the camera prior to installation. Do the following according to application needs.

Insert the Memory Card (Optional)

If a memory card will be used for local recording, do the following to insert the memory card.

Locate the memory card slot at the back of the lens module. The slot cover is marked with a triangle ►. Loosen the two (2) screws to open the cover.






2. Pull to detach the cover.





3. Insert the memory card with the metal contacts facing against the card logo . Push until the card clicks into place.

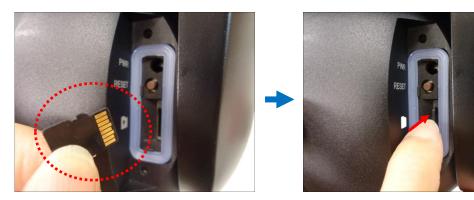

4. Make sure the surrounding rubber is in place then attach the cover.





5. Tighten the two (2) screws to secure the cover.





Attach the Safety Strap

To avoid dropping the camera during installation, it is recommended to use the bundled safety strap to attach the camera to the mounting accessory prior to continuing with installation.

1. Locate and remove the set screw on the top of the camera.



2. Insert the removed set screw to the smaller hole of the safety strap.



3. Attach the set screw back to the camera.



4. Attach the other end of the safety strap to the designated screw of the mounting accessory during installation (refer to the applicable installation guide for details).



Installation Procedures

Installation procedures vary depending on the desired mounting solution. Cables may be connected first before mounting the camera or vice versa.


Below are the basic installation procedures when mounting the camera with PMAX-0312 Wall Mount with access behind the wall. For detailed information and other mounting solutions, download the Installation Guide from the website (<u>http://www.acti.com/mountingselector</u>).

NOTE: The following pictures are for reference only, actual camera and cable connections may slightly vary.

Mount the Camera

1. Install the Mounting Solution

Check the Installation Guide for detailed information. The safety strap may be attached during this process. Below is an example of attaching the safety strap using the PMAX-0312 wall mount.

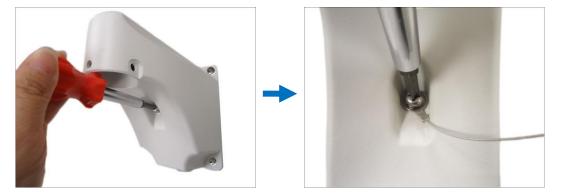

2. Insert the Cable

Insert the camera cables through the mounting accessory (e.g. PTZ wall mount, straight tube, extension tube, etc.) and through a hole in the wall or ceiling.








CAUTION: The camera itself is waterproof, however take note that the cable connections are not. If the cable connections will be exposed outdoors, make sure to shield or adapt proper waterproofing methods. See *Waterproof the Cable Connections* on page 20.

DISCLAIMER: ACTi will not be responsible for camera damage caused by water entering the cable connections.

3. Mount the camera

1. Align the gap on the camera to the tab inside the mounting solution and insert the camera through the mounting tube.

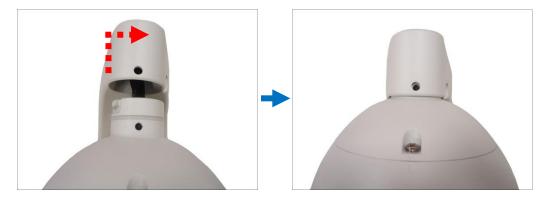

2. Attach the screws included in the camera package to secure the camera.



4. Attach the Ferrite Cores and Connect the Cables

Perform behind the wall cable connections as needed. See the succeeding chapters for detailed information.



Attach the Ferrite Cores

The bundled ferrite cores should be attached to the camera cable to comply with EMC standards either before or after mounting the camera depending on how the camera will be mounted and the type of accessories that will be used (check the mounting accessory itself to validate if the ferrite core will pass through its hole before mounting). The ferrite cores are used to suppress electromagnetic interference (EMI) from electronic devices, including this camera, which may affect one another.

1. Unsnap and open the bundled ferrite core.



2. Insert the Ethernet and AC24V power cables in the ferrite core as close to the camera as possible.



3. Snap the ferrite core to secure it on the cable.





4. Repeat steps 1 to 3 to attach the other two (2) bundled ferrite cores on the cable close to each other.





Waterproof the Cable Connections

The camera itself is waterproof, however take note that the cable connections are not.

If the camera is mounted directly on the ceiling/wall where the cables pass through the ceiling/wall, then your installation is complete and you do not need to waterproof the cable connections.

However, if the camera is mounted where the cables may be exposed then it is recommended to waterproof the cable connections or use a junction box.

The camera comes with a **Cable Gland** and **Conduit Gland**. It is recommended to use one of these glands when a high PoE injector will be used with the camera. However, if the bundled power adapter will be used or digital input/output devices will be connected (see *Other Cable* Connections on page 32), it is recommended to house the cables inside the junction box (see *Using the Junction Box* on page 29).





Using the Cable Gland

1. Prepare the following items:

Cable Gland	Exterior-Grade Ethernet Cable	Waterproof Tape
	NOTE: Not included in the camera package.	NOTE: Not included in the camera package.

2. Detach the cable gland as shown below.




3. Insert the clamping nut through the Ethernet cable.





4. Insert the Ethernet cable through the sealing rubber and claw.

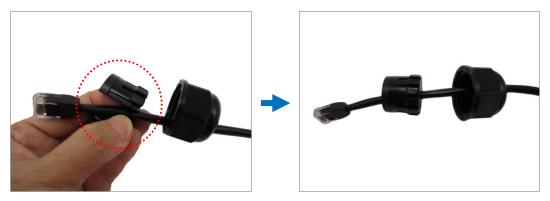

5. Ensure the rubber ring is attached on the gland body (smooth end).



NOTE: Make sure the rubber ring is completely aligned on the gap on the gland body.

6. Attach the gland body to the Ethernet port of the camera.



IMPORTANT!


Make sure the rubber ring is completely aligned and flat on the gland body to avoid possible water leakage.



7. Connect the Ethernet connector to the Ethernet port of the camera.



8. Insert the sealing rubber and claw into the cable gland body.

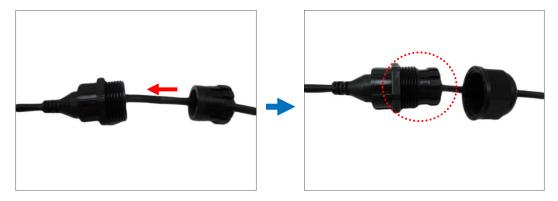

9. Attach the clamping nut to the cable gland body. Make sure the clamping nut is tightly secured and the rubber is squeezed in to avoid water leakage.







- 10. If connecting other devices, such as digital input/output, audio, power adapter, etc., connect the cables according to the instructions in:
 - a. To connect the power adapter, see *How to Use the Power Adapter* on page 32.
 - b. To connect digital input or output device, see *How to Connect Digital Input / Digital Output Devices* on page 34.
 - c. To connect audio input or output device, see *How to Connect Audio Devices* on page 39.
- 11. Make sure to apply proper waterproofing methods to cable connections or arrange all unused cables and wrap them with the waterproof tape.

NOTE:

- Different applications and installation environments require different types of waterproofing methods which may not be covered in this manual. Check your installation environment and adapt a suitable waterproofing method.
- If the camera is installed outdoors and the bundled power adapter or other device is used, be sure to protect it from different environmental factors. It is recommended to place the power adapter indoors or housed it inside a junction box (see *Using the Junction Box* on page 29).

DISCLAIMER: ACTi will not be responsible for camera damage caused by improper use of the power adapter.



Using the Conduit Gland

1. Prepare the following items:

Conduit Gland	1/2" Flexible Conduit	Waterproof Tape
	NOTE: Not included in the camera package.	NOTE: Not included in the camera package.

2. Detach the conduit gland as shown below.




3. Insert the Ethernet cable through the flexible conduit. Then insert the clamping nut through the flexible conduit.





4. Insert the sealing rubber and attach it at the end of the flexible conduit.

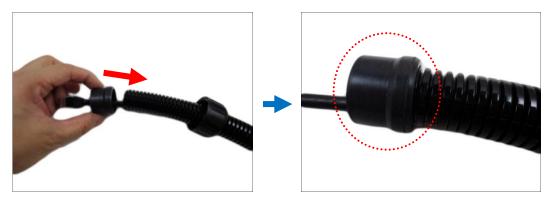

5. Ensure the rubber ring is attached on the gland body (smooth end).



NOTE: Make sure the rubber ring is completely aligned on the gap on the gland body.

6. Attach the gland body to the Ethernet port of the camera.



IMPORTANT!


Make sure the rubber ring is completely aligned and flat on the gland body to avoid possible water leakage.



7. Connect the Ethernet connector to the Ethernet port of the camera.



8. Insert the sealing rubber into the conduit gland body.

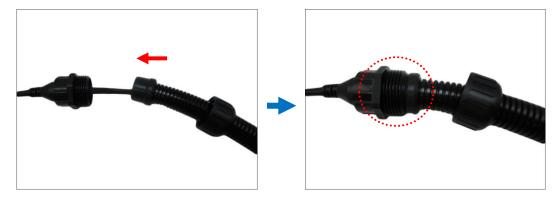

9. Attach the clamping nut to the conduit gland body. Make sure the clamping nut is tightly secured to avoid water leakage.





- 10. If connecting other devices, such as digital input/output, audio, power adapter, etc., connect the cables according to the instructions in:
 - a. To connect the power adapter, see *How to Use the Power Adapter* on page 32.
 - b. To connect digital input or output device, see *How to Connect Digital Input / Digital Output Devices* on page 34.
 - c. To connect audio input or output device, see *How to Connect Audio Devices* on page 39.
- 11. Make sure to apply proper waterproofing methods to cable connections or arrange all unused cables and wrap them with the waterproof tape.

NOTE:

- Different applications and installation environments require different types of waterproofing methods which may not be covered in this manual. Check your installation environment and adapt a suitable waterproofing method.
- If the camera is installed outdoors and the bundled power adapter is used, be sure to
 protect it from different environmental factors. It is recommended to place the power
 adapter indoors or housed it inside a junction box (see Using the Junction Box on
 page 29).

DISCLAIMER: ACTi will not be responsible for camera damage caused by improper use of the power adapter.



Using the Junction Box

When the camera is mounted with the cable connections exposed, use the **PMAX-0702 Junction Box** (not included in the package) to protect the cable connections.

- 1. Place all the cables and the power adapter (if using one) inside the junction box.
- From the network/power source side, insert the cables, such as the Ethernet cable, through a 1/2" flexible conduit (the flex conduit is not included in the package) and through one of the holes of the junction box. Then connect the necessary cables. (Refer to the Installation Guide in using PMAX-0702 for detailed instructions).





3. Secure the flex conduit fitting onto the junction box hole.



NOTE: The PMAX-0702 Junction Box is not a bundled accessory. Contact your sales agents to purchase.




Below is an example of the installing the camera using the Heavy Duty Wall Mount and Junction Box.





Connect to Network

Connect the other end of the network cable to a switch or injector. Then, connect the switch or injector to a network, PC, and a power source. See Power-over-Ethernet (PoE) connection example below.

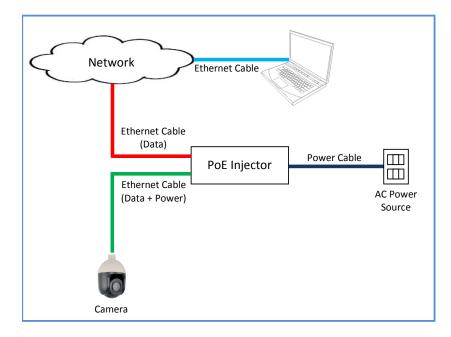

NOTE: Use only the supplied power adapter and power cord that came with the camera or the optional High PoE Injector available for purchase. Using other accessories not approved by the manufacturer may cause damage to the equipment.

See *Accessing the Camera* on page 40 for more information on how to access the Live View of the camera.



Other Cable Connections


This section describes the procedures in preparing and connecting the bundled power adapter, optional Digital Input and Digital Output (DI/DO), such as alarms, sensors, etc., and Audio Input and Output devices. The use of these devices, however, is optional.

How to Use the Power Adapter

- 1. Slide the voltage switch to set the adapter voltage according to the voltage standard in your location.
- 2. Connect the power cord to the power adapter.



3. Connect the power connector of the camera to the cable connector of the adapter.

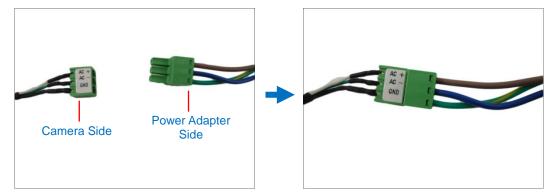



How to Replace the Fuse


With proper use, there is no need to replace the fuse that came with the power adapter. However in case of accidentally switching the wrong power voltage, a replacement fuse is already included. Follow the procedures below to replace the fuse:

1. Use a flat-head object, such as a screwdriver, to pull and remove the fuse holder from the power adapter.





2. Remove the main fuse from its bay and pull to retrieve the replacement fuse.

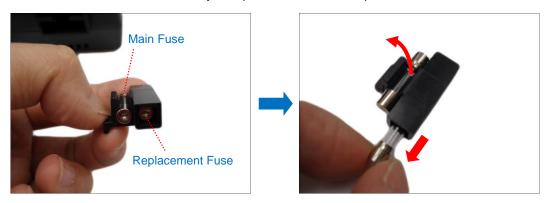


3. Push the replacement fuse onto its bay.





4. Insert the fuse holder back into the power adapter and push until it locks into place.

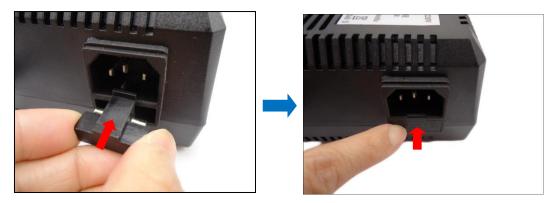

How to Connect Digital Input / Digital Output Devices

Depending on your surveillance needs, you may need to connect digital input or output devices to your camera to trigger events or notifications.

Digital Input (DI) devices can be used to notify the camera about an activity in the camera site. DI can be triggers of events. For example, you can connect a "panic button" to the camera; as such when the panic button is pressed, the alarm signal will be sent through the camera. Other common DI device applications are emergency button, smoke detector, passive infrared sensor, etc.

Digital Output (DO) devices are external devices that are activated by the camera upon an event inside the camera. For example, you can connect an "alarm horn" to the camera; as such when an event occurs inside the camera (e.g. detected intruder), the alarm horn will sound. Other common DO device applications are motion-triggered lights, electric fence, magnetic door locks, etc.



Connecting DI/DO Devices

The camera comes with two (2) terminal blocks to connect DI/DO devices.



Map the pins according to one of the pin combinations on the table below. Loosen the screw and insert the wire through the pin slot on the terminal block, then tighten the screw to secure the wire. Connect the terminal block (2) to the corresponding cable connector(s).

Device Cable	Terminal Block Pin	Mapping Instructions
Ground Pin	GND	To connect digital input devices, map the DI device wires to the following:
Digital Input 1	DI1	DI1 and GND
Digital Input 2	DI2	• DI2 and GND
Digital Input 3	DI3	DI3 and GND
Digital Input 4	DI4	DI4 and GND

NOTE: In case of connecting more than one DI device, the **GND** pin can be commonly shared by all four (4) DI devices.

Device Cable	Terminal Block Pin	Mapping Instructions
DC 12V	12V	To connect digital output devices, map the DO device wires to the following:
Digital Output 1	DO1	• DO1 and 12V
Digital Output 2	DO2	• DO2 and 12V

NOTE: In case of connecting two (2) DO devices, the **12V** pin can be commonly shared by the two (2) DO devices.



After mapping the wires to the terminal block, connect the terminal block to the DI/DO connectors of the camera and be sure to protect the cable connection inside a junction box or wrap the connection using a waterproof tape (can be purchased in hardware stores) if cable connection will be exposed after installation. Sample below:



Typical Connection


The table below shows the DI/DO connection specifications:

Device				
	Connection design		TTL - compatible logic levels	
	Voltage	To trigger (low)	Logic level 0: 0V ~ 0.4V	
DI		Normal (high)	Logic level 1: 3.1V ~ 30V	
	Current		10mA ~ 100mA	
DO	Connection design		Transistor (Open Collector)	
	Voltage & Current		< 24V DC, < 50mA	


Based on these specifications, if the DI device has a voltage of $0V \sim 30V$ or the DO device has a voltage of < 24V (< 50mA), then the camera can supply internal power to these devices and there is no need to connect the DI/DO device to an external power source.



In this case, use the GND and DI1 pins to connect a DI device and use the 12V and the DO1 pins to connect a DO device. See wiring scheme below:

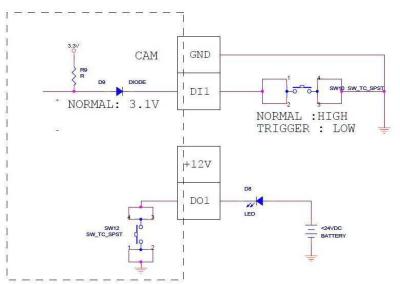


Consequently, to connect a second DI or DO device, use the GND and DI2 pins to connect the second DI device, and the 12V and DO2 pins for the second DO device.

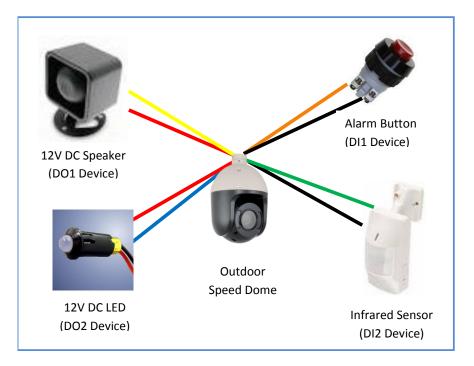




High Voltage DO Device Connection

Even though the camera provides 12V power, this may not be enough for some high voltage DO devices, such as a ceiling light or a motor that opens or closes a gate. In this case, there is a need to connect an external relay. See wiring scheme below:

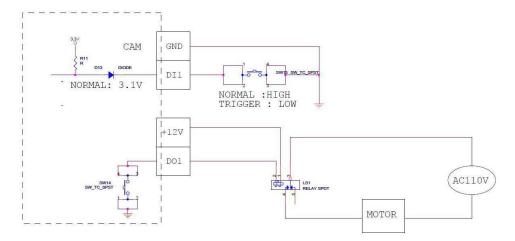

Note that when choosing an appropriate relay, please refer to its specifications and make sure they match the above design. The triggering circuit voltage has to be around 12V DC and the switch-controlled circuit voltage has to match the external power supply (e.g. 110V AC or 220V AC).

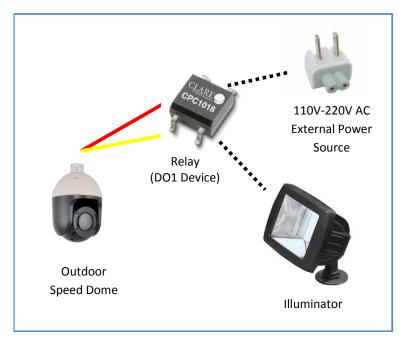

The illustration below is a graphic example of connecting a relay to a high voltage DO device.

NOTE: For more information on DI/DO connections, please refer to the article *All About Digital Input and Digital Output* downloadable from http://Download.acti.com?id=516.




How to Connect Audio Devices

The camera comes with audio input / output jacks to connect a microphone or speaker to the camera. The audio jacks are covered with a rubber protection.

If using an audio input device, such as a microphone with a built-in amplifier, connect the device to the **Audio Input** jack (RED) of the camera. If using an audio output device, such as a speaker, connect the device to the **Audio Output** jack (GREEN) jack of the camera.

If the camera is installed outdoors, be sure to wrap the audio connectors with Waterproof tape (can be purchased in hardware stores).


DISCLAIMER: ACTi will not be responsible for damaged cameras due to water leakage caused by improper waterproofing of cables.

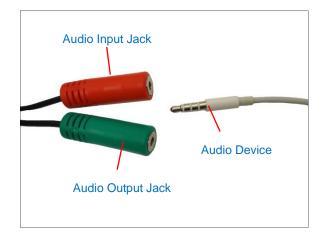

NOTE 1: Make sure that the connected audio input device has a built-in amplifier. Connecting an ordinary microphone will dwarf sounds and will result in inaudible recording.

NOTE 2: If the audio connectors will not be used, leave the rubber caps on to avoid water and dust from entering the connectors.

Be sure to protect the audio cable connections inside a junction box or wrap with waterproof tape (can be purchased in hardware stores).

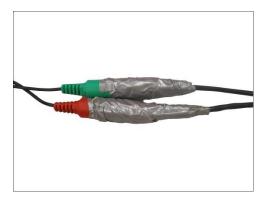



Accessing the Camera

Configure the IP Addresses


In order to be able to communicate with the camera from your PC, both the camera and the PC have to be within the same network segment. In most cases, it means that they both should have very similar IP addresses, where only the last number of the IP address is different from each other. There are 2 different approaches to IP Address management in Local Area Networks – by DHCP Server or Manually.

Using DHCP server to assign IP addresses

If you have connected the computer and the camera into the network that has a DHCP server running, then you do not need to configure the IP addresses at all – both the camera and the PC would request a unique IP address from the DHCP server automatically. In such case, the camera will immediately be ready for the access from the PC. The user, however, might not know the IP address of the camera yet. It is necessary to know the IP address of the camera in order to access it using a Web browser.

The quickest way to discover the cameras in the network is to use the simplest network search, built in the Windows system – just by pressing the "Network" icon, all the cameras of the local area network will be discovered by Windows, thanks to the UPnP function support of our cameras.

In the example below, the camera model that has just been connected to the network is successfully found.

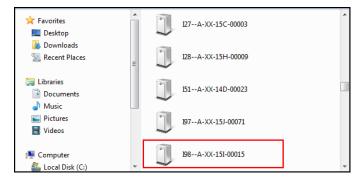

Double-click the mouse on the camera model name, the default browser of the PC is automatically launched and the IP address of the target camera is already filled in the address bar of the browser.



If you work with our cameras regularly, then there is even a better way to discover the cameras in the network – by using IP Utility. The IP Utility is a light software tool that can not only discover the cameras, but also list lots of valuable information, such as IP and MAC addresses, serial numbers, firmware versions, etc, and allows quick configuration of multiple devices at the same time.

Search and downloand IP Utility for free from http://www.acti.com/DownloadCenter.

When you launch IP Utility, the list of connected cameras in the network will be shown. See sample illustration below:

Y	Refresh	Device Settings	hange Network Address	Firmware Upgrade	Config. Backup Confi	g. Restore Reset	Save&Reboo
l: 68	Account	admin Password	•••••				
	IP Address	Serial No.	MAC Address	FW Version	Model	Multicast IP	
	172.16.26.15	E913-A-XX-14K-00004	00:0F:7C:0E:FF:A1	A1D-500-V6.09.45-AC	Megapixel IP Dome	228.5.6.1	
	172.16.26.118	E93A-XX-13J-00294	00:0F:7C:0C:23:72	A1D-500-V6.09.45-AC	Megapixel IP Dome	228.5.6.1	
	172.16.26.231	E93A-XX-14I-00076	00:0F:7C:0E:B5:E5	A1D-500-V6.08.30-AC	Megapixel IP Dome	228.5.6.1	
	172.16.26.92	E933-A-01-12A-99999	00:0F:7C:7C:8A:E8	A1D-501-V7.01.00-AC	Megapixel IP Dome	228.5.6.1	
	172.16.26.170	E933MA-01-12A-99999	00:0F:7C:51:4A:3D	A1D-501-V7.01.00-AC	Megapixel IP Dome	228.5.6.1	
	172.16.26.164	ENR-190-A-15A-00003	00:0F:7C:0F:5D:D1	ENR-020-V4.06.02-AC	16 CH Embedded NVR ENR-190		
	172.16.26.116	I27A-XX-15C-00003	00:0F:7C:0F:9D:CA	A1D-500-V6.09.36-AC	Megapixel IP Camera	228.5.6.1	
	172.16.26.39	I28A-XX-15H-00009	00:0F:7C:10:79:E8	A1D-501-V7.00.44-AC	Megapixel IP Camera	228.5.6.1	
	172.16.26.135	I51A-XX-14D-00023	00:0F:7C:0D:49:1C	A1D-500-V6.09.45-AC	Hemispheric Camera	228.5.6.1	
	172.16.26.153	196A-XX-13J-00003	00:0F:7C:0B:F8:EB	A1D-500-V6.09.45-AC	Megapixel IP Speed Dome	228.5.6.1	
	172.16.26.14	197A-XX-15J-00071	00:0F:7C:10:D0:F8	A1D-501-V7.00.44-AC	Megapixel IP Speed Dome	228.5.6.1	
	172.16.26.18	198A-XX-15I-00015	00:0F:7C:10:AF:90	A1D-501-V7.01.00-AC	Megapixel IP Speed Dome	228.5.6.1	
	172.16.26.51	KCM7911-12H-X-00466	00:0F:7C:09:16:57	A1D-311-V5.12.12-AC	Hemispheric Camera	228.5.6.1	
	172.16.26.152	Q11A-XX-15J-00004	00:0F:7C:10:D1:00	A1D-500-V6.09.45-AC	Megapixel Covert Camera	228.5.6.1	
	172.16.26.79	Q11A-XX-15J-00005	00:0F:7C:10:D1:01	A1D-500-V6.09.45-AC	Megapixel Covert Camera	228.5.6.1	

The camera model name is shown on the list. Click on the IP address to automatically launch the default browser of the PC with the IP address of the target camera already filled in the address bar of the browser.



Use the default IP address of the camera

If there is no DHCP server in the given network, the user may have to manually assign the IP addresses to both the PC and the camera to make sure they are in the same network segment.

When the camera is plugged into the network and it does not detect any DHCP services, it will automatically assign itself a default IP:

192.168.0.100

Whereas the default port number would be **80**. In order to access that camera, the IP address of the PC has to be configured to match the network segment of the camera.

Manually adjust the IP address of the PC

In the following example, based on Windows 7, we will configure the IP address to **192.168.0.99** and set Subnet Mask to **255.255.255.0** by using the steps below:

ontrol Panel Home			0		
ontroi Panel Home	View your basic network infor	Construction and a state state of the state		Organize 🔻	Disable this network device
hange adapter settings	🧶 —— I	🍺 —— 🍚 Se	e full map		Area Connection
hange advanced sharing ettings	SISO_NP_PC1 No (This computer)	etwork Internet		Netw Intel(I	R) 8. 🚱 Disable
	View your active networks	Connect or o	lisconnect		Status Diagnose
	Work network	Access type: Internet Connections: 🌐 Local Area Conn	nection		Bridge Connections
	Change your networking settings		E		Create Shortcut
	Set up a new connection or n	etwork			1 Delete
	Set up a wireless, broadband, access point.	dial-up, ad hoc, or VPN connection; or set up	a router or		🚱 Rename
	Connect to a network				Properties
ee also	Connect or reconnect to a win	reless, wired, dial-up, or VPN network connecti	ion.		
omeGroup	Choose homegroup and shar	ing options			
ternet Options	Access files and printers locat settings.	ed on other network computers, or change sh	aring		
findows Firewall	sectings.				
a Connection Prop	erties X	tocol Version 4 (TCP/	IPv4) Properties	8	×
nect using:	erues	And the second se	automatically if your	network supports	x
nect using: Intel(R) 82567LM-3 Gigat	bit Network Connection	4 You can get IP settings assigned this capability. Otherwise, you n	automatically if your eed to ask your netw	network supports	
nect using: intel(R) 82567LM-3 Gigab	bit Network Connection Configure ing items:	You can get IP settings assigned this capability. Otherwise, you n for the appropriate IP settings.	l automatically if your eed to ask your netw natically	network supports	
nect using: Intel(R) 82567LM-3 Gigat	bit Network Connection Configure ing items: tworks	You can get IP settings assigned this capability. Otherwise, you n for the appropriate IP settings.	l automatically if your eed to ask your netw natically	network supports ork administrator	
nect using: Intel(R) 82567LM-3 Gigat connection uses the follow Client for Microsoft. Net UnitualBox Bridged Net QoS Packet Schedule	bit Network Connection Configure ing items: tworks working Driver r	4 You can get IP settings assigned this capability. Otherwise, you n for the appropriate IP settings. Obtain an IP address auton Obtain an IP address auton	l automatically if your eed to ask your netw natically st	network supports ork administrator	×
nect using: Intel(R) 82567LM-3 Gigat connection uses the follow Client for Microsoft Net Ques Packet Schedule File and Printer Sharing Intermet Protocol Versis	bit Network Connection Configure ing items: tworks working Driver r g for Microsoft Networks on 6 (TCP/IPv6)	4 You can get IP settings assigned this capability. Otherwise, you n for the appropriate IP settings. Obtain an IP address auton Use the following IP address IP address:	automatically if your eed to ask your netw natically s: 192 , 168 ,	network supports ork administrator	
anect using: Intel(R) 82567LM-3 Gigat connection uses the follow Client for Microsoft Net Client for Microsoft Net Client for Microsoft Net GoS Facket Schedule File and Printer Sharing File and Printer Sharing Internet Protocol Versis Client Layer Topology D	bit Network Connection Configure ing items: tworks working Driver g for Microsoft Networks on 6 (TCP/IPv6) on 4 (TCP/IPv6) Socvery Mpoper I/O Driver	4 You can get IP settings assigned this capability. Otherwise, you no for the appropriate IP settings. Obtain an IP address auton Obtain an IP address auton Obtain an IP address IP address: Subnet mask: Default gateway: Obtain DNS server address	automatically if your eed to ask your netw natically s: 192 , 168 , 255 , 255 , automatically	network supports ork administrator	
Intel(R) 82567LM-3 Gigat Intel(R) 82567LM-3 Gigat Connection uses the follow Internet Protocol Versis Link-Layer Topology D Link-Layer Topology D	bit Network Connection Configure ing items: tworks working Driver r g for Microsoft Networks on 6 (TCP/IPv6) Networks Mapper I/O Driver Iscovery Responder	4 You can get IP settings assigned this capability. Otherwise, you no for the appropriate IP settings. Obtain an IP address auton Obtain an IP address auton Obtain an IP address IP address: Subnet mask: Default gateway: Obtain DNS server address Obtain DNS server address Obtain DNS server address	automatically if your eed to ask your netw natically s: 192 , 168 , 255 , 255 , automatically er addresses:	network supports ork administrator	
Intel(R) 82567LM-3 Gigat Intel(R) 82567LM-3 Gigat Connection uses the follow Internet Protocol Versis Link-Layer Topology D Link-Layer Topology D	bit Network Connection Configure ing items: tworks working Driver r g for Microsoft Networks on 6 (TCP/IPv6) Networks Mapper I/O Driver Iscovery Responder	4 You can get IP settings assigned this capability. Otherwise, you no for the appropriate IP settings. Obtain an IP address auton Obtain an IP address auton Obtain an IP address IP address: Subnet mask: Default gateway: Obtain DNS server address Obtain DNS server address Obtain DNS server: Preferred DNS server:	automatically if your eed to ask your netw natically s: 192 , 168 , 255 , 255 , automatically	network supports ork administrator	
Intel(R) 82567LM-3 Gigat Intel(R) 82567LM-3 Gigat Client for Microsoft Net Client for Microsoft Net Client for Microsoft Net OtrualBox Bridged Net Gas Packet Schedule File and Printer Shaing Intermet Protocol Versis Intermet Protocol Versis	bit Network Connection Configure ing items: tworks working Driver r for Microsoft Networks on 6 (TCP/IPv6) m 4 (TCP/IPv4) iscovery Responder ministal Properties M/Internet Protocol. The default hat provides communication	4 You can get IP settings assigned this capability. Otherwise, you no for the appropriate IP settings. Obtain an IP address auton Obtain an IP address auton Obtain an IP address IP address: Subnet mask: Default gateway: Obtain DNS server address Obtain DNS server address Obtain DNS server address	automatically if your eed to ask your netw natically is: 192 . 168 . 255 . 255 . automatically er addresses:	network supports ork administrator	



Manually adjust the IP addresses of multiple cameras

If there are more than one camera to be used in the same local area network and there is no DHCP server to assign unique IP addresses to each of them, all of the cameras would then have the initial IP address of **192.168.0.100**, which is not a proper situation for network devices – all the IP addresses have to be different from each other. The easiest way to assign cameras the IP addresses is by using **IP Utility**:

·							_ 0
			IP Address / NetMask 1	72.16.26.192 / 255.255.255.0	 Basic S 	Search 🔻	
	Refres	bh Device Setting	s Change Network Ac	Idress Firmware Upgrade	Config. Ba	ckup Config. Restore	Reset Save&Reboot
otal: 56	Account	admin P	assword 123456	Http Port 80			
2	IP Address	MAC Address	FW Version	Model	Serial No.	Multicast IP	Status
	172.16.26.2	00:0F:7C:07:DE:65	A1D-311-V5.07.05-AC	Hemispheric Camera	KCM3911	228.5.6.1	
	172.16.26.4	00:0F:7C:08:17:C2			TCM1111	228.5.6.1	
	172.16.26.6	00:0 Change N	otwork Addross		KCM7311	228.5.6.1	
	172.16.26.7	00:0	etwork Address		TCM6630	228.5.6.1	
	172.16.26.10	00:0 Opynamic IP	Address		TCM4201	228.5.6.1	
	172.16.26.11	00:0			KCM3911	228.5.6.1	
	172.16.26.13	00:0 Static IP Ad	Idress		KCM5111	228.5.6.1	
	172.16.26.40	00:0			KCM5211	228.5.6.1	
	172.16.26.41	00:0 Starting IP	Address 192 . 168 . (0.101	KCM5311	228.5.6.1	
	172.16.26.50	00:0	Netmask 255 • 255 • 25	55 . 0	KCM5111	228.5.6.1	
	172.16.26.52	00:0	Gateway 192 • 168 • (254	KCM5311	228.5.6.1	
	172.16.26.53	00:0	Gateway 192 • 168 • 0	J • 234	TCM5311	228.5.6.1	
	172.16.26.54	00:0	<u> </u>		TCM5611	228.5.6.1	
	172.16.26.55	00:0	Apply		TCM5111	228.5.6.1	
	172.16.26.57	00:0F:7C:04:87:A7	A1D-310-V4.12.09-AC	Video Server	TCD2100	228.5.6.1	
	172.16.26.61	00:0F:7C:04:32:E3	A1D-310-V4.12.09-AC	Megapixel IP Camera	TCM1231	228.5.6.1	

With the procedure shown above, all the cameras will have unique IP addresses, starting from 192.168.0.101. In case there are 20 cameras selected, the last one of the cameras would have the IP 192.168.0.120.

Later, by pressing the "Refresh" button of the IP Utility, you will be able to see the list of cameras with their new IP addresses.



Please note that it is also possible to change the IP addresses manually by using the Web browser. In such case, please plug in only one camera at a time, and change its IP address by using the Web browser before plugging in the next one. This way, the Web browser will not be confused about two devices having the same IP address at the same time.



Access the Camera

Now that the camera and the PC both have their unique IP addresses and are under the same network segment, you can use **Microsoft Internet Explorer** on the PC to access the camera.

You can use Microsoft Internet Explorer to access the camera.

Functionality	Internet Explorer
Live Video	Yes
Live Video Area Resizable	Yes
PTZ Control	Yes
Capture the snapshot	Yes
Video overlay based configuration (Motion Detection regions, Privacy Mask regions)	Yes
All the other configurations	Yes

When using Internet Explorer browser, the ActiveX control for video stream management will be downloaded from the camera directly – the user just has to accept the use of such control when prompted so. No other third party utilities are required to be installed in such case.

The following examples in this manual are based on Internet Explorer browser in order to cover all functions of the camera.

Assuming that the camera's IP address is **192.168.0.100**, you can access it by opening the Web browser and typing the following address into Web browser's address bar:

http://192.168.0.100

Upon successful connection to the camera, the user interface called **Web Configurator** would appear together with the login page. The HTTP port number was not added behind the IP address since the default HTTP port of the camera is 80, which can be omitted from the address for convenience.

Attp://192.168.0.100	> ≥ > <	×	
	Web Co	nfigurator	
Ĩ	I	ogin	
	Account		
	Password		
	Language	English 🔻	
	Login	Reset	

Before logging in, you need to know the factory default Account and Password of the camera.

Account: Admin

Password: 123456

For further operations, please refer to the **Firmware User's Manual**.



Copyright © 2015, ACTi Corporation All Rights Reserved 7F, No. 1, Alley 20, Lane 407, Sec. 2, Ti-Ding Blvd., Neihu District, Taipei, Taiwan 114, R.O.C. TEL : +886-2-2656-2588 FAX : +886-2-2656-2599 Email: <u>sales@acti.com</u>