



# User's Manual

2023/03 (v2.0)

## Dashcam DrivePro 250



# Table of Contents

- **1. Package Contents**
- **2. Getting Started**
  - **2-1 Overview**
  - **2-2 Inserting a microSD Memory Card**
  - **2-3 Mounting the Dashcam**
  - **2-4 Connecting to Power**
  - **2-5 Function Buttons**
  - **2-6 LED Indicator**
  - **2-7 Setting the Date and Time**
  - **2-8 Setting UTC Timezone**
- **3. Recording Videos**
  - **3-1 Recording Screen**
  - **3-2 Emergency Recording**
  - **3-3 Parking Mode Recording**
- **4. Browsing Photos and Playing Videos**
  - **4-1 Playing Videos / Browsing Photos**
  - **4-2 Deleting Videos**
  - **4-3 Protecting Videos**
- **5. Settings**
  - **5-1 Menu Options**
  - **5-2 Firmware Upgrade**
- **6. Using the DrivePro App**
  - **6-1 Downloading and Installing the DrivePro App**
  - **6-2 Connecting to the DrivePro**
- **7. DrivePro Toolbox Software**
- **8. Transferring Files to a Computer**
- **9. Troubleshooting**
- **10. Safety Cautions**
- **11. Specifications**
- **12. EU Compliance Statement**
- **13. Recycling and Environmental Protection**
- **14. Federal Communications Commission (FCC) Statement**
- **15. Warranty Policy**
- **16. GNU General Public License (GPL) Disclosure**
- **17. End-User License Agreement (EULA)**

- **18. Eurasian Conformity Mark (EAC)**

# 1. Package Contents

The DrivePro dashcam package includes the following items:

**DrivePro Dashcam**



**Suction Mount**




**microSD Memory Card**



**Car Lighter Adapter**




**Quick Start Guide**

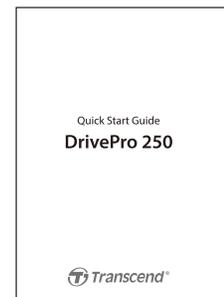

# 2. Getting Started

## 2-1 Overview

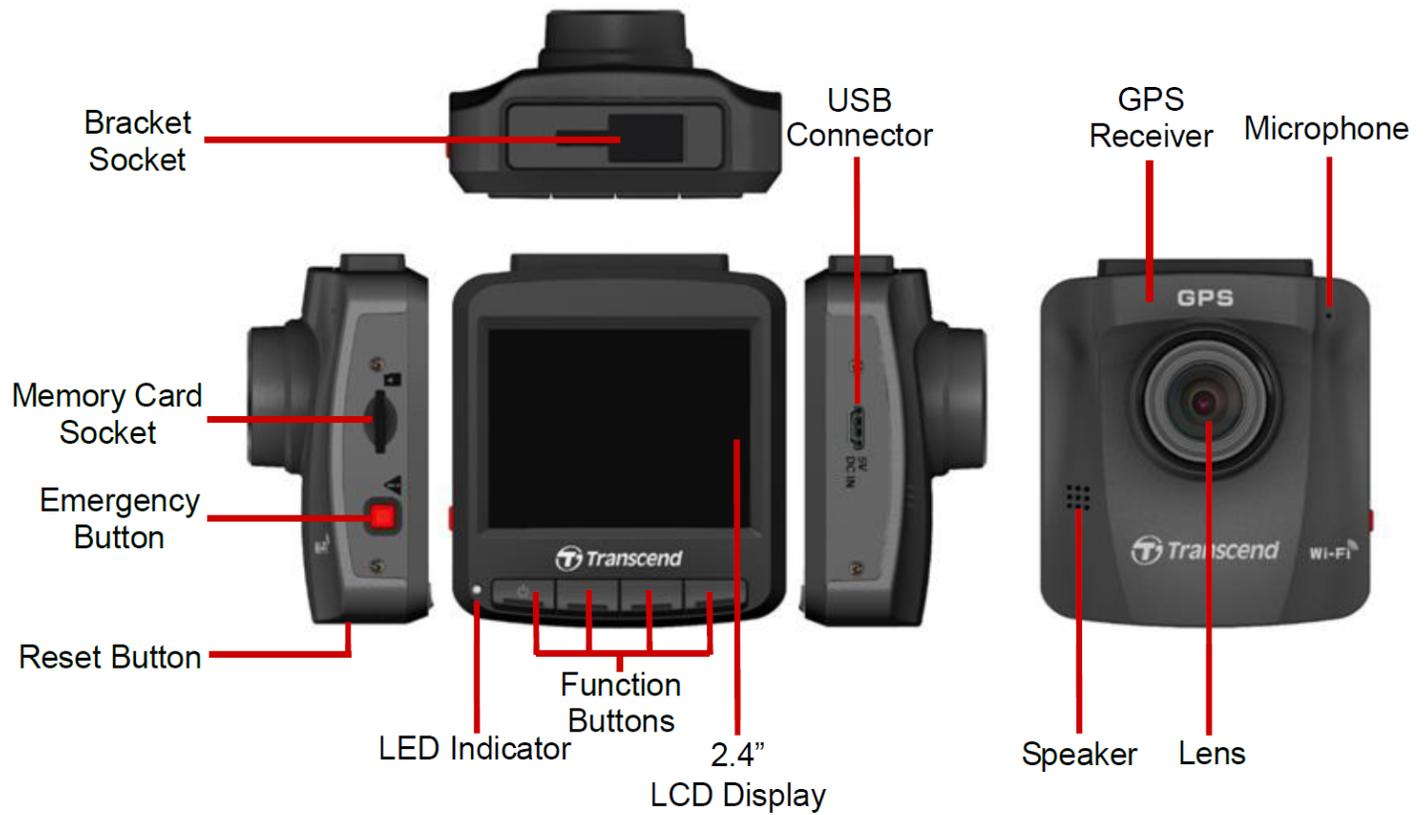

## 2-2 Inserting a microSD Memory Card

Before you can start recording, you need to insert a microSD memory card into the DrivePro. Please use a microSD memory card with 32 GB, 64 GB, 128 GB, or 256 GB capacity (Class 10 or above).

1. Insert a microSD memory card into the card slot of the DrivePro.



### "WARNING"

1. Always format new memory cards through DrivePro before using them for the first time. To format a new memory card, press the Settings button during recording, and select **Format Card**.
2. **Formatting will erase all data on the memory card.**
3. DrivePro 250 can only support the FAT32 file system, not exFAT/NTFS.

2. To remove, push to eject the memory card out of the slot.

### "WARNING"

Do not remove the memory card during a shutdown to avoid damages to the memory card and loss of recorded videos.

- The following table shows the approximate recording time according to card capacity (for reference only):

Frame Rate	Card Capacity			
	32 GB	64 GB	128 GB	256 GB
2K QHD 1440P 60FPS	2 hr	4.5 hr	9 hr	18 hr
2K QHD 1440P 30FPS	4 hr	9 hr	18 hr	36 hr
Full HD 1080P 60FPS	2.5 hr	5 hr	10.5 hr	22 hr
Full HD 1080P 30FPS	3.5 hr	7 hr	14 hr	32 hr
HD 720P 60FPS	5 hr	10 hr	20.5 hr	45 hr
HD 720P 30FPS	7 hr	13.5 hr	28.5 hr	61.5 hr

## 2-3 Mounting the Dashcam

1. Insert the mount bracket into the top of the dashcam, and slide sideways until you hear a click.



2. Thoroughly clean the area of the windshield you wish to mount the dashcam. If possible, mount it in the middle of the windshield and close to the height of the rear-view mirror for the best field of view.
3. Peel off the protective film from the mount bracket's foam sticker, and firmly attach the dashcam to the windshield.
4. Turn the adjustment knob anticlockwise to loosen, and then adjust the dashcam's position.



5. After the dashcam is in the best position, turn the adjustment knob clockwise to make sure that it is securely locked in place.



## 2-4 Connecting to Power

1. Connect one end of the car lighter adapter to the DrivePro's micro USB port.



2. Connect the other end of the adapter to your car power outlet.



3. After the car engine is switched on, the dashcam will automatically turn on and start recording.

4. After the car engine is switched off, the dashcam will automatically save the current recording and power it off.



#### **"Note"**

1. Insert a microSD memory card into the DrivePro before connecting it to your car's power outlet.
2. Car power outlets of some types of vehicles will still supply power after the car engine is turned off. If your car is of this type, please unplug your dashcam from the power outlet to avoid unnecessary power consumption and unexpected issues.

## 2-5 Function Buttons



Mode	A	B	C	D
Video Recording	Power/WiFi	Browse Files	Settings	Take Photos
Browse/Settings	Back	Up	Down	OK
Video Playback	Back	Play/Pause	Protected/Unprotected	Delete
View Photos	Back	Up	Down	Delete

1. Press and hold the button for 3 seconds to manually turn on/off the DrivePro in any mode.
2. Long press the button to quickly turn on/off the microphone.
3. Long press the button to quickly enter the Time-Lapse Video menu.


## 2-6 LED Indicator

LED Status	Definition
Solid Red	Standby
Flashing Red	Recording
Flashing Blue	WiFi On and Recording

## 2-7 Setting the Date and Time

Set the date and time first to ensure the recording time is right.

1. During video recording, press the Settings button .
2. Use ▲/▼ to select **Date/Time**, and press “OK.”

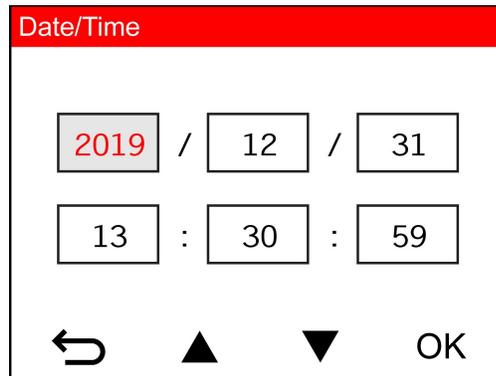

Date/Time

2019 / 12 / 31

13 : 30 : 59


← ▲ ▼ OK

3. Use ▲/▼ to adjust values, and press “OK” to move to the next block.
4. Repeat step 3 above until the date and time settings are complete.

## 2-8 Setting UTC Timezone

To ensure the accuracy of GPS data, please set the UTC time after setting the date and time:

1. During video recording, press the Settings button .
2. Use ▲/▼ to select **UTC**, and press “OK.”

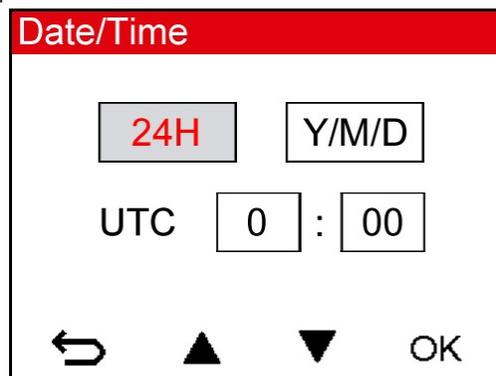

Date/Time

24H Y/M/D

UTC 0 : 00

← ▲ ▼ OK

3. Use ▲/▼ to adjust values, and press “OK.”

# 3. Recording Videos

## 3-1 Recording Screen



1. Recording status indicator
2. Video length
3. Video resolution / Frame rate
4. WiFi connection indicator
5. GPS connection indicator
6. Voice record status
7. Battery status
8. Date / Time

After the car engine is switched on, the DrivePro will automatically turn on and start recording.

By default, one video file is saved for every minute of recording. To adjust the recording length, please go to the Settings menu.



After the car engine is switched off, the DrivePro will automatically save the current recording and power it off.

## 3-2 Emergency Recording

30% of the storage space will be saved for emergency video files. Video files recorded in Emergency Recording mode are protected from being overwritten.



### Manual Emergency Recording:

During video recording, press the emergency button on the left-hand side of the DrivePro to activate Emergency Recording mode. The emergency icon will appear on the screen when activated.



### G-Sensor Emergency Recording:

During video recording, the DrivePro automatically activates Emergency Recording mode when detecting a collision or hit.

- If the G-Sensor sensitivity is set to “High,” even minor shocks activate Emergency Recording mode.
- If the G-Sensor sensitivity is set to “Low,” only significant shocks activate Emergency Recording mode.

G-Sensor sensitivity can be adjusted in the Settings menu.



### "Note"

Loop recording is enabled by default. The earliest emergency files will be overwritten by the latest emergency files recorded.

## 3-3 Parking Mode Recording

After the car engine is switched off, the DrivePro can automatically enter Parking mode and record footage when collision or motion is detected. Parking mode is disabled by default and can be enabled in  Settings menu.



### "Note"

After switching off the car engine, enabling Parking mode may drain the DrivePro's built-in battery.

During Parking mode, the LCD display will turn off and the LED indicator will remain solid red on standby. If the DrivePro detects a collision or motion of the vehicle, it will record footage for about 15 seconds, and the display will turn on while the LED flashes red. If no more motion is detected within approximately 15 seconds, the display will turn off again. When the engine is switched on (and the device is connected to power), the DrivePro will resume Normal Recording mode.

Transcend's car lighter adapter does not supply power after the engine is switched off. If long-term recording in Parking mode is required, please use an external power supply. Enter the Parking mode manually by long-pressing the  button during video recording. To power off the DrivePro, long-press the  button again.

## Low Battery

Please connect the DrivePro to the power supply immediately after the Low Battery warning is displayed onscreen to avoid any errors occurring with the system time. Please avoid using the built-in battery to record videos directly.



# 4. Browsing Photos and Playing Videos

## 4-1 Playing Videos / Browsing Photos

1. During video recording, press the Browse button .

2. Use  /  to select either **Normal**, **Emergency** or **Snapshot**, and press “OK.”



3. Use  /  to select the desired video file, and press “OK.”



4. Press  to pause playback. Press  again to resume playback.



5. Press  to return to the video file list.


## 4-2 Deleting Videos

1. During playback of a video file, press . The message “Delete?” will pop up.
2. Use / to select “Yes,” and press “OK” to delete the file.



## 4-3 Protecting Videos

1. During playback of a normal video file, press . The message “Lock?” will pop up.
2. Use / to select “Yes,” and press “OK” to protect the file.

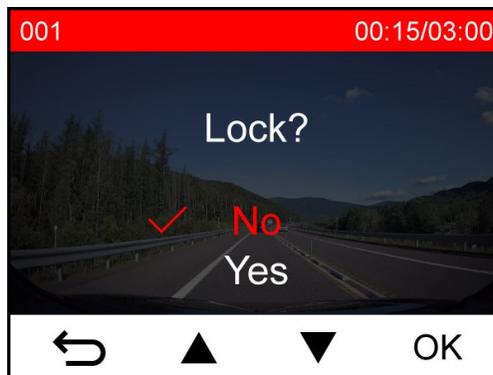


# 5. Settings

In the Settings menu, you can adjust video resolution, recording time and G-Sensor sensitivity. You can also set the date/time/time zone, change the interface language, format the memory card, and upgrade firmware.

1. During video recording, press the Settings button .



2. Use ▲/▼ to select the desired menu option, and press "OK."

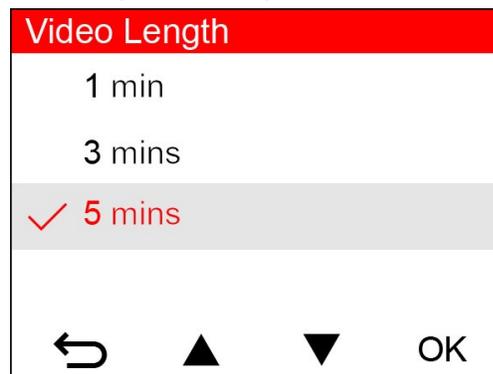

3. Use ▲/▼ to select the desired setting, and press "OK."

4. Press  to return to the Settings menu.

## 5-1 Menu Options

Camera		
Icon	Feature	Function / Option
	<b>Resolution</b>	Set the resolution for video recording.
		1440P 60FPS (QHD) / 1440P 30FPS (QHD) (default) / 1080P 60FPS (FHD) / 1080P 30FPS (FHD) / 720P 60FPS (HD) / 720P 30FPS (HD)
	<b>Exposure Value</b>	Adjust the exposure value of the camera.
		+2.0 / +1.5 / +1.0 / +0.5 / 0 (default) / -0.5 / -1.0 / -1.5 / -2.0
	<b>Microphone</b>	Turn on/off the microphone during video recording.
		Disable / Enable (default)
	<b>Video Length</b>	Set the recording length of each recorded video file.
		1 min (default) / 3 mins / 5 mins
	<b>Video Stamp</b>	Display the current time of the event or GPS information of the recorded videos.
		Disable / Enable (default)
	<b>Loop Recording</b>	Overwrite the earliest video files with new ones if the microSD card is full.
		Disable / Enable (default)
	<b>Light Frequency</b>	Select the appropriate frequency to avoid flashing A/C light.
		50 Hz (default) / 60 Hz
	<b>Time-Lapse Video</b>	Set a preferred time interval to make time-lapse videos. Time-Lapse Video mode can only be enabled manually; once enabled, it will replace Normal Recording mode.
		Disable (default) / 1 sec/shot / 2 sec/shot / 4 sec/shot
<b>Driving Assistant</b>		

Icon	Feature	Function / Option
	<b>Lane Departure</b>	Prevents accidents by issuing a warning when the vehicle veers out of a lane.
		Disable (default) / 60 km/h to 150 km/h (40 mph to 95 mph)
	<b>Forward Collision</b>	Alert the driver when the vehicle is getting too close to the car ahead. This function is activated when the driving speed exceeds the value set ahead.
		Disable (default) / 60 km/h to 150 km/h (40 mph to 95 mph)
	<b>Speed Alarm</b>	Alert the driver with warning beeps if the driving speed exceeds a preset value.
		Disable (default) / 60 km/h to 150 km/h (40 mph to 95 mph)
	<b>Speed Unit</b>	Set the measurement unit of speed.
		km/h (default) / mph
	<b>Head-Up Display</b>	Display the current speed and safety alerts onscreen.
		Disable (default) / Enable
	<b>Headlight Reminder</b>	When the DrivePro detects poor lighting conditions, the headlight reminder will automatically activate.
		Disable (default) / Enable
	<b>Driver Fatigue Alert</b>	Remind the driver of the need to rest after driving for a preset, driver-determined period.
		Disable (default) / 1 hour / 2 hours / 3 hours / 4 hours
	<b>Parking Mode</b>	When the car engine is turned off, the dashcam will continue to detect motion and image changes to determine whether to continue recording. (This mode will drain the built-in battery.)
		Disable (default) / Enable
<b>System</b>		
Icon	Feature	Function / Option

	<b>Volume</b>	Set the speaker volume level.
		0 to 7 (Choose 0 to switch on Silent Mode)
	<b>G-Sensor</b>	Adjust the sensitivity of the G-Sensor.
		Disable / Low (default) / Medium / High
	<b>Delay Power Off</b>	Schedule the DrivePro to shut down at a certain time.
		Disable / 10 secs (default) / 30 secs
	<b>Auto Display Off</b>	Set duration for the display to automatically turn off after the recording begins.  <b>Note: Auto Display Off is disabled when Speed Alarm, Forward Collision, Lane Departure, Headlight Reminder, Driver Fatigue Alert, or Head-Up Display is enabled.</b>
		Never (default) / After 1 min / After 3 mins
	<b>GPS Status</b>	Display the number of GPS satellites received and GPS signal intensity.
	<b>Navigation System</b>	Select a navigation system according to your preference.
		GPS (default) / GLONASS
	<b>WiFi</b>	Turn off/on WiFi.
		Off / On (default)
	<b>Date / Time</b>	Set the date, time, format and time zone.
	<b>Language</b>	Set the on-screen display menu language
		English / 繁體中文 / 简体中文 / 日本語 / Deutsch / Español / Français / Italiano / Русский / Português / Ελληνικά / Türkçe / 한국어 / ភាសាខ្មែរ / Polski
	<b>Format Card</b>	Format the microSD memory card.  <b>WARNING: Formatting will erase all the data stored in the card.</b>
		Cancel (default) / Confirm
	<b>Upgrade Firmware</b>	Keep your DrivePro up-to-date with the latest firmware version. Download from Transcend website: <a href="https://www.transcend-info.com/Support/service">https://www.transcend-info.com/Support/service</a>

		Cancel (default) / Confirm
	<b>Restore Defaults</b>	Reset all settings to their factory defaults.
		Cancel (default) / Confirm
	<b>Screen Adjustment</b>	Adjust the position of the recording screen.
	<b>Information</b>	Display the DrivePro's current firmware version, card capacity, WiFi SSID, password, and model name/number.

## 5-2 Firmware Upgrade


1. After downloading the firmware from Transcend website, decompress it and put the file in the "SYSTEM" folder of the microSD memory card.

Name	Date
 DP250	2020/12/25 AM
 SYSTEM	2020/12/25 AM

2. Insert the microSD memory card that contains the latest firmware version into the card slot of the DrivePro.
3. Connect the DrivePro to an external power outlet. Select Upgrade Firmware from the Settings menu, and press "OK" to start the firmware detection process. The DrivePro will automatically find the latest firmware file. Select Confirm to complete the firmware upgrade process.

### "Note"

The firmware upgrade will take about 1 to 2 minutes. Please do not turn off the DrivePro while upgrading. The DrivePro will restart automatically after the upgrade is complete.

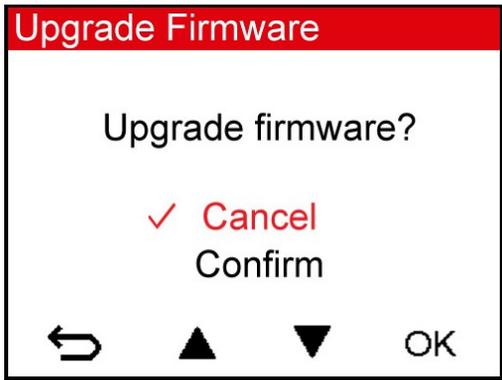



## "WARNING"

**NEVER remove the power cord or the microSD memory card while the firmware is being upgraded.**

If the DrivePro cannot be turned on due to firmware upgrade failure, please contact Transcend customer service for technical support.

## 6. Using the DrivePro App

Developed specifically for iOS (iPhone/iPad) and Android devices, the free downloaded DrivePro App allows you to wirelessly watch live-view video footage during recording, control DrivePro functions, and play videos directly on your smartphone or tablet.



### DrivePro App



### 6-1 Downloading and Installing the DrivePro App


1. Search "DrivePro" on App Store or Google Play.
2. Download and install the [DrivePro App](#).

Once the installation is complete, the App will be displayed on your device's home screen.

Before using the App, please refer to the DrivePro App instructions.

## 6-2 Connecting to the DrivePro

1. **Settings** > **Wi-Fi** from your mobile device.
2. Select the **WiFi network with DrivePro 250** in the SSID. (The default password is 12345678)

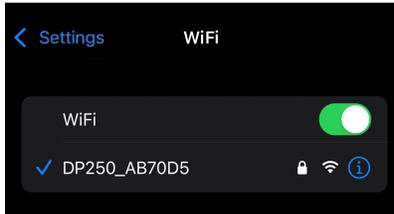

3. Tap the DrivePro 250 icon on the home screen of your mobile device to use the App.



4. The image above will be displayed when you are connecting to the DrivePro.

### "Note"

To change the default SSID and the password, go to Settings in the DrivePro App.

5. Click the links below for detailed operation guidance.

iOS: <https://help.transcendcloud.com/DrivePro/iOS/EN/connect/>

Android: <https://help.transcendcloud.com/DrivePro/Android/EN/connect/>

# 7. DrivePro Toolbox Software

The DrivePro Toolbox, developed for Windows and macOS, features a user-friendly interface that allows you to select and play videos recorded on your DrivePro, and see your driving paths of the recorded videos displayed on maps without the need to install separate codecs.

System requirements for connecting the DrivePro to a computer:

- A desktop or a laptop with a working USB port
  - Microsoft Windows 10 or later
  - macOS 10.11 or later

1. Download the installation files from <https://www.transcend-info.com/downloads>
2. Install DrivePro Toolbox software on your computer.

Main Features	
Function	Description
 <b>Video Sorting</b>	Sort videos by filename, recording date, or group, which allows users to search for recorded videos efficiently and to play them.
 <b>Smooth Video Playback</b>	Connect the DrivePro or use a microSD card reader or adapter to play back recorded video events on your computer.
 <b>Edit and Trim Videos</b>	Select a video, trim it and save it as a new clip immediately. You can also capture snapshots from your videos during playback.
 <b>Map View</b>	View the driving paths of your journey displayed on maps along with the recorded video.  <b>Note: This feature works with DrivePro models with a GPS receiver. (DrivePro 550, DrivePro 520, DrivePro 250, DrivePro 230, and DrivePro 220)</b>



## License Plate Recognition

Automatically identify the license plates in a video and extract footage to allow users to perform a quick search.

 **Note: Available only on Windows 64-bit version.**

# 8. Transferring Files to a Computer


To transfer files between the dashcam's memory card and your computer:

## Option 1:

Take the microSD memory card out of the dashcam, and insert it into a compatible card reader to transfer files to your computer.

## Option 2:

1. Insert the microSD memory card into the dashcam.
2. Plug one end of the cable into the USB port of the dashcam.
3. Plug the other end of the cable into your computer.

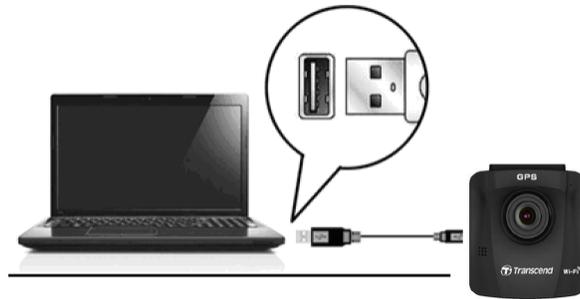

## "WARNING"

DP250 package does not contain a USB cable.

The DrivePro will display the following screen when connected to a computer:



## Microsoft Windows 10 or later

No drivers are required for connecting the DrivePro to your desktop or laptop. Windows® Operating Systems have built-in drivers to support your DrivePro. Upon successful connection to your computer, a new **Removable Disk** drive with a newly assigned drive letter representing the DrivePro will automatically appear in **My Computer**, and a Removable Hardware  icon will appear in the Windows System Tray.

Name	Type	Total Size	Free Space
▲ Hard Disk Drives (2)			
 Local Disk (C:)	Local Disk	976 GB	237 GB
 Local Disk (D:)	Local Disk	886 GB	3.19 GB
▲ Devices with Removable Storage (1)			
 Removable Disk (E:)	Removable Disk		

### "Note"

(E:) is an example drive letter – the letter in your “My Computer” window may differ.

Your DrivePro is now ready to transfer data just like an external hard drive. To transfer videos, simply copy files from the folder that represents the DrivePro.

### Proper removal of your DrivePro (from Windows):

1. Click once on the Removable Hardware icon  in the system tray.
2. A Safely Remove Hardware window will pop up. Click to continue.
3. A window stating, “The ‘USB Mass Storage Device’ device can now be safely removed from the computer,” will pop up. Unplug your DrivePro from the USB port after seeing this message.



## macOS 10.11 or later

No drivers are required. Plug your DrivePro into an available USB port directly, and your computer will automatically detect it.



### Proper removal of your DrivePro (from macOS):

Drag-and-drop the Disk icon corresponding to your DrivePro into the trashcan, and then unplug your DrivePro from the USB port.



#### "WARNING"

1. To prevent data loss, always follow the proper removal procedures when disconnecting the DrivePro from your computer.
2. When the DrivePro is connected to a computer, it can only be used for transferring files. You will not be able to use any of the DrivePro's features at this time. Please disconnect your DrivePro from the computer to resume normal function.
3. **NEVER** "format" or "initialize" the disk while the DrivePro is connected to your computer.

# 9. Troubleshooting

If a problem occurs with your DrivePro, please check the instructions below before sending your DrivePro for repair. If you cannot find an ideal solution to your question below, please consult the store where you purchased the product or the service center, or contact the local Transcend branch office. You can also visit the Transcend website for FAQ and Technical Support services. For any hardware issues, please refer to the DrivePro User's Manual.

- **My computer operating system cannot detect my DrivePro**

**Please check the followings:**

- Is your DrivePro properly connected to the USB port? If not, unplug and reconnect it. Make sure that both ends of the USB cables are properly connected as shown in the User's Manual.
  - Is the computer's USB ports enabled? If not, refer to the user's manual of your computer (or motherboard) to enable them.
- **None of the DrivePro buttons are responding. (The dashcam crashes or runs with lag.)**
    - Try unplugging the car adapter from your DrivePro, and reconnecting it.
  - **My DrivePro cannot play videos stored in my memory card.**
    - Edited videos may not be displayed on your DrivePro.
  - **Nothing happens when I press the "Emergency button."**
    - Emergency Recording works in the Recording mode only.

# 10. Safety Cautions

These usage and safety guidelines are **IMPORTANT!** Please follow them carefully to ensure your safety and help protect your DrivePro from potential damages.

- **General Use**

- For in-car use only.
- For your safety, do not operate the DrivePro or use the DrivePro App while driving.
- Avoid placing the DrivePro in an extreme temperature environment.
- Avoid splashing water or any other liquids on the DrivePro and accessories.
- Do not use the DrivePro in an environment with strong magnetic fields or excessive vibration.

- Only use the car adapter provided by Transcend. Other car adapters may not be compatible with the DrivePro.
- Some vehicles have power outlets that remain active even when the engine is turned off. If your car is of this type, please unplug your dashcam from the car power outlet to avoid unnecessary power consumption and unexpected issues.
- The GPS is subject to changes that could affect its performance. Transcend does not guarantee the accuracy of GPS data, which should not influence your judgment while driving.
- GPS signals cannot penetrate buildings and metallic tinted films. The accuracy of GPS data depends on the surroundings including the weather and the location it is being used (e.g., high buildings, tunnels, undergrounds and forests).

- **Mounting Location**

- Never place the DrivePro where the driver's view or deployment of airbags is obstructed.
- Mount the DrivePro within the range of the windshield wipers to ensure clear visibility in rain.
-  **WARNING: Remove the DrivePro carefully if it is mounted on a tinted window to prevent damages to the tint film.**

- **Backing up Data**

- **Transcend does NOT take any responsibility for data loss or damage during operation.** We strongly advise that you regularly back up data in the memory card for your dashcam to a computer or other storage medium.
- To ensure high-speed USB 2.0 data transfer rates when connecting your DrivePro to a computer, please check if the computer is installed with correct USB drivers. If you are unsure how to check this, please refer to the User's Manual of the computer or motherboard for USB driver information.

# 11. Specifications

	<b>DrivePro 250</b> <b>(Models produced before 2023/04)</b>	<b>DrivePro 250</b> <b>(Models produced after 2023/04)</b>
<b>Dimensions</b>	70.2 mm (L) × 63.1 mm (W) × 34.5 mm (H)	
<b>Weight</b>	78 g	82 g
<b>Connect Interface</b>	USB 2.0	
<b>Storage Capacity</b>	microSD 8 GB / 16 GB / 32 GB / 64 GB / 128 GB (Class 10 or above)	microSD 32 GB / 64 GB / 128 GB / 256 GB (Class 10 or above)
<b>WiFi</b>	802.11n	
<b>Panel</b>	2.4" color LCD	
<b>Lens</b>	F/2.0, 140° wide angle	
<b>Video Formats</b>	H.264 (MP4: up to 1920×1080P 60FPS)	H.264 (MP4: up to 2560×1440P 60FPS)
<b>Resolution / Frame Rate</b>	Full HD 1920×1080P 60/30FPS HD 1280×720P 60/30FPS	2K QHD 2560×1440P 60/30FPS Full HD 1920×1080P 60/30FPS HD 1280×720P 60/30FPS
<b>Operating Temperature</b>	-20°C (-4°F) to 65°C (149°F)	
<b>Power Supply (car charger)</b>	Input DC 12 V to 24 V Output DC 5 V / 1 A	Input DC 12 V to 24 V Output DC 5 V / 2 A
<b>Power Supply (dashcam)</b>	Input DC 5 V / 2 A	
<b>Global Navigation</b>	GPS / GLONASS	

<b>Satellite System</b>		
<b>Certification</b>	BSMI, CE, EAC, FCC, KC, MIC, NCC, RCM	BSMI, CE, EAC, FCC, KC, MIC, NCC, RCM, UKCA
<b>Warranty</b>	2 years	
<b>Note</b>	In addition to the bundled microSD card, we recommend Transcend's High Endurance microSD cards or MLC-based memory cards to ensure the best recording performance.	
	<ul style="list-style-type: none"> <li>• 16 GB to 64 GB High Endurance microSDHC card (TS16GUSDHC10V / TS32GUSDHC10V / TS64GUSDXC10V)</li> <li>• 64 GB / 128 GB High Endurance microSDXC card (TS64GUSD350V / TS128GUSD350V)</li> </ul>	<ul style="list-style-type: none"> <li>• 32 GB / 64 GB High Endurance microSDHC card (TS32GUSDHC10V / TS64GUSDXC10V)</li> <li>• 64 GB to 256 GB High Endurance microSDXC card (TS64GUSD350V / TS128GUSD350V / TS256GUSD350V)</li> </ul>

## 12. EU Compliance Statement

Transcend Information hereby declares that all CE marked Transcend products incorporating radio equipment functionality are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

[https://www.transcend-info.com/eu\\_compliance](https://www.transcend-info.com/eu_compliance)



### Dashcam / Body Camera series

<b>Frequency:</b> 2400 MHz to 2483.5 MHz	<b>Maximum transmit power:</b> < 100 mW
---	--

# 13. Recycling and Environmental Protection

For more information on **recycling the product (WEEE)** and **battery disposal**, please refer to the following link:

<https://www.transcend-info.com/about/green>

# 14. Federal Communications Commission (FCC) Statement

This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received including interference that may cause undesired operation.

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Exposure Information (SAR)

This equipment complies with the FCC portable RF exposure limit set forth for an uncontrolled environment. The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

This equipment could be installed and operated with minimum distance 0cm between the radiator & your body.

- Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.
- This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Transcend Information Inc (USA)

1645 North Brian Street, Orange, CA 92867, U.S.A

TEL: +1-714-921-2000

## 15. Warranty Policy

Please find the warranty period of this product on its package. For details of **Warranty Terms and Conditions** and **Warranty Periods**, please refer to the link below:

<https://www.transcend-info.com/warranty>

## 16. GNU General Public License (GPL) Disclosure

For more information on open-source licensing, please refer to the link below:

<https://www.transcend-info.com/Legal/?no=10>

## 17. End-User License Agreement (EULA)

For details of software license terms, please refer to the following link:

<https://www.transcend-info.com/legal/gpl-disclosure-eula>

## 18. Eurasian Conformity Mark (EAC)

