

Item Number
RAM-VB-121

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the
CHRYSLER TOWN & COUNTRY (1996-2004)
PLYMOUTH VOYAGER (1996-2001)
DODGE CARAVAN (1996-2007)
JEEP CHEROKEE (2014-2015)

SPECIFICATIONS

Placement

Vans: Drivers side on inner front and back seat studs
Jeep: Passenger side, front of seat.

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Pole or Pedestal

Included on base

Construction/Finish

Steel/Black Powdercoat

Weight

10.5 lbs.

Dimensions

A = 17.8", B = 5.5", C = 11.25"



Shown In Use


Features

Installs in minutes with no drilling required

Misc.

Rugged Steel Construction

Lifetime warranty

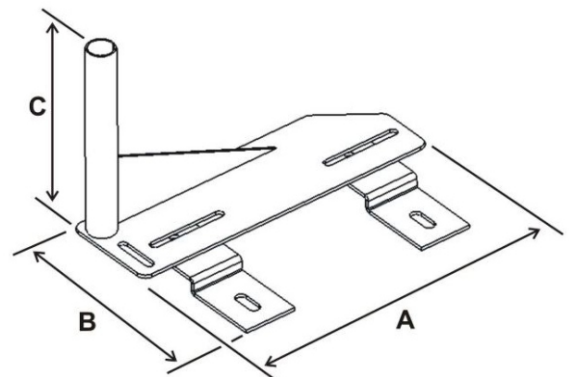

RAM-VB-121

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-121

Item Number
RAM-VB-121

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the
CHRYSLER TOWN & COUNTRY (1996-2004)
PLYMOUTH VOYAGER (1996-2001)
DODGE CARAVAN (1996-2007)
JEEP CHEROKEE (2014-2015)

INSTALLATION INSTRUCTIONS

Vans:

1. Remove the seat bolts that hold the right side of the driver's seat to the floor.
2. Loosely assemble legs to the base. Do not firmly tighten.
3. Place mounting base to the right side of the driver's seat. Align mounting legs to the seat bolt holes and tighten in place.
4. Gently lift the inside of the seat upward to allow the seat frame to clear the studs.
5. Place the base between the seat frame and align the holes in the base with the seat studs.
6. Lower the seat back down over the No-Drill™ base and seat studs.
7. Fully tighten factory hardware to secure base in place along with seat frame.

Jeep:

1. Remove the two passenger side front seat leg bolts.
2. Loosely assemble the seat leg brackets and no drill base as shown in the image below.
3. Slide the seat leg brackets between the seat legs/tracks and the floor board.
4. With the holes in the brackets lined up with the holes in the floor, replace the seat leg bolts.
5. Fully tighten all hardware to secure base.

Image of Jeep Cherokee installation. Note the orientation of the seat leg brackets. The supplied stabilizer foot should be installed within the slot closest to the center hump of the vehicle.



RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-121