

Item Number
RAM-VB-142

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the
JEEP GRAND CHEROKEE (2005-2010)
JEEP COMMANDER (2006-2010)

SPECIFICATIONS

Placement

Passenger side, front, where seat rail frame attaches to floor board.

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 18.5", B = 5.625", C = 3.25"
Hole Centers = 16.562"

Pole or Pedestal

Sold Separately

Weight

4.5 lbs.

Features


Installs in minutes with no drilling required
Low profile keeps mount away from passenger leg space

Misc.

Rock solid construction
Lifetime warranty



Shown In Use

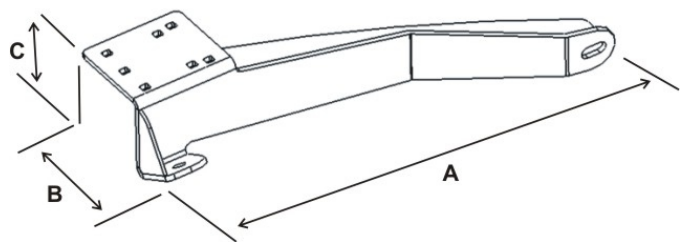

RAM-VB-142

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-142

Item Number
RAM-VB-142

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the
JEEP GRAND CHEROKEE (2005-2010)
JEEP COMMANDER (2006-2010)

INSTALLATION INSTRUCTIONS

Jeep Commander Instructions:

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts. Store these bolts.
2. Place the supplied stand offs over the holes in the seat frame legs and rest the no drill base on top of these.
3. Align the holes in the base, stand offs, and seat frame legs with those in the floor board. The pedestal platform should be near the console.
4. Pass the supplied longer bolts through to the holes in the floor board and start the thread by hand.
5. Using a socket wrench, fully tighten the bolts to secure the No-Drill™ base into the vehicle.
6. After a week of use, check seat bolts and re-tighten if necessary.

Jeep Grand Cherokee Instructions:

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts on the passenger side.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten.

Note that depending on the trim level of your vehicle, there may be a one or more pieces of plastic trim covering the seat frame bolts. These will need to be removed and stored to access the mounting hardware. Also, a supplied stand-off, washer, and longer seat bolt may be used on the passenger door side seat bolt location. While not necessary for every installation, this hardware may be necessary for some installations.

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-142