

Item Number
RAM-VB-148

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the FORD FOCUS (2003-2010)

SPECIFICATIONS

Placement

Passenger side on the floor, between seat legs and floor board.

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 19.687" B = 7.25" C = 1"
Hole Centers = 17.75"

Pole or Pedestal

Purchased Separately

Weight

4.5 lbs.

Features

Installs in minutes with no drilling required
Minimal interference with passenger leg space


Misc.

Rock solid construction

Lifetime warranty



Shown In Use

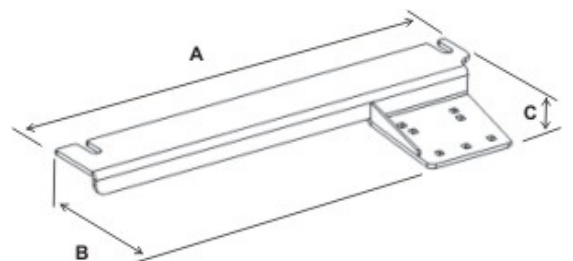

RAM-VB-148

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-148

Item Number
RAM-VB-148

RAM No-Drill™ Seat Bases

RAM Mounting Systems

**Vehicle base for the
FORD FOCUS (2003-2010)**

INSTALLATION INSTRUCTIONS

1. Move the seat to its rear most position.
2. Loosen the front bolts that hold the seat frame legs to the floor board. The bolts only need to be loosened enough to allow the base to slide in between the legs and the floor board.
3. Slide the No Drill base into place making sure the shove the base back so the bolts engage the rear of the slots.

Please Note: If the seat is moved completely forward, the mounted equipment could possibly hit the dash. Once the base is installed, use caution when adjusting the passenger side seat.

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-148