RAM No-Drill™ Seat Bases
RAM Mounting Systems

Vehicle base for the
FORD F-150 (2015-NEWER)

Complete Vehicle Mount
RAM-VB-195-SW1

SPECIFICATIONS

Placement
Passenger side, in front, where seat frame meets floor board.

Drilling Required
None - uses existing seat bolts

Seat Configuration
Bucket

Pole or Pedestal
Ordered Separately

Construction/Finish
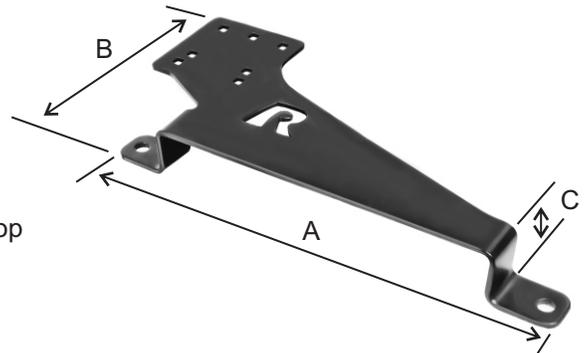Steel/Black Powdercoat

Dimensions
A = 14.875", B = 7", C = 2.00",
Hole Center = 13.50"

Features

Installs in minutes with no drilling required. Placement is over the top of the seat frame legs at floor board level. Rock solid construction Lifetime warranty

Vehicle Base
RAM-VB-195

RMR-INS-VB-188

RAM No-Drill™ Seat Bases
RAM Mounting Systems

Vehicle base for the
FORD F-150 (2015-NEWER)

INSTALLATION INSTRUCTIONS

Depending on your make and model, there may be pieces of plastic trim that cover the lower front of the seat frame legs. This will need to be removed and stored. In some Ford models, under the plastic trim cover is a small Allen head screw. Remove this to allow the plastic trim to accommodate the no drill base.

1. Move the passenger side seat to its rearmost position.

2. Using the appropriate socket, loosen and remove the two bolts holding the seat frame legs to the floor board.

3. Gently lift the front of the seat upward to create a 1/4 inch gap under the seat frame legs.

4. Slide the No-Drill™ base under the seat frame legs with the pedestal platform near the center of the vehicle and align the holes of the seat legs, no drill base, and threaded holes in the floor pan.

5. Re-install the two seat frame bolts. Start the thread by hand and then fully tighten with the socket wrench.

RMR-INS-VB-188