

Item Number _____

RAM-VB-145 & RAM-VB-145-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

COMPATIBLE VEHICLES:

CHRYSLER 300 (2005-2008)

DODGE CHARGER (NON-POLICE CAR) (2006-2010)

DODGE MAGNUM (NON-POLICE CAR) (2006-2010)

SPECIFICATIONS

Placement

Passenger side, front, where seat rail frame attaches to floor board.

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 18.75", B = 4.25", C = 6.875"

Hole Centers = 16.5"

Pole or Pedestal

Sold Separately

Weight

7 lbs.

Features

Installs in minutes with no drilling required

Low profile keeps mount away from passenger leg space

Important Note

In 2006 model year vehicles, the seat leg bolts are tied to the air bag system. Tampering with these may result in disabling the air bag system and causing a severe safety hazard. The installation of this product into a 2006 vehicle should only be done by a Chrysler factory authorized technician or Up-fitter familiar with Police, Fire, and Rescue vehicles and their fleet use.

RAM Mounting Systems

8410 Dallas Ave S

Seattle, WA 98108

Phone: (206) 763-8361


Fax: (206) 763-9615

www.rammount.com

support@rammount.com



Complete Vehicle Mount
RAM-VB-145-SW1

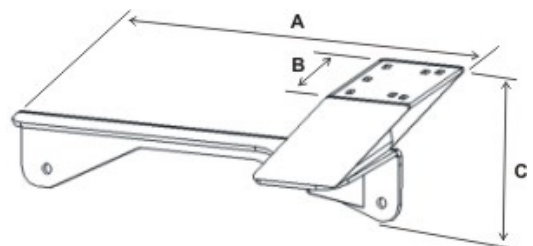

Vehicle Base
RAM-VB-145



RMR-INS-VB-145

Item Number _____

RAM-VB-145 & RAM-VB-145-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

COMPATIBLE VEHICLES:

CHRYSLER 300 (2005-2008)

DODGE CHARGER (NON-POLICE CAR) (2006-2010)

DODGE MAGNUM (NON-POLICE CAR) (2006-2010)

INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts. Store these bolts.
2. Place the supplied stand offs over the holes in the seat frame legs and rest the No-Drill™ base on top of these.
3. Align the holes in the base, stand offs, and seat frame legs with those in the floor board. The pedestal platform should be near the console.
4. Pass the supplied longer bolts through to the holes in the floor board and start the thread by hand.
5. Using a socket wrench, fully tighten the bolts to secure the no drill base into the vehicle.



RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-145