

Item Number _____

RAM-VB-152 & RAM-VB-152-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the
FORD ESCAPE (2001-2012)
MAZDA TRIBUTE (2005-2010)
MERCURY MARINER (2005-2010)

SPECIFICATIONS

Placement

Passenger side of vehicle, front, where seat frame attaches to floor board.

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Pole or Pedestal

Sold Separately

Weight 6.1 lbs.

Dimensions

A = 17.625", B = 8.32", C = 2.5"


Hole Center = 15.625"

Features

- Installs in minutes with no drilling required
- Low profile keeps mount away from passenger leg space
- Lifetime warranty



Complete Vehicle Mount
RAM-VB-152-SW1

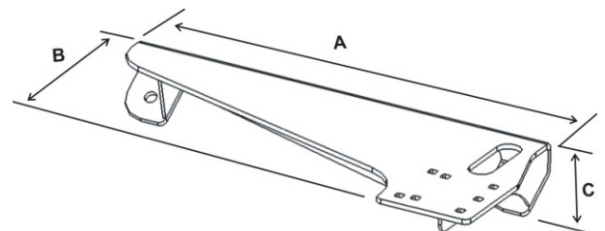

Vehicle Base
RAM-VB-152

RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-152

Item Number _____

RAM-VB-152 & RAM-VB-152-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the
FORD ESCAPE (2001-2012)
MAZDA TRIBUTE (2005-2010)
MERCURY MARINER (2005-2010)

INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat leg bolts. For most models, a T55 torx bit is required to remove the seat leg bolts.
2. Place the stand offs over the seat frame legs.
3. Pass the bolt with washer through the holes in the No-Drill™ base.
4. Lower the base with bolts over the stand offs, pass the bolts into the threaded hole, and begin threading the bolt by hand.
5. Next, use a 17mm socket to fully tighten the bolt and secure the base in place. For the bolt closest to the passenger side door, a wobble attachment will facilitate the tightening of this bolt.



RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-152