

# Audio Cable Retention Instructions



## For Locking Vehicle Docks

Follow the steps in the GDS™ Locking Vehicle Dock Assembly Guide prior to following these instructions.

1. Attach retention clip towards the end of the audio cable as shown.

2. Insert sheet metal screw through retention clip as shown.

3. Remove one of the (H) Screws behind your vehicle dock, and replace with the new screw and retention clip.

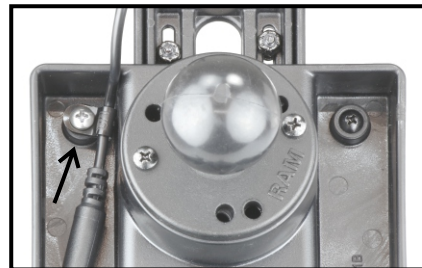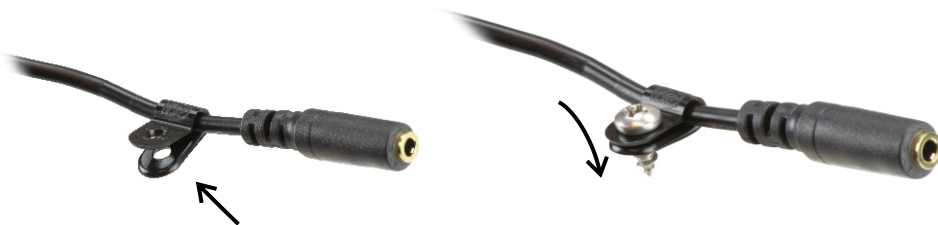

## For Non-Locking Vehicle Docks



Follow the steps in the GDS™ Vehicle Dock Assembly Guide prior to following these instructions.

1. Attach retention clip to the end of the audio cable.

2. Remove one of the (E) screws from the back of the vehicle dock where the ball plate is connected.

3. Thread screw into flat side of retention clip by hand. Use screwdriver to tap screw through all the way.

4. Re-attach screw to your vehicle dock assembly.

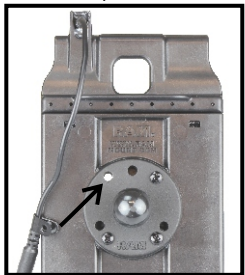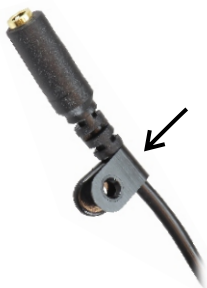

RPR-INS-GDS-AUD1

# Audio Cable Retention Instructions



## For Locking Vehicle Docks

Follow the steps in the GDS™ Locking Vehicle Dock Assembly Guide prior to following these instructions.

1. Attach retention clip towards the end of the audio cable as shown.

2. Insert sheet metal screw through retention clip as shown.

3. Remove one of the (H) Screws behind your vehicle dock, and replace with the new screw and retention clip.

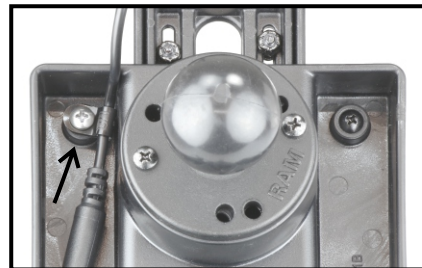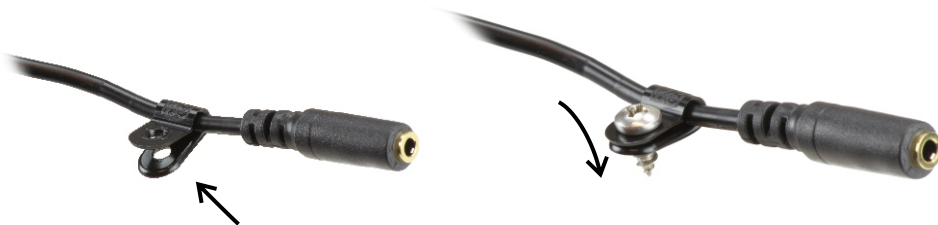

## For Non-Locking Vehicle Docks


Follow the steps in the GDS™ Vehicle Dock Assembly Guide prior to following these instructions.

1. Attach retention clip to the end of the audio cable.

2. Remove one of the (E) screws from the back of the vehicle dock where the ball plate is connected.

3. Thread screw into flat side of retention clip by hand. Use screwdriver to tap screw through all the way.

4. Re-attach screw to your vehicle dock assembly.

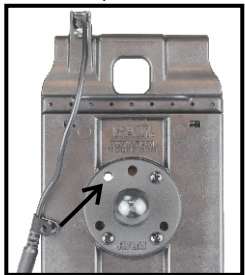

RPR-INS-GDS-AUD1