# Vehicle base for the CHEVROLET MALIBU (2006-2010)

## **SPECIFICATIONS**

#### **Placement**

Passenger side seat, between the cushion support and seat tracks.

## **Drilling Required**

No - uses existing seat bolts

#### **Seat Configuration**

Bucket

#### Construction/Finish

Steel/Black Powdercoat

#### Pole or Pedestal

**Purchased Separately** 

#### Weight

7.5 lbs.

#### **Dimensions**

A = 18.625", B = 13" Hole Center = 17.625"

## **Features**

Installs with no drilling required
Minimal interference with passenger leg space

## Note


The RAM-VB-157 will NOT fit the Chevrolet Malibu with Powered Seats

### **RAM Mounting Systems**

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



Shown In Use

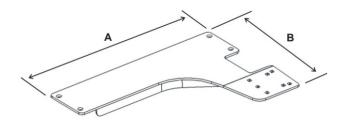

RAM-VB-157



RMR-INS-VB-157

# Vehicle base for the CHEVROLET MALIBU (2006-2010)

## **INSTALLATION INSTRUCTIONS**

- 1. For some trim levels, it may be necessary to release the seat with the two seat bolts at the rear of the seat. The seat can then be rocked forward and released from at the front floor slots. You can then rock the seat back for easy access to the seat mount bolts that hold the seat to the slider. A 13MM ratcheting box end wrench is ideal for loosening the nuts
- 2. Loosen and remove the four bolts that hold the seat frame to the slides/track.
- 3. Once the nuts are removed, tilt the seat back to allow for the installation of the no drill base.
- 4. Place the no drill base over the 4 exposed studs and under the seat adjustment lever. Once in position, lower the seat back down over the studs and replace the nuts. Fully tighten the nuts.
- 5. Slide the mount between the cushion and the slides and re-tighten the bolts.
- 4. Move the seat back to the rear most position.

Please Note: If the seat is moved forward, the mounted equipment could possibly hit the dash.



### **RAM Mounting Systems**

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



RMR-INS-VB-157