

NOTICE: Please read this user manual carefully before using this product.

This manual is for operation instruction only, not for any maintenance usage. The functions described in this version are updated till May 2013. Any changes of functions and parameters since then will be informed separately. Please refer to the dealers for the latest details.

This manual is copyright PTN Electronics Limited. All rights reserved. No part of this publication may be copied or reproduced without the prior written consent of PTN Electronics Limited.

All product function is valid till 2013-05-28.

Update History

Version	Date	Update Content
1.0	2012.02.25	First version.
1.1	2013.05.28	Modified the connecting .

Table of Contents

1. Introduction	1
1.1 Introduction to WP8	1
1.2 Package Contents	1
2. Features.....	1
3. Specification.....	2
4. Connection Introduction	2
4.1 Introduction of the Interfaces	2
4.2 Connection of Programming and Looping	4
5. System Operations	5
5.1 Introductions of the Front Panel.....	5
5.2 USB Driver Installation.....	6
5.3 Software Programming	6
5.3.1 Main Menu	7
5.3.2 Panel/Key setting.....	9
5.3.3 Action list	11
5.3.4 Event setting.....	11
5.3.5 Event List.....	20
6. System Diagram	21
7. Troubleshooting & Maintenance	22
8. Safety Operation Guide	22
9. After-sales Service	23

1. Introduction

1.1 Introduction to WP8

WP8 is a programmable Wall Control Panel. Every button is programmable and works either individually or together. WP8 is built in the programmable 3 RS232, 1 RS485, 3 Infrared & 2 Relay, and 1 mini USB for programming.

Please notice, RS232 (1) and IR2 share the same port, cannot be used at the same time. Also, RS232 (2) and IR3 share the same port, cannot be used at the same time.

It can fully control the PTN product, as well as third party devices such as projectors, screens etc. It is an easy-to-use control device for presentation show rooms, classrooms and boardrooms.

1.2 Package Contents

- 1 x WP8
- 1 x Power adapter (DC 12V)
- 4 x Captive screw connector
- 3 x IR emit probe
- 1 x Button labels
- 1 x User Manual

Notes: Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

2. Features


- Every button can be programmed to send the bi-direction RS232 and RS485 commands simultaneously to control third party devices.
- Every button can be programmed to send the infrared code, control the relay, to let them work simultaneously to control the third party devices.
- Every button is built in the infrared code and RS232 code learning function, and baud-rate setting.
- ID looping function. 99pcs WP8 can be looped and controlled together, by ID identifying.
- Programmed by USB or RS232, working with PTN PC software (PS-WP).
- Crystal and backlit buttons with easy user-friendly customizable changeable labels.
- The backlit brightness is controllable.
- Dimension: 11.4cm long and 7cm wide.


3. Specification

Specification			
Program Port	USB or RS232	Output Port	3 x RS232, 1 x RS485, 3 x Infrared, 2 x Relay
Serial Control Port	RS232	Baud Rate And Protocol	9600 baud, 8 data bits, 1 stop bit, no parity
Software	PS-WP	Temperature	-20 ~ +70°C
Frequency Response	20Hz ~20KHz	Humidity	10% ~ 90%
Power Supply	100VAC~240VAC, 50/60 Hz	Power Consumption	1W
Case Dimensions	Dual-gang electron box, 114x70 x28mm	Product Weight	0.15kg

4. Connection Introduction

4.1 Introduction of the Interfaces

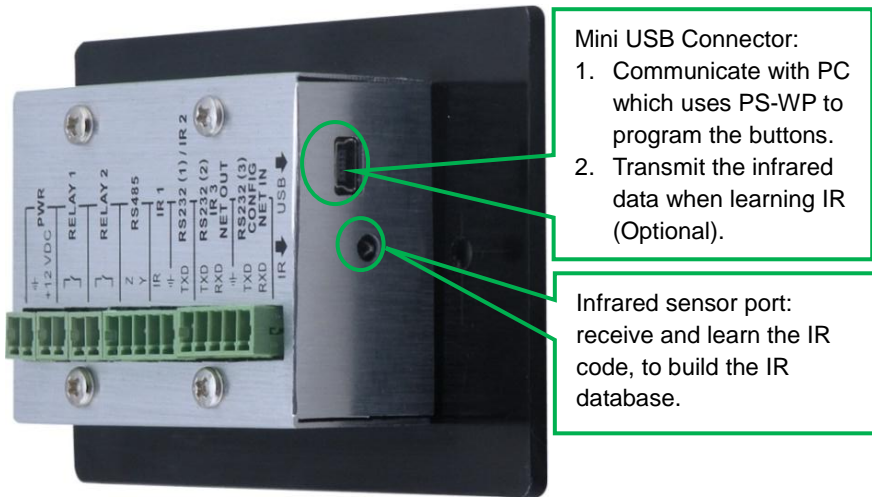

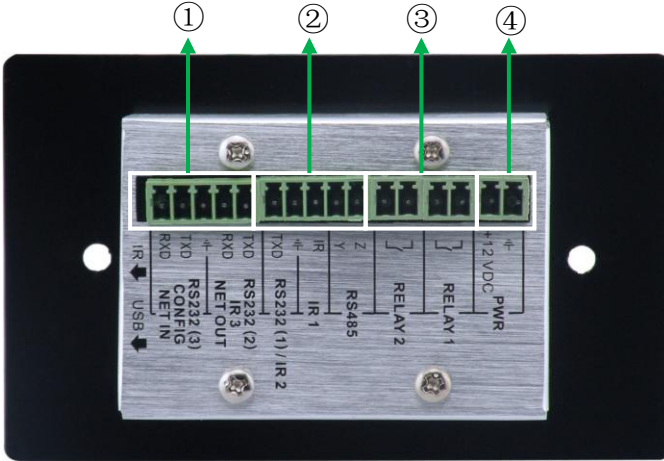


The WP8 has various ports in the rear panel, including Lopping port, RS232 port, RS485 port, IR port, Relay port and Power port. Below is the introduction:

- ① This port includes two parts:
 One part is RS232 (2)/IR3, it can be used for control other devices or looping output. RS232 (2) and IR3 share the same port, the detailed use depends on the setting of PS-WP.
 Other part is RS232 (3), it can be used for control other devices or looping output, or connect with PC.
 These two parts share the same grounding.
- ② This port includes: RS232 (1)/IR2, IR1 and RS485.
 - a) RS232 (1)/IR2: share the same port, the detailed use depends on the setting of PS-WP. When be used as RS232, it is unidirectional transmission, transmit data but without receive.
 - b) IR1: for control other devices, it can be programmable by the PS-WP.
 - c) RS485: the RS485 can be programmed as different commands and control the device with RS485 port. The command of RS485 is the same as RS232 (1).
- ③ Low-Voltage relay ports: set the relay on/off by software PS-WP.
- ④ Power connector: 12VDC. **Be sure that the “+” and “-” never be mixed or wrong connection.**


4.2 Connection of Programming and Looping

WP8 can be connected to the computer for programming, to default the functions of every button. It can be connected by USB or RS232, working with the PS-WP software. It is shown as below:

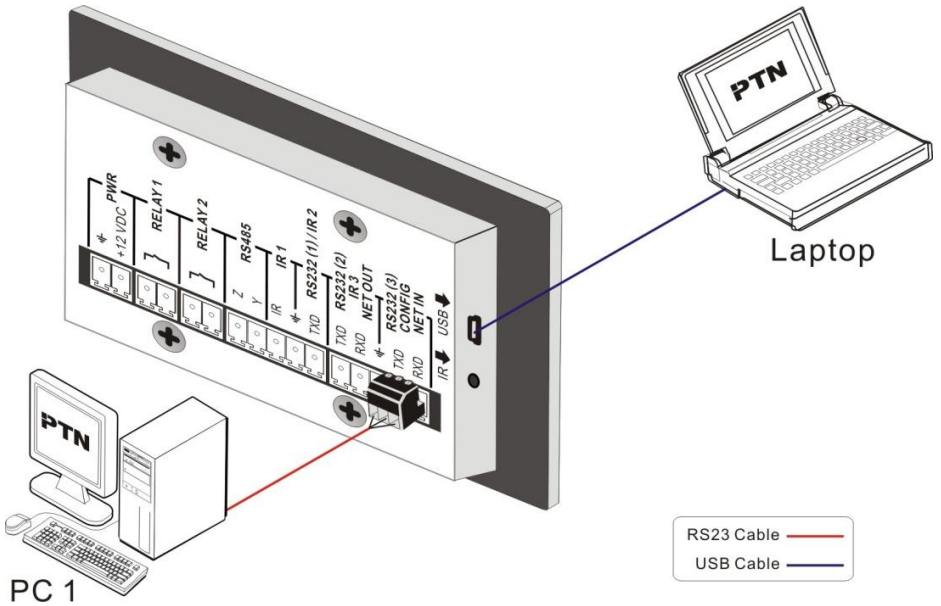

Programming Connection


Several pieces WP8 can be also looped to be a system, for control more devices. It is looped by the inter RS232 setting. Please check the demo picture as below:

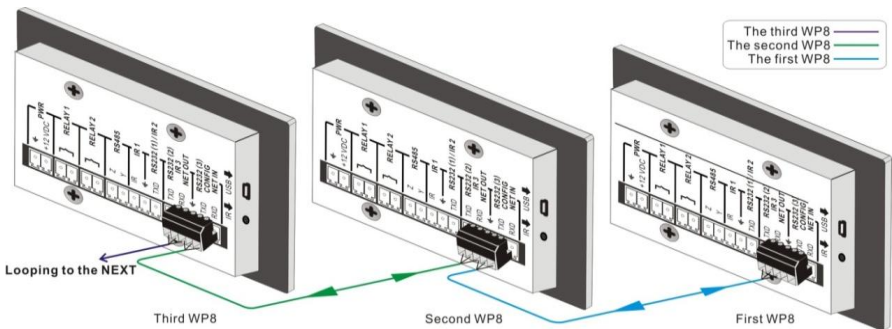

Several WP8 Looping connecting

After connect the WP8 as above, and then we should set the ID of each WP8 by PS-WP. The ID number is from 01 to 99, and it also is the class of WP8 in the loop,


different WP8 should set to different ID. After connections finish, we can set the control modes by PS-WP. For detailed connecting, please check the picture below:

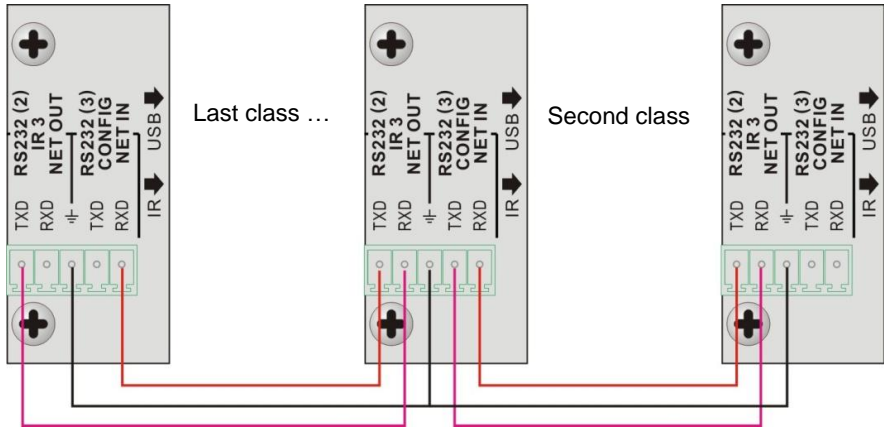

Detailed looping connecting

5. System Operations

5.1 Introductions of the Front Panel

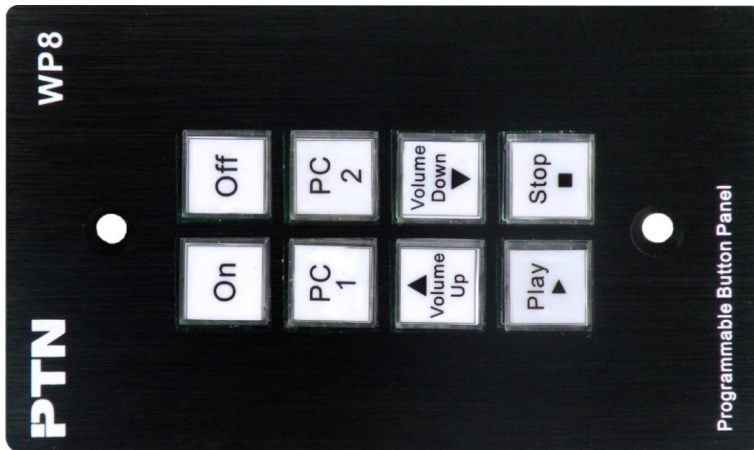


Crystal and luminescent, programmable buttons:

Every button can be programmable with PTN software PS-WP.

Connect the PC via USB or RS232.

And every label inside the button can be changeable. You can choose the label you need and change it very easily like below:

(For the specific transparent paper table, please contact the local distributor or reseller for it)

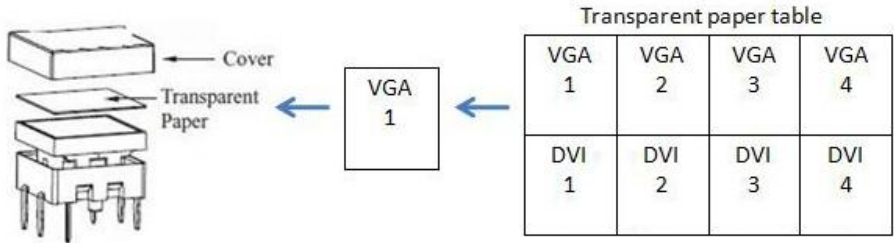

5.2 USB Driver Installation

There are USB driver file and PS-WP software in the disk. The PS-WP can run directly without installation.

But when connect WP8 with PC by USB, it may need to install the USB driver. Use the driver file to install the driver of USB, we can use USB to program the WP8.


5.3 Software Programming

You can use this PTN software PS-WP to easily set every button of WP8.

After connect WP8 with PC by USB or RS232, we can open the PS-WP to program the buttons for controlling.

The main window of PS-WP has five parts: main menu, panel (button) setting, event setting, action list and event list. In this manual we will take WP8-V for example, to show the uses of all functions.

The main window of PS-WP is as below:

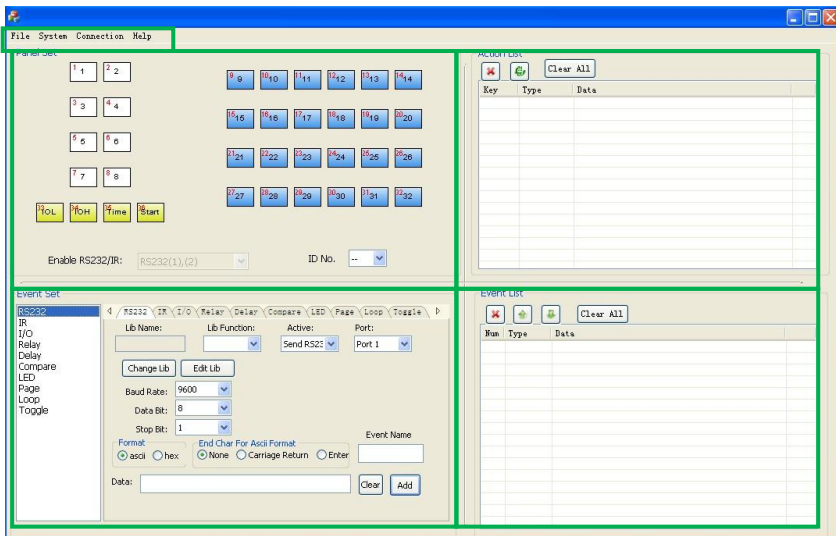


We will introduce all the configurations one by one.


5.3.1 Main Menu

The main menu includes file management, system model, connection type and help.

- 1) File management: Open/Save/Save as a configuration. After program, user can save the configuration to a file, so that you can use the same configuration next time.
- 2) System model: includes WP8-H, WP8-V, WP19R etc, and the buttons interface view are different with different models. The pictures below show the differences between WP8-V and WP8-H.

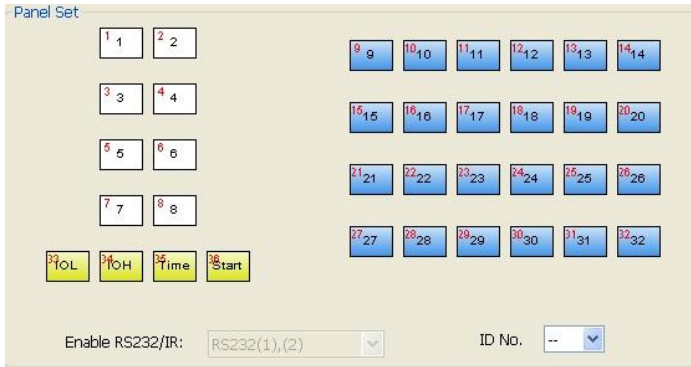


NOTICE: When select the model WP8, it will pop up “Output Port Selection” dialog, user can select different RS and IR types, depend on the uses of the two shared ports. The dialog is as the picture below:

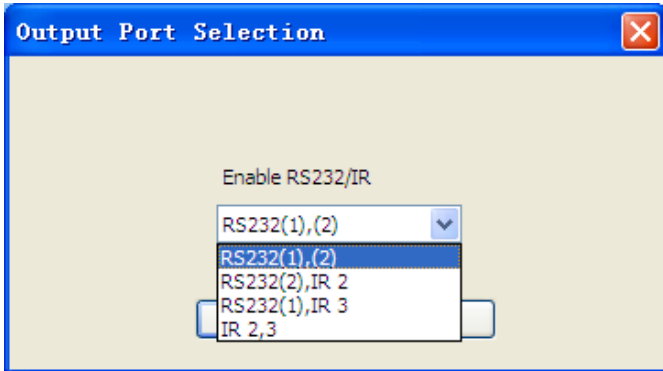

The output port set in PS-WP and the port used in WP8 is corresponding. And there are four output types. They are showed as below form (“√” means port is available):

Output port of WP8 Output mode of PS-WP	IR 1	RS232(1)	IR 2	RS232(2)	IR 3	RS232(3)	RS485
RS232(1)(2)	√	√		√		√	√
RS232(2),IR2	√		√	√		√	
RS232(1),IR3	√	√			√	√	√
IR2,3	√		√		√	√	

3) Connection type: the instructions are in the picture below:

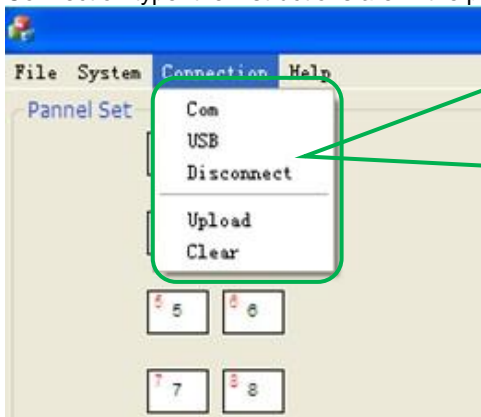


- 1: Com, connect by serial port.
- 2: USB, connect by mini USB.
- 3: Disconnect, disconnect the connection.
- 4: Upload: upload the programmed data to WP8. It will clear all the old data in WP8.
- 5: Clear, clear the data in WP8.

The functions of WP8’s buttons will be available only after the programmed data is uploading successfully.

4) Help: Show the information of PS-WP.


5.3.2 Panel/Key setting

There are three different colors of keys in the panel set of PS-WP. Add a key action to action list, then add events to this action, make this action will execute the events. Here take WP8-V for example, to introduce the uses of different buttons:

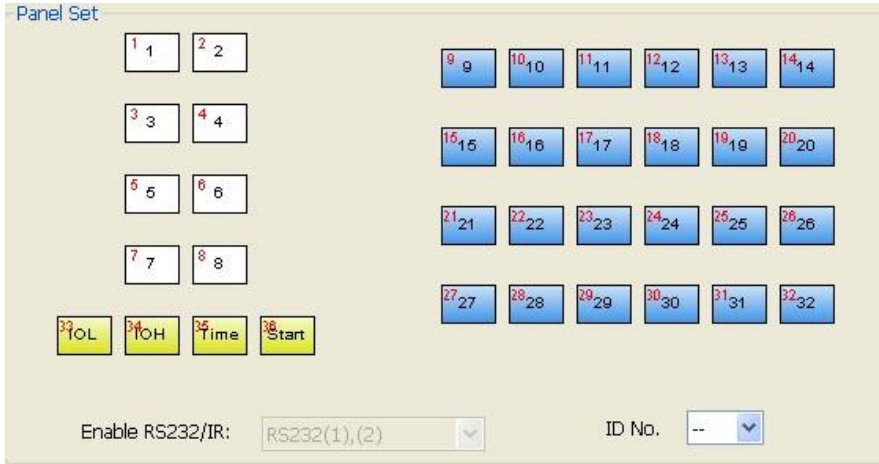


1. White keys: keys 1-8, correspond to the buttons on WP8. Click the key, it will pop up dialog as below:

- Key Action Type:
1. Press: Execute events when press button.
 2. Release: Execute events when release button.
 3. Page: Built-in most 4 actions, actions need to be switched by other buttons, press to execute.
 4. Toggle: Built-in most 4 actions, actions will loop run when press. Actions can also be switched by other buttons, press to execute.

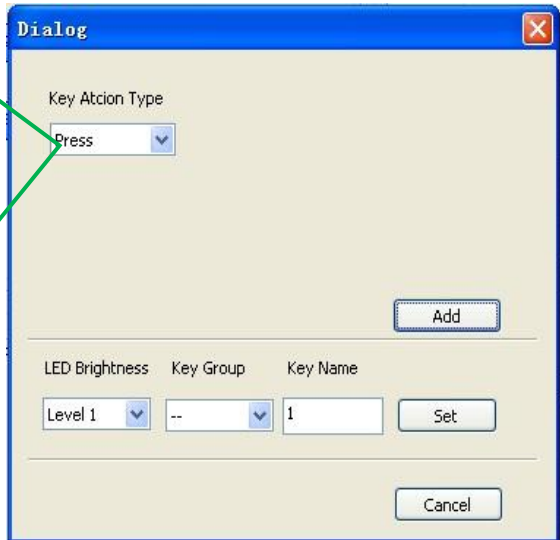


When select the type “Toggle”, the setting interface is as below:

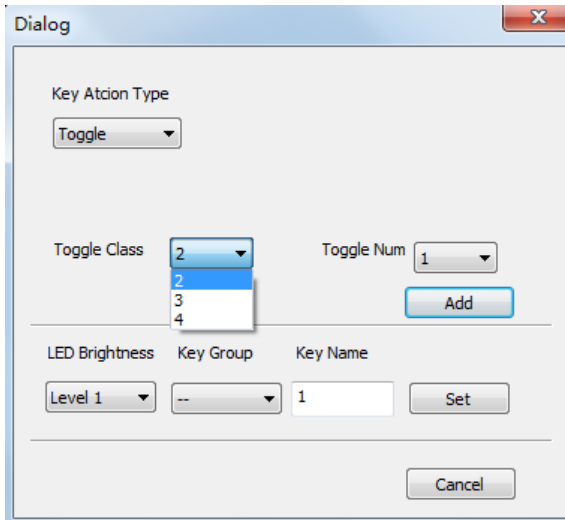

The toggle class is the action loop class, depends on the numbers of looped actions. When the class is 2, there are two actions in the toggle. And so on.

2. Blue Keys: Keys 9-32, all are virtual keys, used in the loop function. When use the loop function, the ID must be set, the ID can be 1 to 99. Press “add” will add the button to action list.
3. Yellow Keys: Keys 33-36, all are virtual keys. Key 33 and 34 are for I/O control, which is not supported with WP8. Key 36 is a start action, if add events to this action, when the WP8 is power on, it will execute the events in this action. Key 35 is delay button, there are three time slots can be set. See in the picture below:

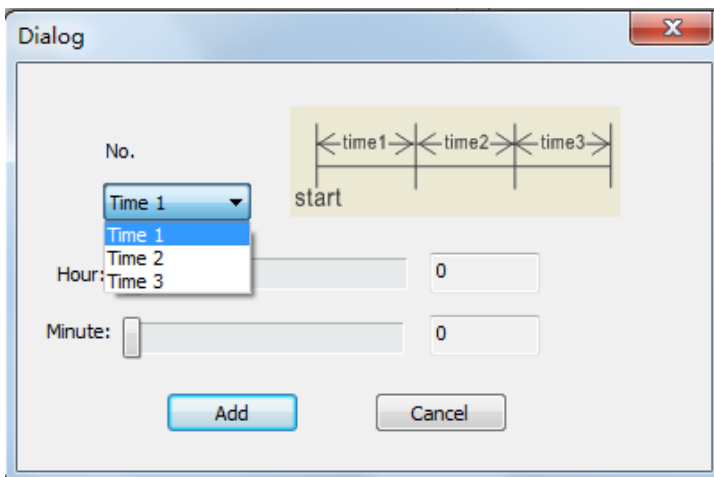


The time is counted from WP8 start. When come to time1, WP8 will execute the events in time1. Then recount from time2, and then time3.

Example: Set time1 to 5 minutes, and time2 to 3 minutes, add event1 to time1 and event2 to time2. When the unit starts, it will execute event1 after 5 minutes, and then execute event2 after 8 minutes.

5.3.3 Action list

Action list shows all the set actions. An available action must be added to the list. The action list is as the picture below:

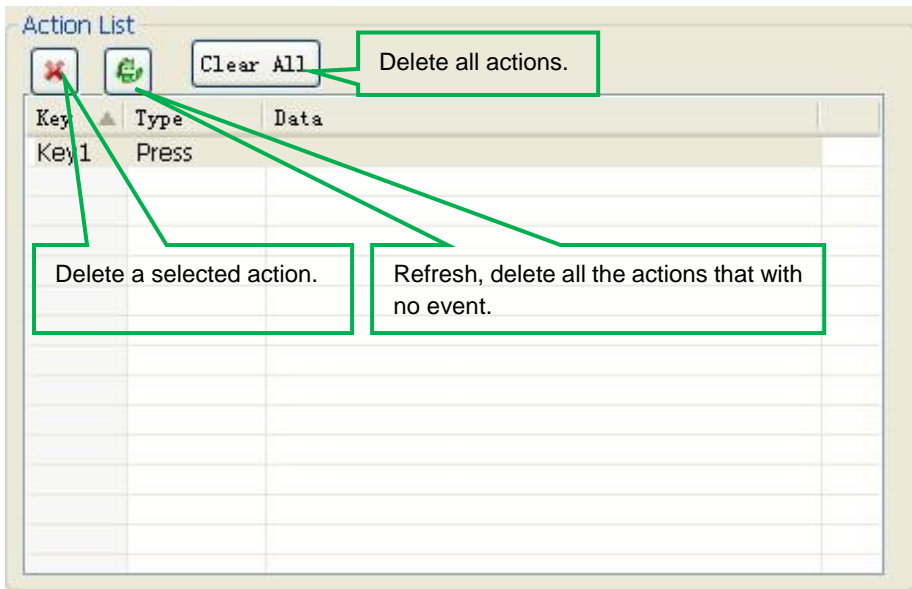


5.3.4 Event setting


Event setting includes RS232, IR, I/O, Relay, Delay, Compare, LED, Page, Loop and Toggle setting. Before set events, an action must be added first. The following introduction will show you the setting of each event:

➤ RS232 Setting

This item is used for setting the parameters of the WP8's serial ports. Click "RS232", it will show as below:

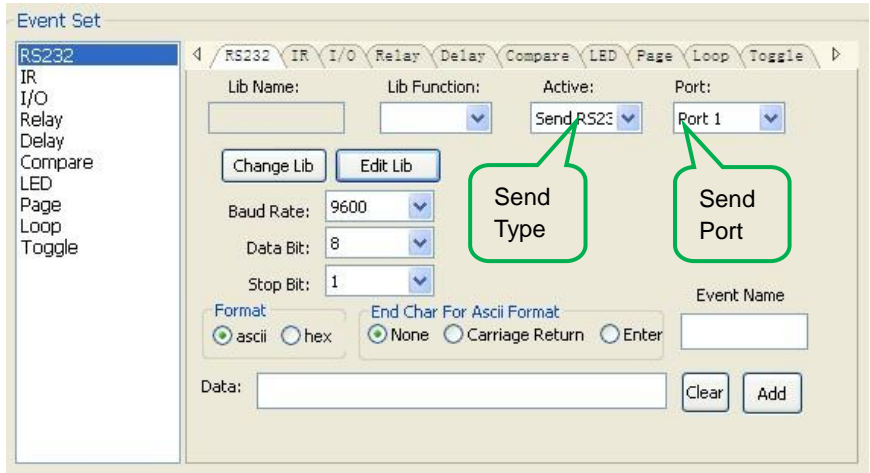


- 1) The data of RS232 can be directly entered or selected from library. Click “Change Lib” to select a library file and open it. Click “Edit Lib” to create or edit a library file as below:

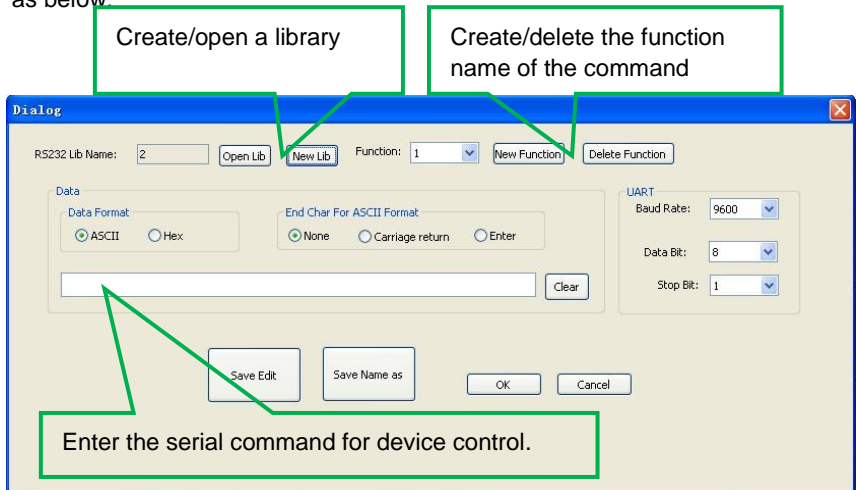

Notice: When editing finish, remember to save the editing, and then press “OK”.


- 2) There are two send types: send once and send more times. When select “more times”, the send times and the delay between times can be set. See in picture below:

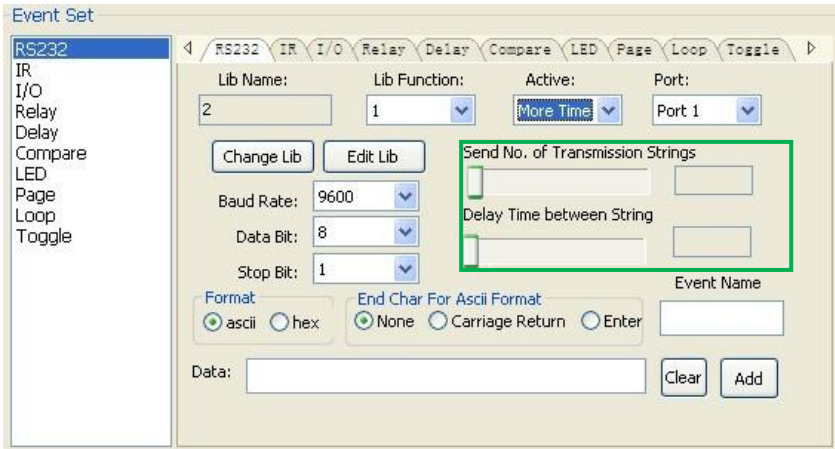


- 3) The send port must be selected as the same as model setting, otherwise the event cannot be added.
- 4) User can set the event name. It is optional function, not necessary.

➤ **IR Setting**

This item is used for setting the parameters of the WP8’s IR ports. Click “IR”, it will show as below:

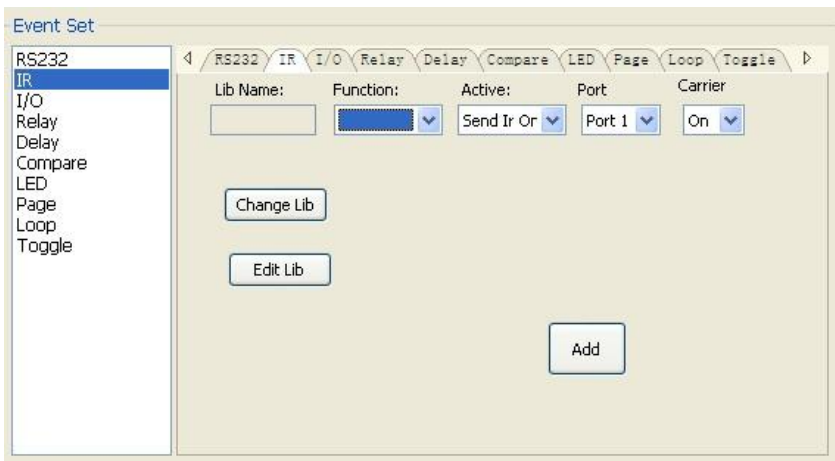


- 1) The data of IR need to be selected from library. Click “Change Lib” to select a library file and open it. Click “Edit Lib” to create or edit a library file as below:

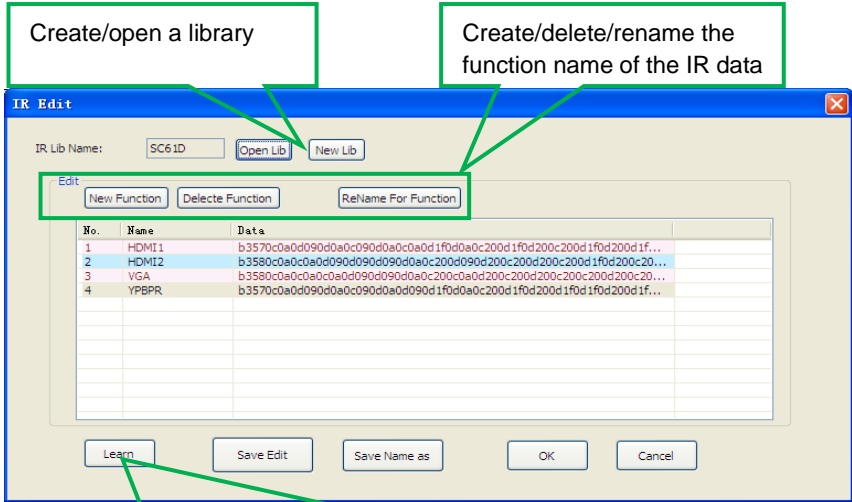

Select a function, and then click “learn”, press the IR remote button to send the IR code to infrared sensor port, it will refresh the IR data. Follow the same steps can learn any function of the remote buttons.

Notice: When editing finish, remember to save the editing, and then press “OK”.

- There are two send types: send once and send more times. When select “more times”, the send times and the delay between times can be set. See in picture below:

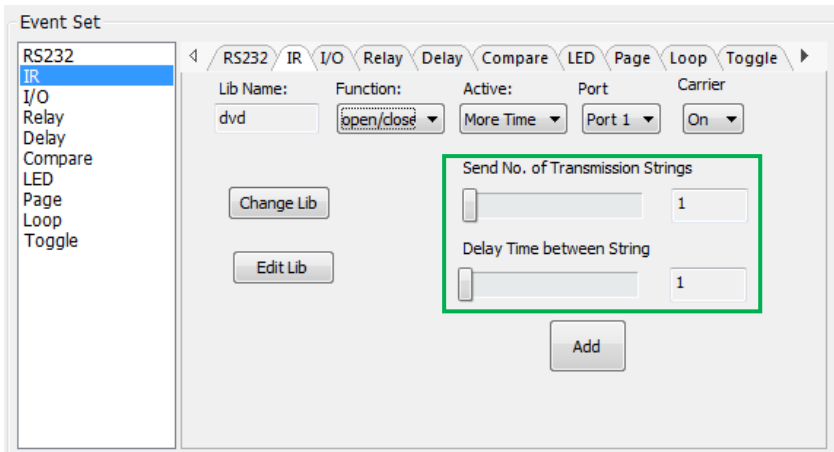

- The send port must be selected as the same as model setting, otherwise the event cannot be added.
- The IR can set the carrier on/off, to turn on/turn off the IR sending.


Programmable Control Panel

➤ I/O Setting

There is no I/O port in WP8, so the setting is not introduced in this manual.


➤ Relay Setting

This item is for the replay ports setting. The setting is as the picture below:

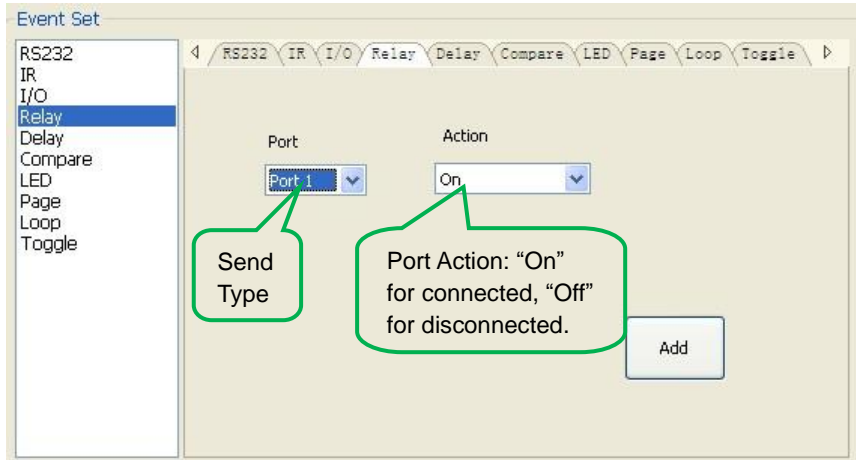


➤ Delay setting

This item is to set a delay time, user can add a delay between two events; so when one event is finished, it will delay a certain time then start another event. The delay setting is as picture below:

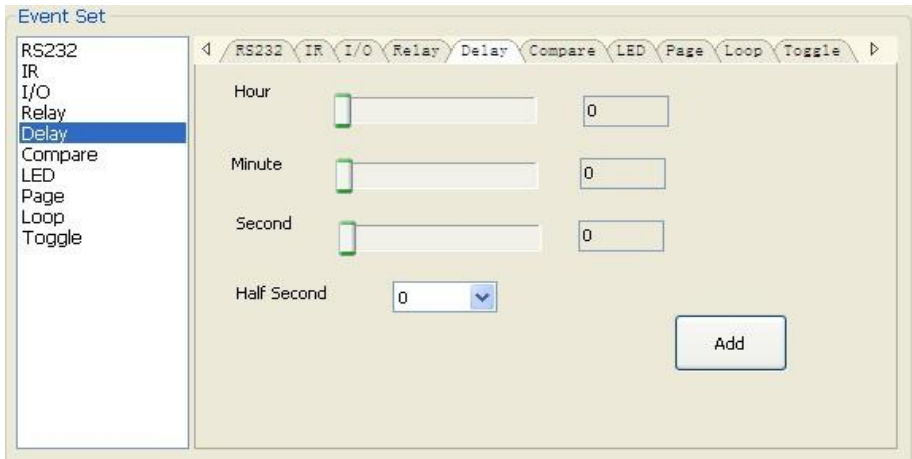

➤ **Compare Setting**


This item is used for compare the feedback of RS232 commands. When WP8 send a RS232 command to the controlled device, the device will send back a feedback. If we add the correct feedback in the data, WP8 will compare it with the feedback received from controlled device, to verify the command is work or not. The compare setting is as the picture below:

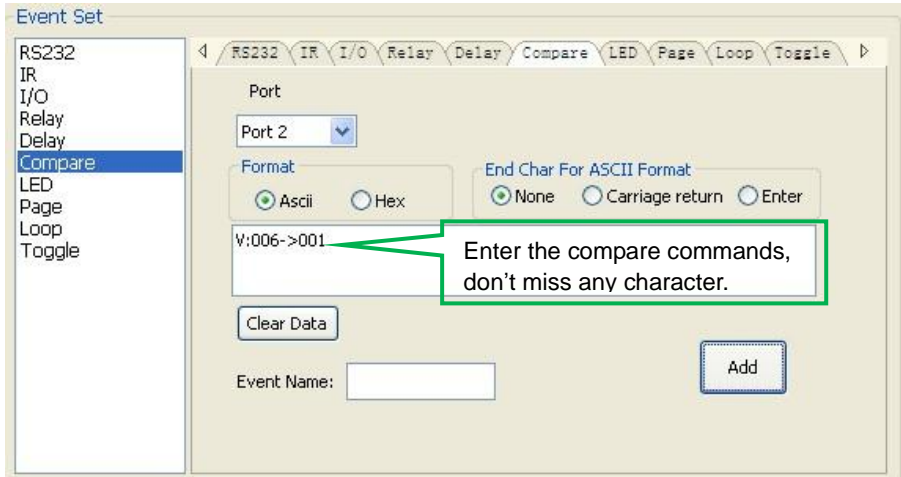

- 1) The send port must be selected as the same as model setting, otherwise the event cannot be added. And port 1 cannot be used for compare, for there is no a receive pin in this port.
- 2) User can set the event name; it is optional function, not necessary.
- 3) For the events in one event list have priority, from top to bottom, so that the compare function can be used in action which with three or more events. When send a serial command, we can add a compare then other events. If the compare is incorrect, the event behind compare will not be executed.

➤ **LED setting**


This item is used for set the button LEDs in WP8 to turn on/off. The setting is as below:

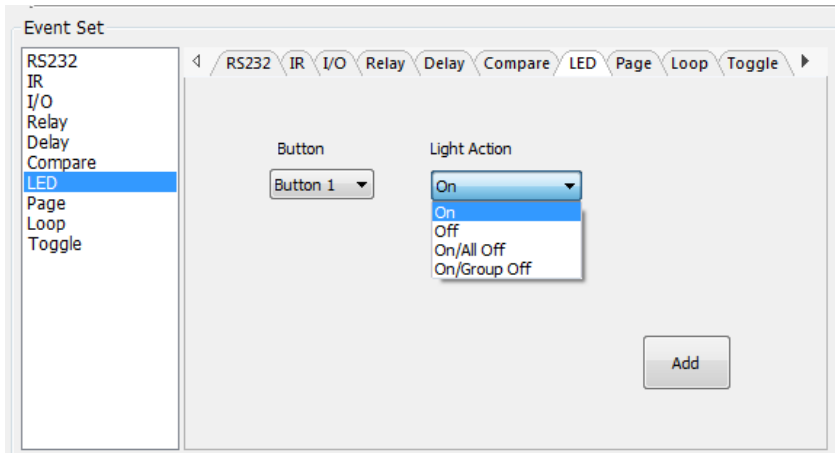


➤ **Page setting**

White buttons can be set to type “page” that include four actions. To change different actions, it will need other white buttons to activate the page action number. Here take an example to show you the use of this function:

- 1) Take button1 for example: click key1 and select the action type “page”, add the four actions to the action list. Then add other four buttons “press” action to the list (here take keys 5-8 for example):

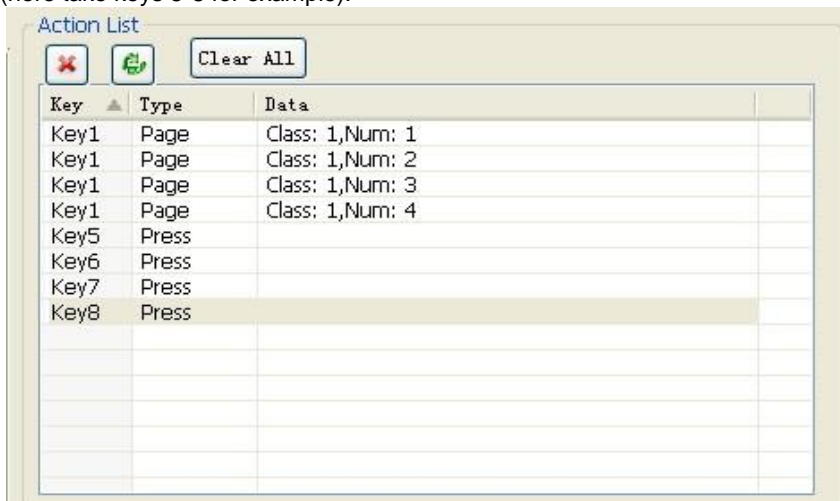

- 2) In event setting, we add four different events to the four page actions of key1, and the four other keys will be added the page event to each of them as below:

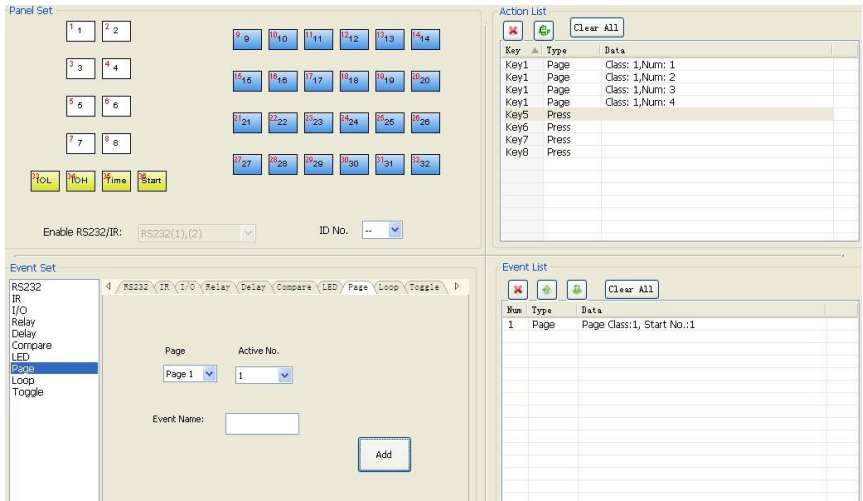

Then set the “page” event to make four “press” actions to active the four page number: key5-num1, key6-num2, key7-num3 and key8-num4. It will perform like this:

- a) When press the button5 and then button1, the button1 will execute the event of num1, press button1 more times it will execute num1 more times;
- b) When press the button6 and then button1, the button1 will execute the event of num2, press button1 more times it will execute num2 more times;
- c) When press the button7 and then button1, the button1 will execute the event of num3, press button1 more times it will execute num3 more times;
- d) When press the button8 and then button1, the button1 will execute the event of num4, press button1 more times it will execute num4 more times.


➤ **Loop Setting**

This item is used for looping WP8. When use the loop function, the ID of each WP8 must be set.



➤ **Toggle Setting**

The toggle setting is as the picture below:

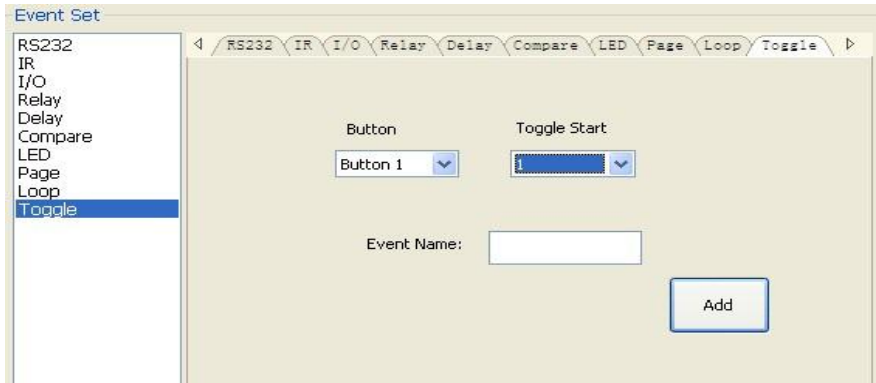

The setting steps of toggle are similar with the page setting. But toggle performs differently, for the actions in it are loop running, it will perform as below (take the same example like page function):

- a) When press the button5 and then button1, the button1 will execute the event of num1, press button1 more times it will execute num2, then num3->num4->num1 and so on.
- b) When press the button6 and then button1, the button1 will execute the event of num2, press button1 more times it will execute num3, then num4->num1->num2 and so on.

- c) When press the button7 and then button1, the button1 will execute the event of num3, press button1 more times it will execute num4, then num1->num2->num3 and so on.
- d) When press the button8 and then button1, the button1 will execute the event of num4, press button1 more times it will execute num1, then num2->num3->num4 and so on.

5.3.5 Event List


The event list shows all events of the selected action, and for each action of WP8, the most events can be added is ten. The executing priority is from 1 to 10, see the picture below. If there is an event execute incorrectly, all the events behind it will not be executed.

Num	Type	Data
1	Loop	ID:2, Action Key:6
2	Toggle	Button 8 : Start No. 1
3	RS232	Baud:9600,Port:2,Send Once
4	Compare	Port 2
5	Delay	Time Hour:0 Minute:0 Second:1s
6	Led	Button 1 On/Group Off
7	IR	Lib:dvd,Fun:open/close,Port:1,Send Once
8	Relay	Port 2 On
9	Delay	Time Hour:0 Minute:0 Second:5s
10	Led	Button 1 Off

6. System Diagram

The WP8 can active different ports at one time. It means every button can send the RS232 and RS485 commands, IR code and control the relay at the same time.

The demo system diagram as below:

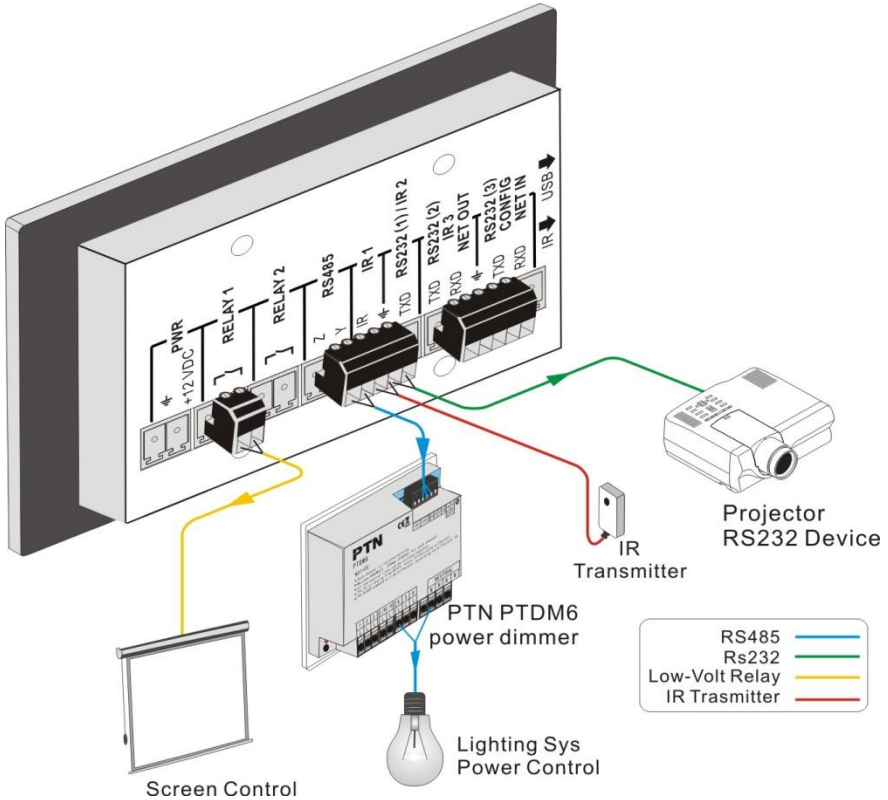

System Diagram

7. Troubleshooting & Maintenance

- 1) When WP8 cannot work, please check and make sure the power cord connection is well, power connector cannot be mixed or connect wrong. Then restart, if still not work, the WP8 may be broken. Please send it to the dealer for repairing.
- 2) When USB cannot open or without response, please make sure the USB driver is installed correctly, and then reconnect the USB cable.
- 3) When uploading the USB cannot be found, please restart the software or WP8.
- 4) When the LED of a button cannot be lighted, please check if there is a compare event in this button. If yes, delete the compare and try again. If still not work, the LED may be broken. Please send the unit to dealer for repairing.
- 5) When serial commands sending without function executed, please check the baud rate and make sure is correct, and the serial connection is well.
- 6) If the controlling queue is confused when use loop function, please reboot the WP8.

8. Safety Operation Guide

In order to guarantee the reliable operation of the equipments and safety of the staff, please abide by the following proceeding in installation, using and maintenance:

- 1) The system must be earthed properly. Please do not use two blades plugs and ensure the alternating power supply ranged from 100v to 240v and from 50Hz to 60Hz.
- 2) Do not put the switcher in a place of too hot or too cold.
- 3) As the power generating heat when running, the working environment should be maintained fine ventilation, in case of damage caused by overheat.
- 4) Please cut off the general power switch in humid weather or left unused for long time.
- 5) Before following operation, ensure that the alternating current wire is pull out of the power supply:
 - Take off or reshipe any components of the equipment.
 - Take off or rejoin any pin or other link of the equipment.
- 6) As to non-professional or without permission, please DO NOT try to open the casing of the equipment, DO NOT repair it on your own, in case of accident or increasing the damage of the equipment.
- 7) DO NOT splash any chemistry substance or liquid in the equipment or around.

9. After-sales Service

- 1) If there appear some problems when running WP8, please check and deal with the problems reference to this user manual. Any transport costs are borne by the users during the warranty.
- 2) You can email to our after-sales department or make a call, please tell us the following information about your cases.
 - Product version and name.
 - Detailed failure situations.
 - The formation of the cases.
- 3) We offer products for all three-year warranty, which starts from the first day you buy this product (The purchase invoice shall prevail).
- 4) Any problem is same with one of the following cases listed, we will not offer warranty service but offer for charge.
 - Beyond the warranty.
 - Damage due to incorrectly usage, keeping or repairing.
 - Damage due to device assembly operations by the maintenance company non-assigned.
 - No certificate or invoice as the proof of warranty.
 - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - Damage caused by force majeure.

Remarks: For any questions or problems, please try to get help from your local distributor, or email PTN at: support@PTN-electronics.com.