

HOW TO.

Configure QR code access solution in AXIS Camera Station

Contents

Introduction	3
Step 1 – Adding/updating & setting up devices	4
To add the devices	5
To update the devices	6
To setup the devices	7
Step 2 – Configuring SMTP Server	9
To configure SMTP server	9
Step 3 – How to create/edit a schedule	10
Creating/editing a schedule to use is Secure Entry	10
Step 4 – Configuring QR identification profile	11
To create the QR identification profile	11
Step 5 – Creating a door with a barcode reader	12
To create a door/add a QR reader to existing door	12
To apply QR identification profile to door after the door is created	14
Step 6 – Configuring the AXIS Barcode ACAP	15
To configure the ACAP	15
Step 7 – Creating and sending the Static or Dynamic QR code credential	18
To create the QR Code credential	18
Step 8 – Using AXIS Mobile Credential	22
How to use the AXIS Mobile Credential	22
Considerations and limitations	23


Introduction

This how to document will show you how to set up the selected device(s) as a QR reader and how to configure QR code as a credential within Axis Camera Station.

AXIS Camera Station Secure Entry offers reliable, convenient and cost-effective, QR code based access solution for visitors. It allows you to provide QR code credential and access management without the complications, or waste of purchasing, managing, and disposing of physical cards.

It's ideally suited to a mobile-first society: in advance of a visit, trusted guests are sent a QR code with a specific date of validity from AXIS Camera Station Secure Entry, which they can store on a mobile device or print. When they present the code to the camera or intercom, with AXIS Barcode Reader ACAP installed, during the valid window, relevant data is sent to an Axis door controller, granting access.

Please find below as the system structure of QR code access solution.

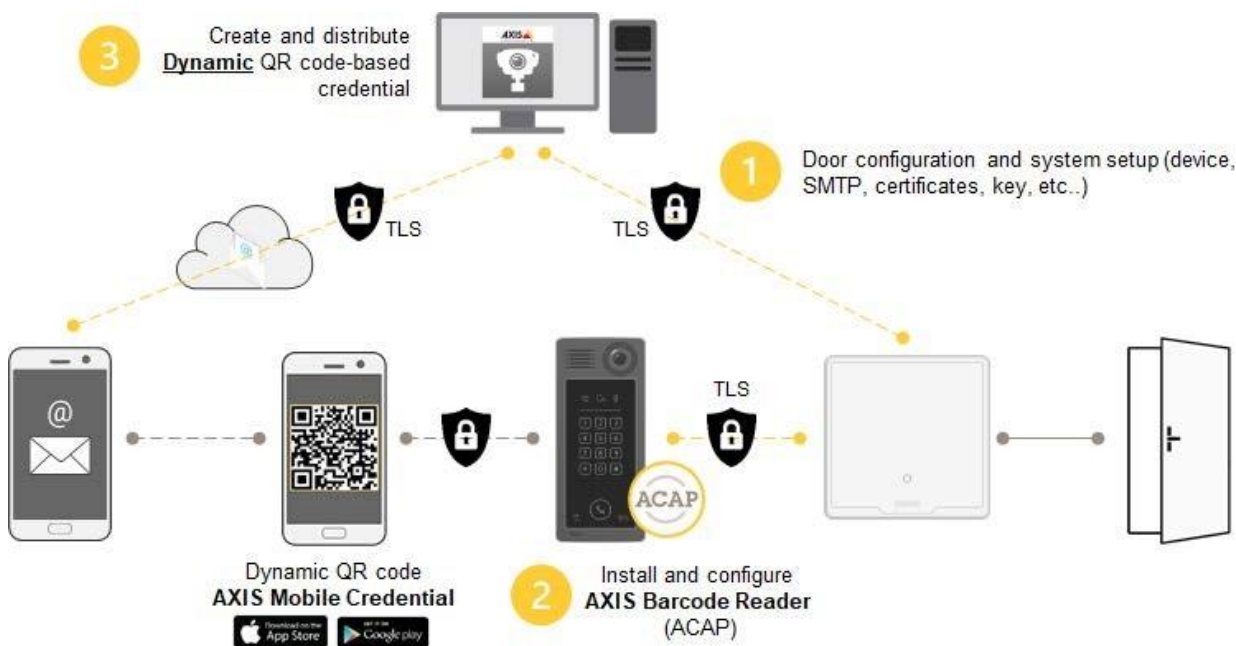

Prerequisites

AXIS Barcode supported Intercom or Camera

AXIS A1601 Door Controller 10.11.30.1 or later

AXIS Camera Station 5.47 or later

AXIS Barcode Reader ACAP 1.1.1 or later

AXIS Barcode Reader ACAP License

Please note that Axis doesn't take any responsibility for how this configuration may affect your system. If the modification fails or if you get other unexpected results, you may have to restore the settings to default.


Step 1 – Adding/updating & setting up devices

Start by adding the unit(s) to Axis Camera Station and ensuring that they are running the latest firmware. For the devices used we require the use of HTTPS for end-to-end security, these devices should also use ACS as an NTP. Only the door controller is required to be added to Axis Camera Station, but the intercom or camera can be added. Ensure either way that all devices are on the latest firmware.

To add the devices

Follow these steps if you need to add the devices:


1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Devices” and under this drop-down select “Add Devices”
3. On this page if the units are in your network, you should see them, if they are missing then you can try do a manual search via the button “Manual Search”. If they still cannot be found, please check the units are powered and are on the same network.
4. If the units are greyed out, this means they require the password for the unit, this is entered by clicking on the “Enter password” under status for the unit.
5. Once you see the units you wish to add, you can hold down the “ctrl” key and select the units, then click add found on the bottom left.
6. Follow the pop-up wizard to add these devices

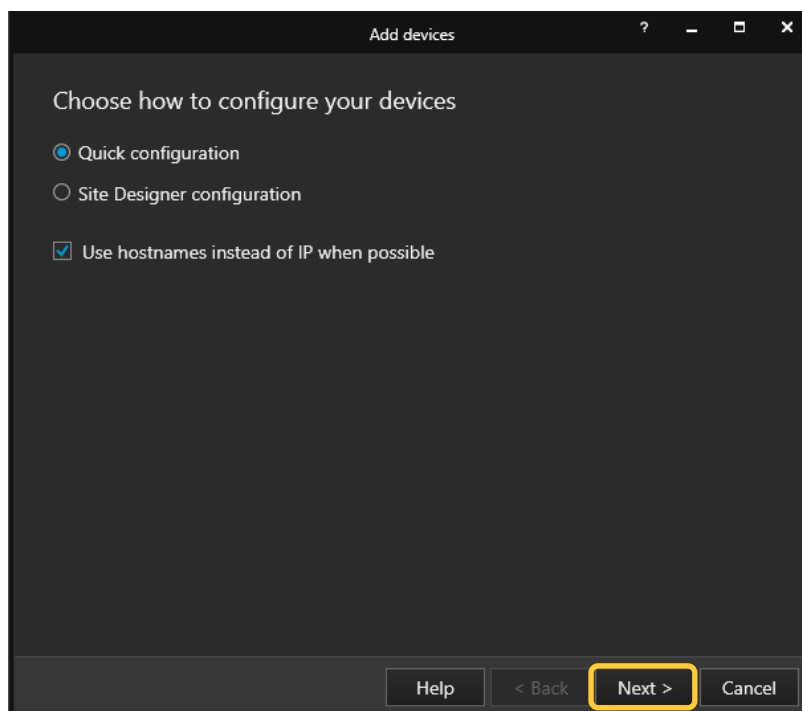

To update the devices

Follow these steps to update your devices:


1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Devices” and under this drop-down select “Management”
3. From this page hold “ctrl” and select the devices, once selected press the update firmware button.
4. In the popup select the latest firmware in the list for each device (for the A1601 ensure to select the latest Secure Entry track) and press “OK”
5. The update can be monitored via the “tasks”

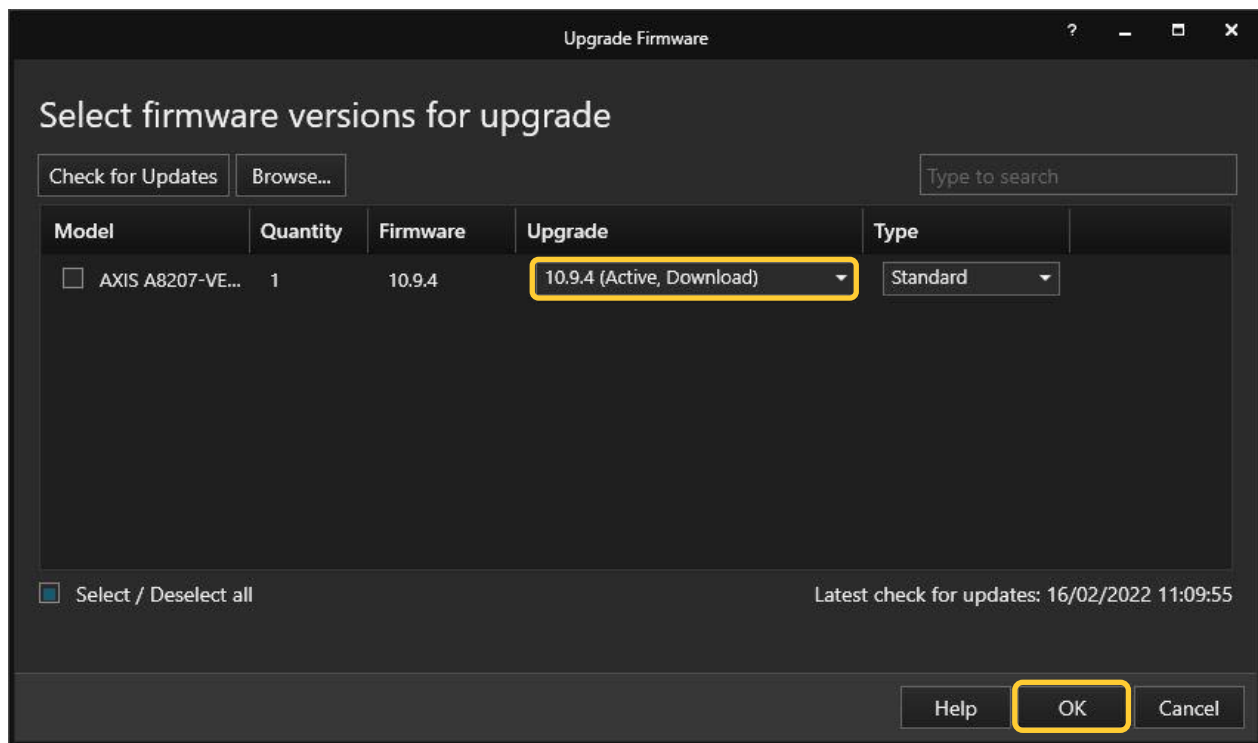


To setup the devices

Follow these steps to setup your devices:


1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Devices” and under this drop-down select “Management”
3. Right click on the device and select “Security – HTTPS – Enable/Update”

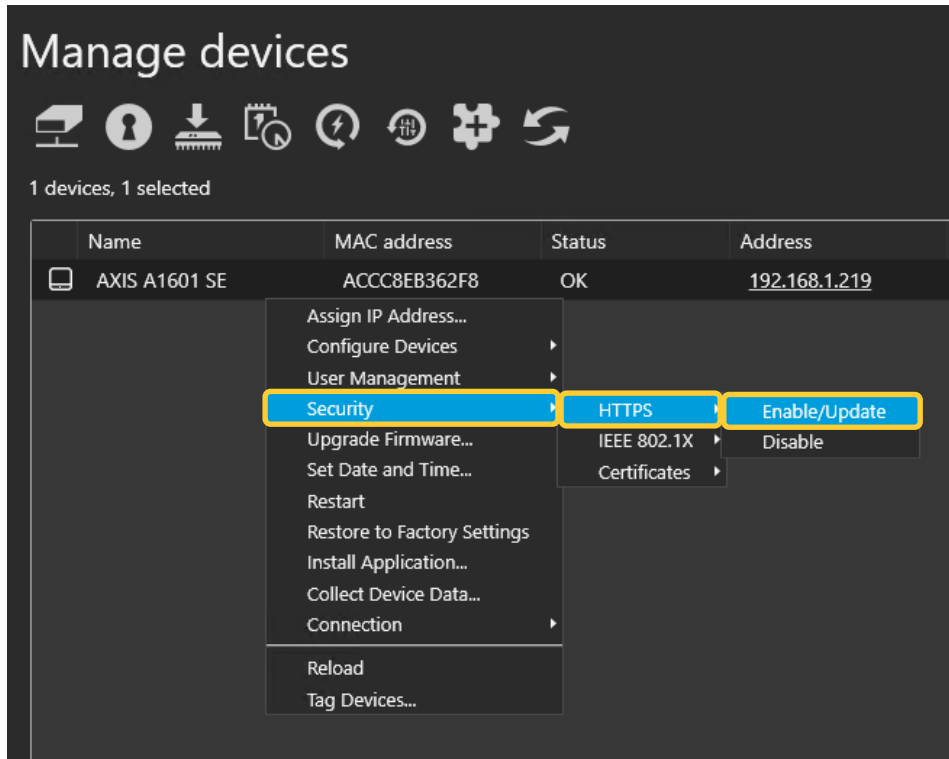


4. This will create a task in the task and alarms, once this has completed, HTTPS is enabled on this device.

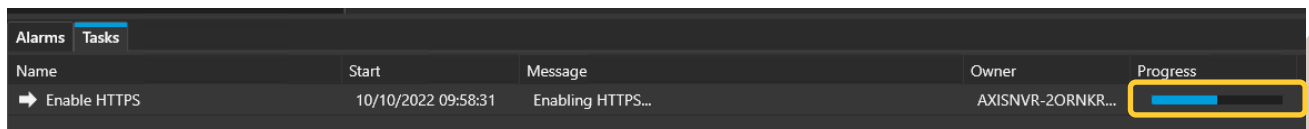


- Next to setup is the time & date on the device, we do this but right clicking on the device in Devices – Management and selecting “Set Date and Time...”

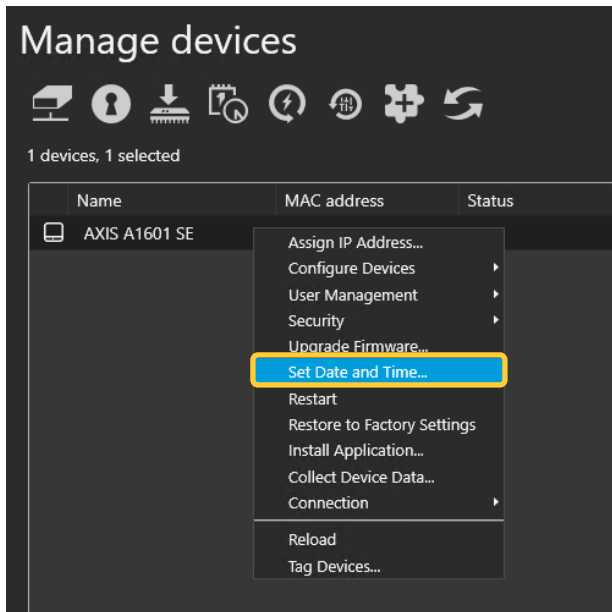

- In the pop-up select yes, In the next pop-up under “Time Mode” choose the first option, “Synchronize with server computer time”

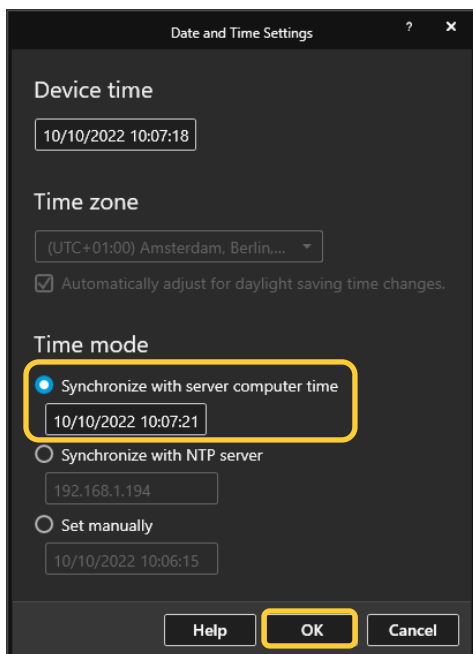

- This will then add a task in the task and alarms, once completed the time will now be synced with the computer server time.



Step 2 – Configuring SMTP Server

To configure SMTP server

To be able to send out the QR code credentials we need an SMTP (Simple Mail Transfer Protocol) to be configured as this allows AXIS Camera Station to have a chosen mail address to distribute the credentials from, please note that this is not something Axis Communications provides.

Follow these steps to configure SMTP server:

1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Server” and under this drop-down select “Settings”
3. On this page press “Add..” under “SMTP servers” and in this pop-up fill in your SMTP server details and press “OK”

The screenshot shows a dark-themed dialog box titled "Add SMTP Server". It is divided into three sections: "Server", "User", and "Logon".

- Server:** Contains two input fields: "Address" (empty) and "Port" (containing "25").
- User:** Contains two input fields: "Your name" (empty) and "E-mail address" (empty).
- Logon:** Contains a checkbox for "Use authentication:" (unchecked), followed by "Username:" and "Password:" input fields (both empty). Below these is another checkbox for "Use TLS" (unchecked).

At the bottom of the dialog are three buttons: "Help", "OK" (highlighted with a yellow border), and "Cancel".

Step 3 – How to create/edit a schedule

Creating/editing a schedule to use in Secure Entry

These schedules would be used for setting specified time periods for identification profiles and access times for cardholders or door unlock schedules.

Follow these steps to create a schedule:

1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Recording and events” and under this drop-down select “Schedules”
3. To edit a schedule, highlight the schedule you wish to edit, if you wish to create a new schedule, press new.
4. To edit this schedule hold and drag the cursor along the time for each day that you want the schedule to be running. Blue highlighted will be the active times on each day.
5. Once you are happy with your schedule you can provide it with a new name in the name field and click apply.

The screenshot displays the 'Schedules' configuration page in Axis Camera Station. At the top, there is a search bar labeled 'Type to search'. Below it, a table lists existing schedules with columns for 'Name' and 'Used'. The listed schedules are 'Office Hours', 'Weekends', and 'New schedule'. Below the table, there are 'New' and 'Remove' buttons. The main area shows a detailed view for the 'Office Hours' schedule. The 'Name' field is highlighted with a yellow box and contains the text 'Office Hours'. To the right, there are checkboxes for 'Schedule on' (checked) and 'Schedule off'. Below this is a 'Week schedule' grid with time slots from 00:00 to 06:00. The grid shows blue bars indicating the active schedule times for each day of the week. To the right of the grid is an 'Override schedule' section with an 'Add...' button. At the bottom right, the 'Apply' button is highlighted with a yellow box. A small note at the bottom left of the grid area reads: 'Hold Ctrl to select 5 minute intervals. To copy and paste day schedules, use right click.'

Step 4 – Configuring QR identification profile

To create the QR identification profile

If you are wanting a multi-factor authentication or multiple types of credentials (card or QR) you will need to create a new identification profile, the QR code credential can be used with any of the other types to add another level of security.

Follow these steps to create:

1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
1. From the left menu select “Access control” and under this drop-down select “Identification Profiles”
2. On this page QR as an identification alone exists, to create a new identification type select “+ Create identification profile”
3. Give the profile a name and for each side configure the required credentials using the “+ Add” then in the drop-down tick the identification types you wish to be presented to grant access, after select the schedule this applies too. Then select “Ok” in the bottom right.

Identification profiles
Create identification profiles to configure how and when to access a door from a specific side.

+ Create identification profile

Edit identification profile
QR + Card Always

Side A
Configure identification profiles for accessing the door from side A.

Identification type	Schedule
Card & QR	Always

Side B
Configure identification profiles for accessing the door from side B.

Identification type	Schedule
Card & QR	Always


Step 5 – Creating a door with a barcode reader

To create a door/add a QR reader to existing door


If you have a door already configured in your system and wish to add the QR reader, click on the three dots and select “edit” once on the config screen follow from step 5

Follow these steps to create a door:


1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Access control” and under this drop-down select “Doors and zones”
3. On this page press “+ Add door” and in the pop-up give the door a relative name and select the A1601 door controller in the second drop down, then press “Next”
4. Proceed to configure the locks with the correct relay and door monitors (if used)
5. On the side you wish to have the barcode reader select “Add reader”

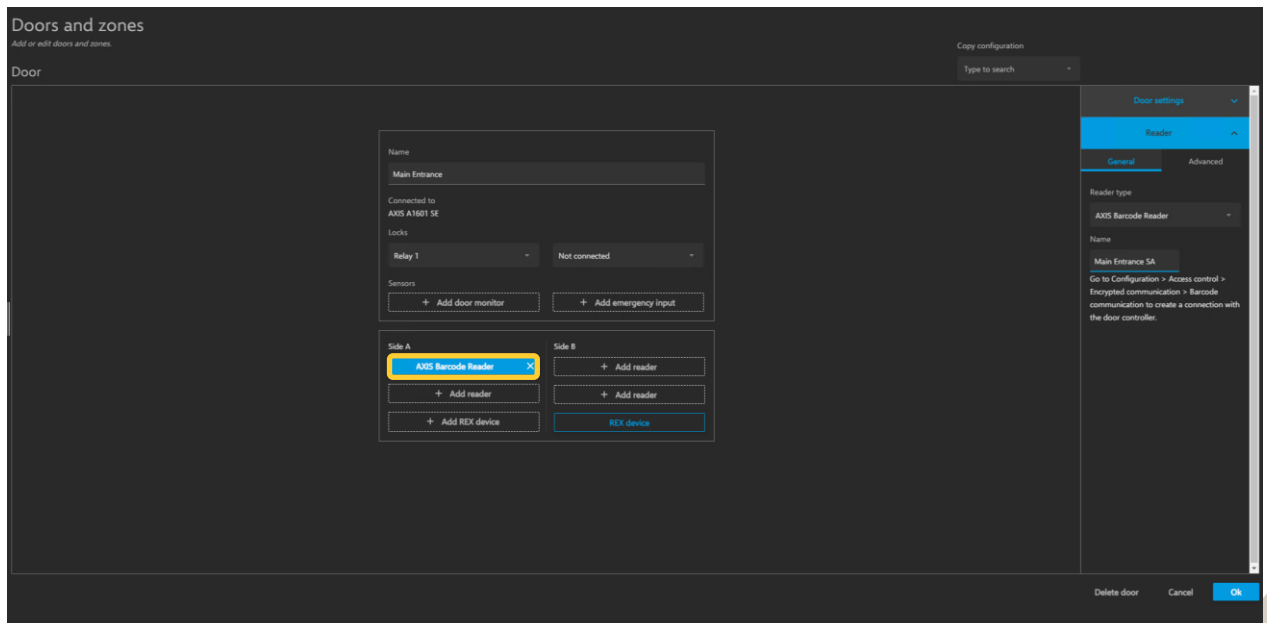

- On the right pop-up select reader type “Axis Barcode Reader”

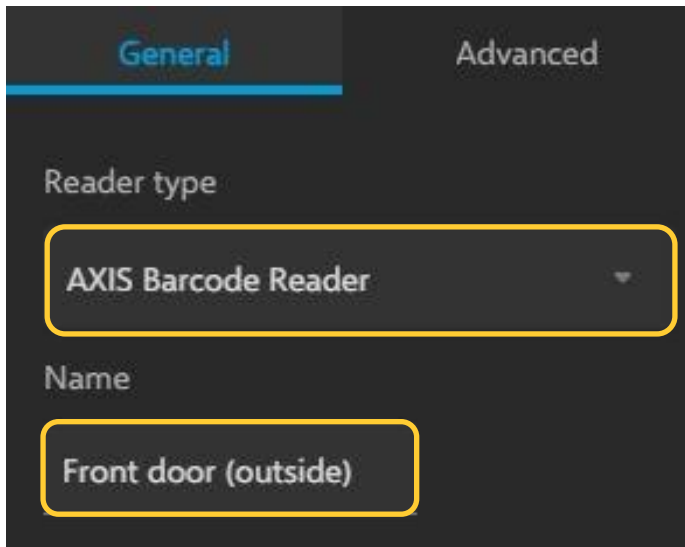

- Give this reader a relative name, continue to configure any remaining readers and/or REX and finish by selecting “Ok” bottom right.
- Once created, open the “door settings” drop-down on the right. In this drop-down you can change the “identification profile” to QR.
- You can also add any additional readers/inputs you may have connected to this door such as a card reader or REX.

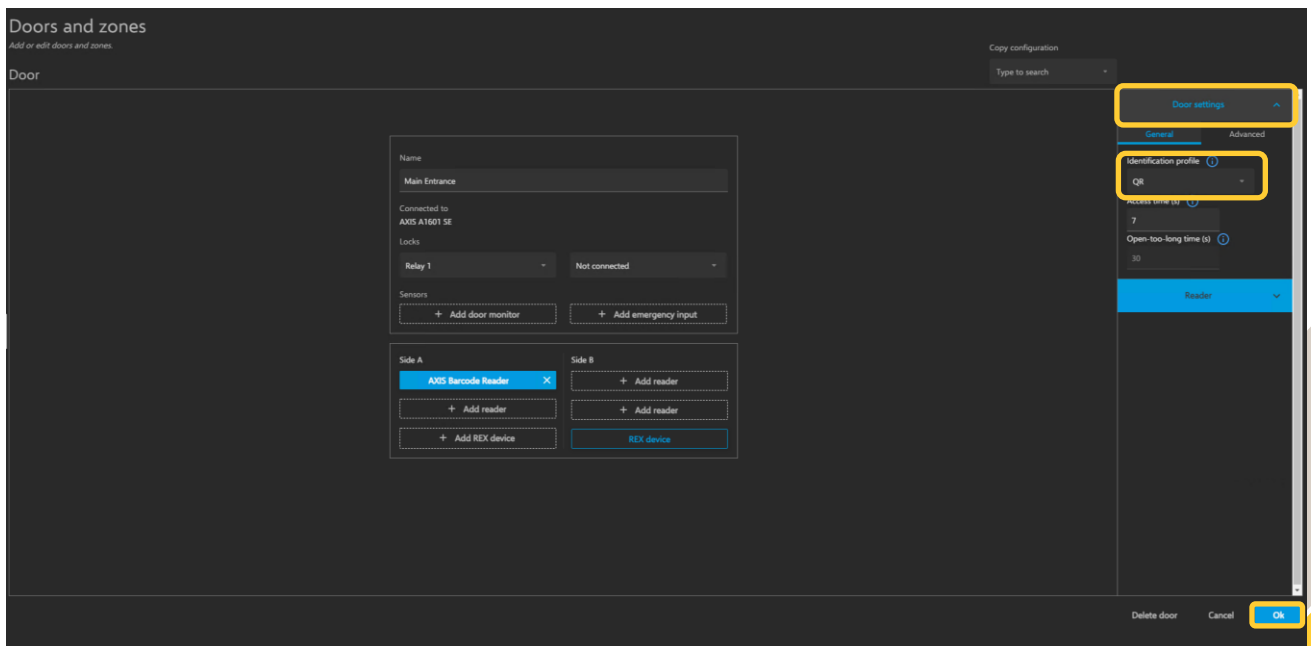


To apply QR identification profile to door after the door is created

If you create a new identification profile or wish to change to another after creating the door, this can be done from the Doors and zones page.

Follow these steps to apply:

1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Access control” and under this drop-down select “Doors and zones
3. Highlight the specific door and click “Select identification profile”
4. In the pop-up window select the identification profile you wish to use, and click “Apply”

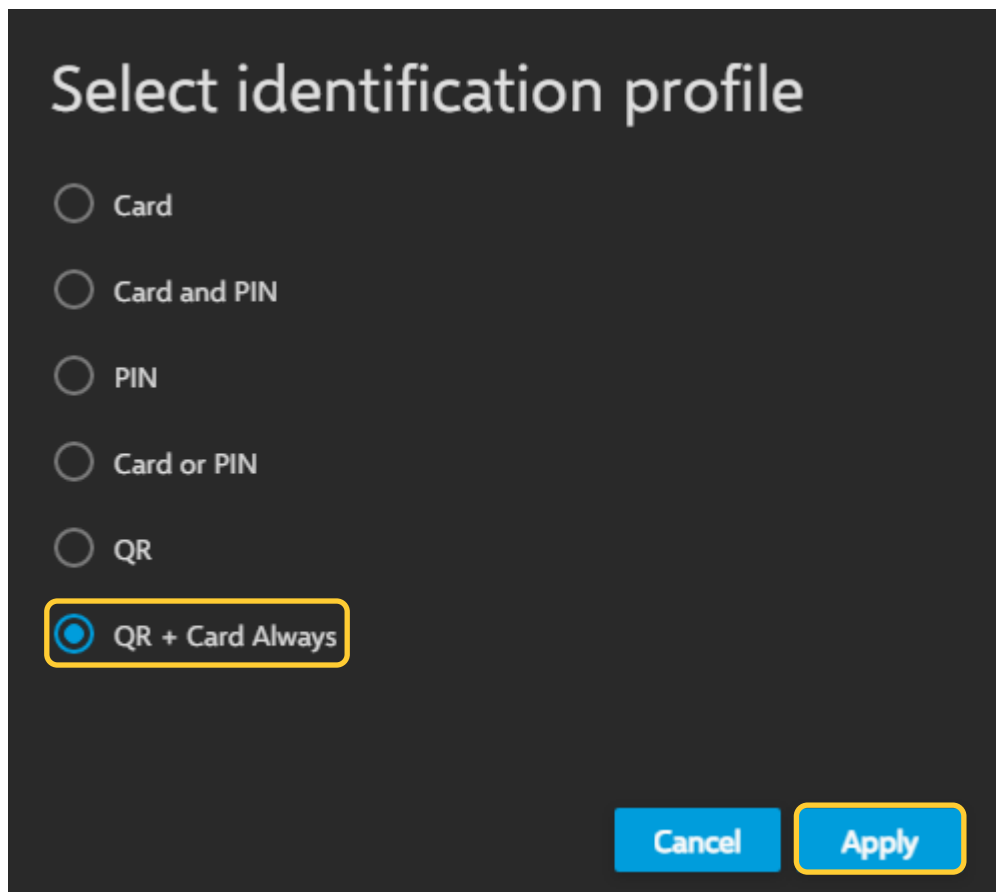

Step 6 – Configuring the AXIS Barcode ACAP

To configure the ACAP

Next we need to configure the ACAP (Axis Camera Application Platform) this is installed and configured directly on the device which will be reading the QR code credentials, as this is used to connect the created reader in AXIS Camera Station to the device allowing the QR code access. The ACAP allows us to connect up to 5 AXIS A1601 Door Controllers to a single device using the ACAP

The installation and licensing of the ACAP can be done via ACS or directly on the device.

Follow these steps to install via ACS:


1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Devices” and under this drop-down select “Management”
3. Highlight the device and click the install application symbol (puzzle piece with +)
4. Choose “Browse to Application” select the barcode ACAP file and press “Next”.
5. Say yes to installing licenses and press “Next”
6. Click “Browse” and select the license file, then press “Next”
7. Finally click “Finish”

Follow these steps to install via the webpage:


1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen.
2. From the left menu select “Devices” and under this drop-down select “Management”
3. Then click on the IP address of the supported device (you can access this via a browser instead)
4. On this tab select “Services” then “+ Install app” on the next page select the AXIS Barcode ACAP file and click “Install”
5. Once installed, from the services page select “settings” on the AXIS Barcode Reader ACAP.
6. Click “Activate Licence” on this page select the licence file or enter in the licence key and click “Ok”

Follow these steps to configure:

1. From the management page in ACS, click on the IP address of the device to open a new tab displaying the web GUI, from here select “services”
2. Now you can start the AXIS Barcode ACAP and select “Open”
3. Under “Integration” toggle on “AXIS Camera Station Secure Entry” now under “Door Controller #1” add the IP address of the AXIS A1601 Door Controller used to create the door previously. (The IP address can be found in AXIS Camera Station under Configuration – Devices – Management)
4. To get the Authentication key, in AXIS Camera Station under the “Configuration” tab select “Access control” then “Encrypted communication” on this page select “show Authentication key” under “AXIS Barcode Reader” and press “copy key”

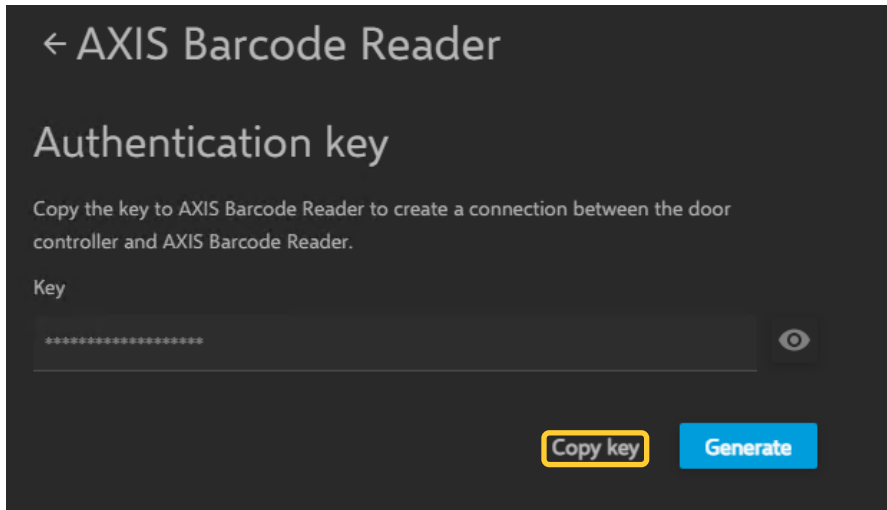

5. Return to the ACAP tab/webpage and paste in the Authentication key, now on the right should be the controller with the name given to the door, use the drop down to select the barcode reader we had created previously.

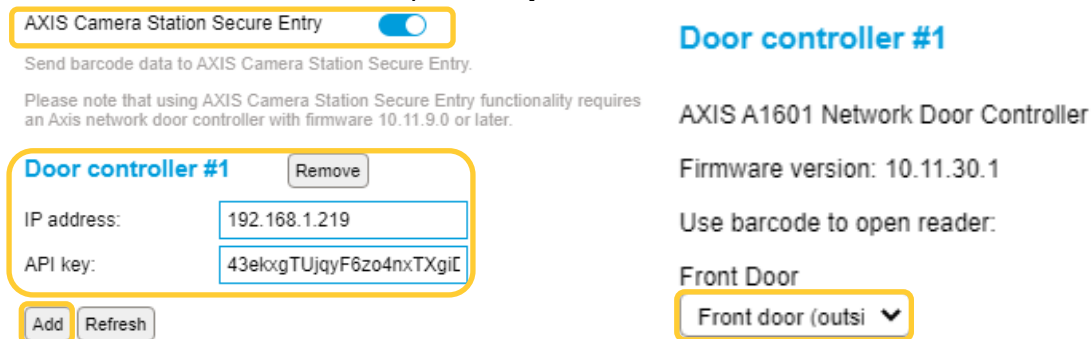

- From this ACAP we can also add up to 5 door controllers using the add button, each one added in the same way as we did with the 1st controller. This allows one ACAP to control 5 different doors.

AXIS Camera Station Secure Entry

Send barcode data to AXIS Camera Station Secure Entry.

Please note that using AXIS Camera Station Secure Entry functionality requires an Axis network door controller with firmware 10.11.9.0 or later.

Door controller #1

IP address:

API key:

Door controller #2

IP address:

API key:

Door controller #3

IP address:

API key:

Door controller #4

IP address:

API key:

Door controller #5

IP address:

API key:

Up to five controllers can be connected.

NOTE

For more details on how to configure the AXIS Barcode Reader ACAP please visit the product page on Axis.com


Step 7 – Creating and sending the Static or Dynamic QR code credential

To create the QR Code credential

Now we can provide the QR code credential to either new or existing cardholders. These credentials allow quick safe access to your premise without the need for physical credentials.

Follow these steps to create:

1. In Axis Camera Station open the configuration tab via the “+” symbol found at the top of the screen. And select “Access management”
2. From this page you can either create a new cardholder via the plus button on the cardholder area and select the cardholder bubble. If you wish to add a QR code to an existing cardholder, find them in the cardholder area and click the three dots and “edit”.
3. In the cardholder, fill out the name and email address fields, (the email address is required to be able to send QR code credentials to cardholders) then under credentials click the “+” and select the QR symbol button.

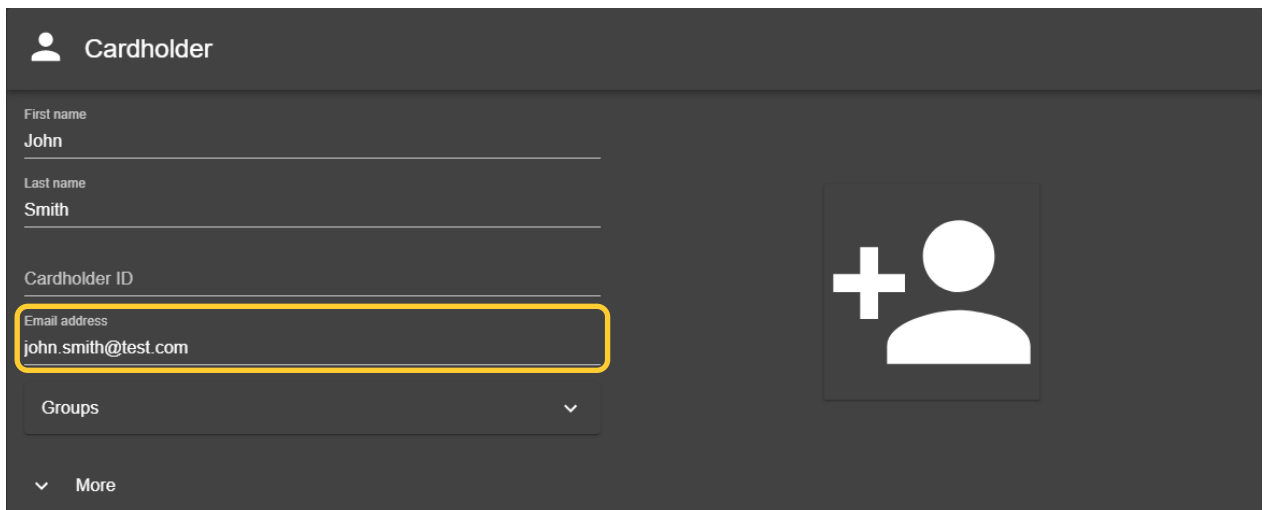

Cardholder

First name
John


Last name
Smith

Cardholder ID

Email address
john.smith@test.com

Groups

More


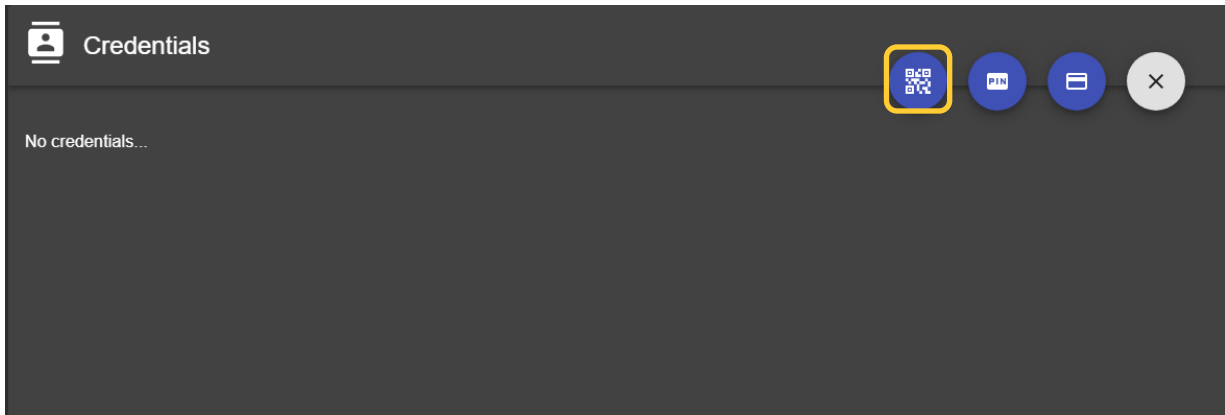


4. Then via the toggle switch we can change if the QR code sent will be dynamic or static. **(Using dynamic requires the user to also be given a PIN credential)**. Once that has been chosen, give the QR code a name and decide the expiration date. Under you can choose if you wish the QR code to be emailed directly after adding the adding the user. then ready click “Add” then click “Add” top left.



NOTE

To use dynamic QR code the cardholder is required to use the AXIS Mobile Credential app.

5. If you chose not to send directly or need to re-send the QR code click on the three dots next to the cardholder and select "Email QR code" in the pop-up confirm the details and press "Ok"

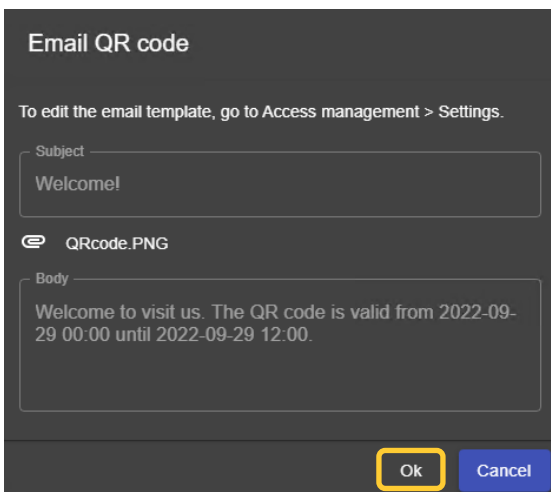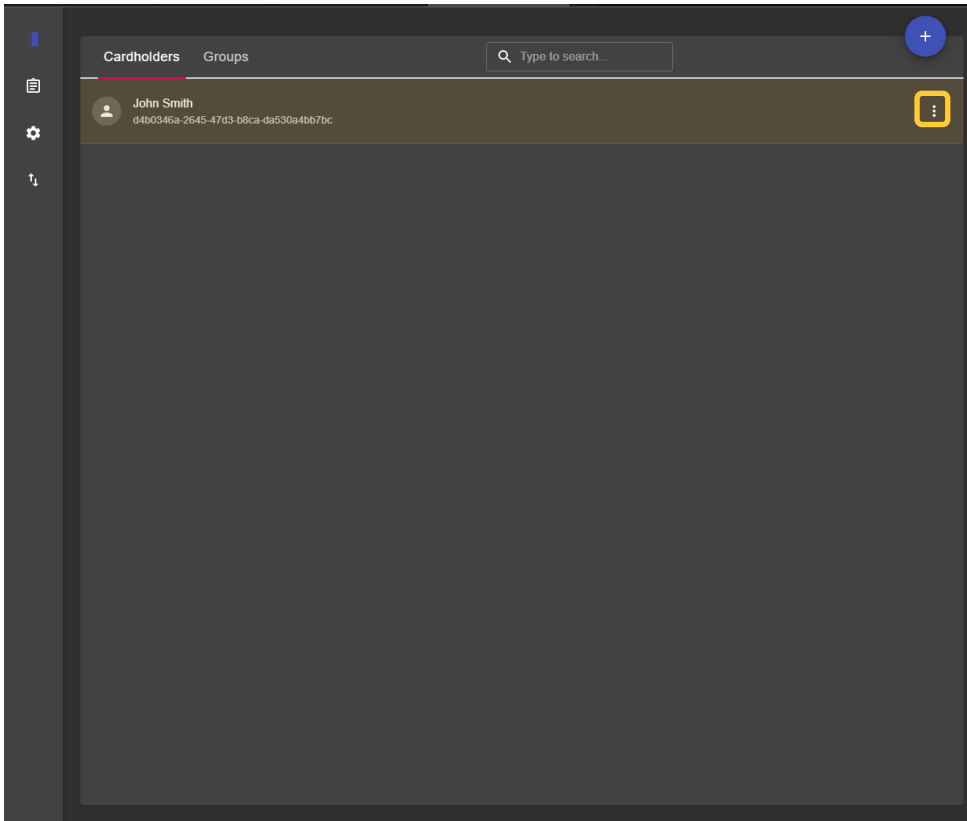

6. If you wish to change the QR code email message template this can be edited by clicking the settings symbol from the left bar and editing the "Email template"

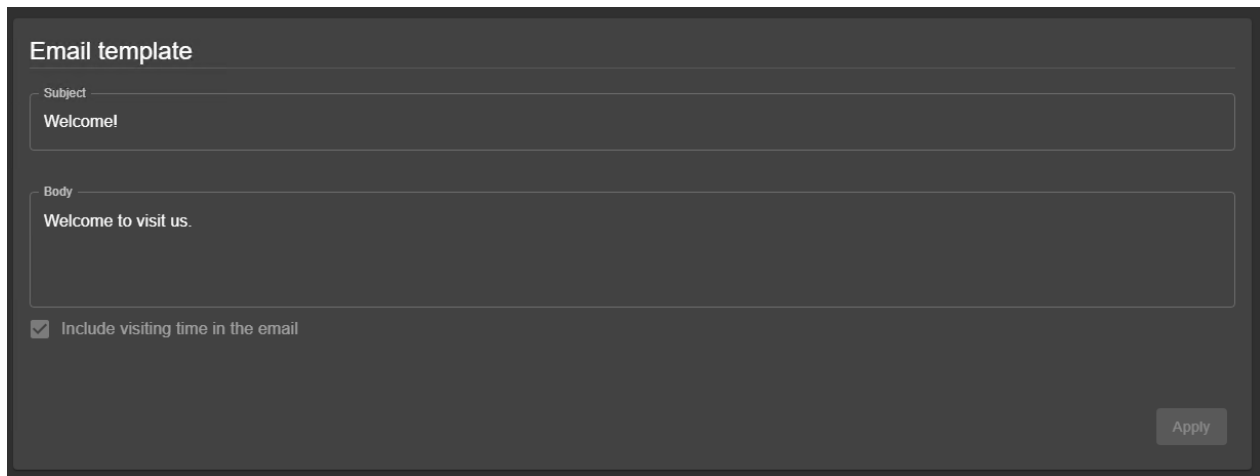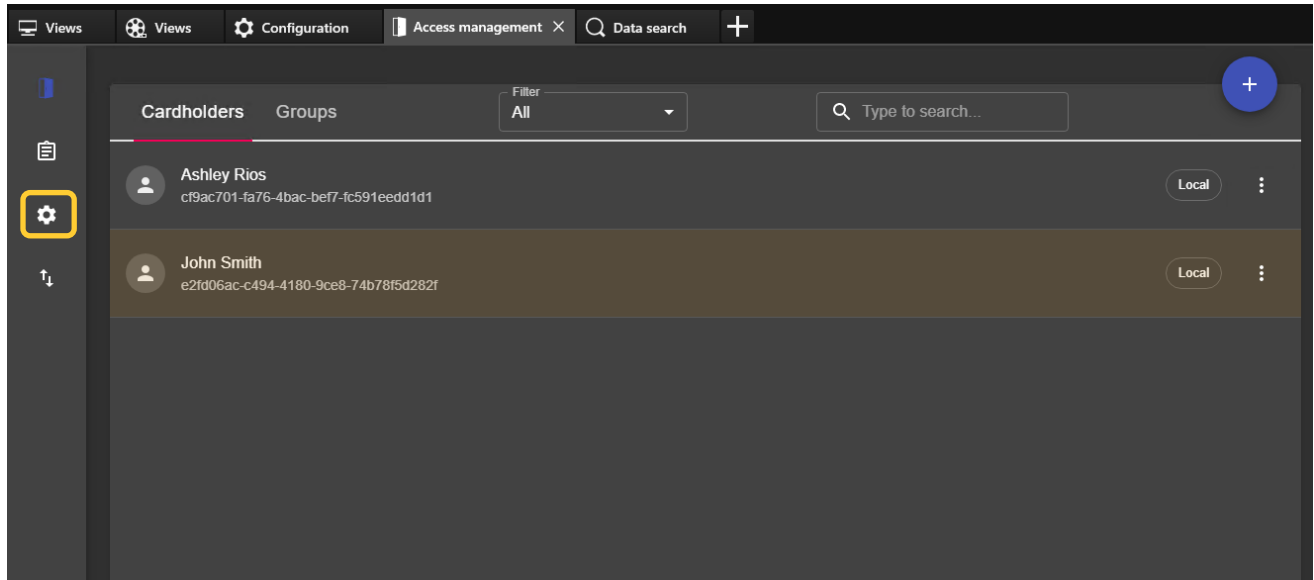


Step 8 – Using AXIS Mobile Credential

How to use the AXIS Mobile Credential

If you use dynamic QR you are required to use the app, if you select static this is optional.

Follow these steps to configuration:

1. Open the email you received from the company and follow the steps in the email.
2. First you will be required to download the app from either play store (android) or app store (apple).
3. Once installed go back to the email and click on the credential link, this will automatically open to the installed app and insert your credential.
4. The company sending you this will send you your required PIN via their selected secure channel.
5. To use the app, tap on the credential and enter your given PIN. This will then display your dynamic QR code.
6. Present this to the doorstation/camera at the door you wish to enter, if you have the correct permission this will grant access.

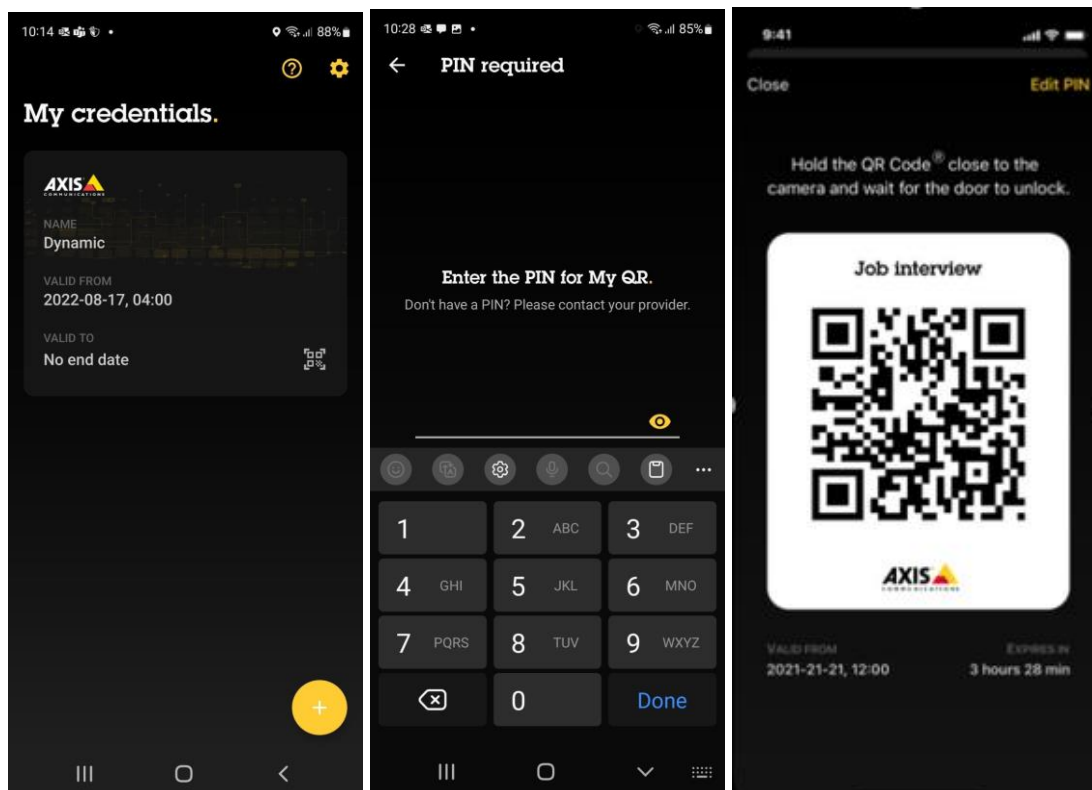

Considerations and limitations

1. The use of the A1601 requires HTTPS to be enabled
2. To be able to send the QR codes, SMTP must be configured in AXIS Camera Station
3. The AXIS Barcode Reader ACAP can be connected to up to 5 AXIS A1601 units
4. To use Dynamic QR Code the receiver is required to download the AXIS Mobile Credential App.
5. To get reader LED and buzzer feedback on the AXIS A8207, you will need to connect the A8207 as a card reader to the same door as the QR Barcode Reader as an IP, OSDP or Wiegand connection.
6. Support up to one QR code credential per cardholder and in total 5 credentials (including card, PIN and QR code) per cardholder.
7. Time validity of QR code credential is not supported in the first release, to be added in later release.
8. AXIS Barcode Reader ACAP support read QR code version stores up to 4296 bytes, depends on the image resolution and quality. It is optimized for QR code generated by AXIS Camera Station, which contains 32 bytes of data.
9. AXIS Barcode Rader ACAP works on selected Axis Intercom including AXIS A8105-E Network Video Door Station, AXIS A8207-VE MKII Network Video Door Station and AXIS I8016-LVE Network Video Intercom. More Axis intercom and camera will be added to the supported list in later release.
10. AXIS Barcode Reader ACAP with AXIS A8207-VE MKII Network Video Door Station supports injecting QR code via the OSDP/Wiegand reader interface to Axis or 3rd party door controller.