


Alpha-3R

Direct Thermal Portable Printer

SERVICE MANUAL

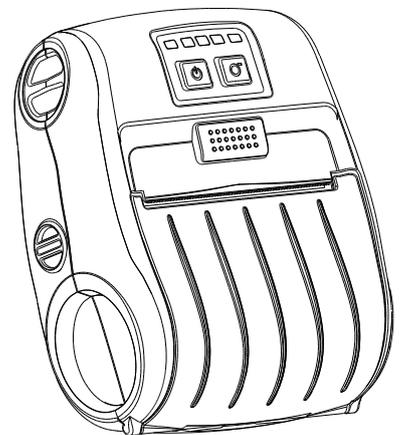

Contents

1. FUNDAMENTAL OF THE SYSTEM	2
1.1 Overview	2
2. ELECTRONICS	3
2.1 Summary of Board Connectors	3
3. MECHANISM	7
3.1 Replacing the Platen Roller (Including media cover)	7
3.2 Replacing the Keys Control Board	9
3.3 Replacing the Bluetooth Module (Option).....	10
3.4 Replacing the Media Holder Assembly	11
3.5 Replacing the Main Board Assembly	13
3.6 Replacing the Print Head Assembly.....	14
3.7 Replacing the Stepping Motor	15
3.8 Replacing the black mark sensor assembly	16
3.9 Replacing the Wi-Fi Module (Option)	17
3.10 Replacing the Open Sensor.....	18
4. TROUBLESHOOTING	22
4.1 Common Problems	22
5. Maintenance	24
Revise History	25

1. FUNDAMENTAL OF THE SYSTEM


1.1 Overview

Front View




1. LED indicator
2. Feed button
3. Power on/off button
4. Media cover release button
5. Media holder adjustment knob
6. Media cover

Interior View

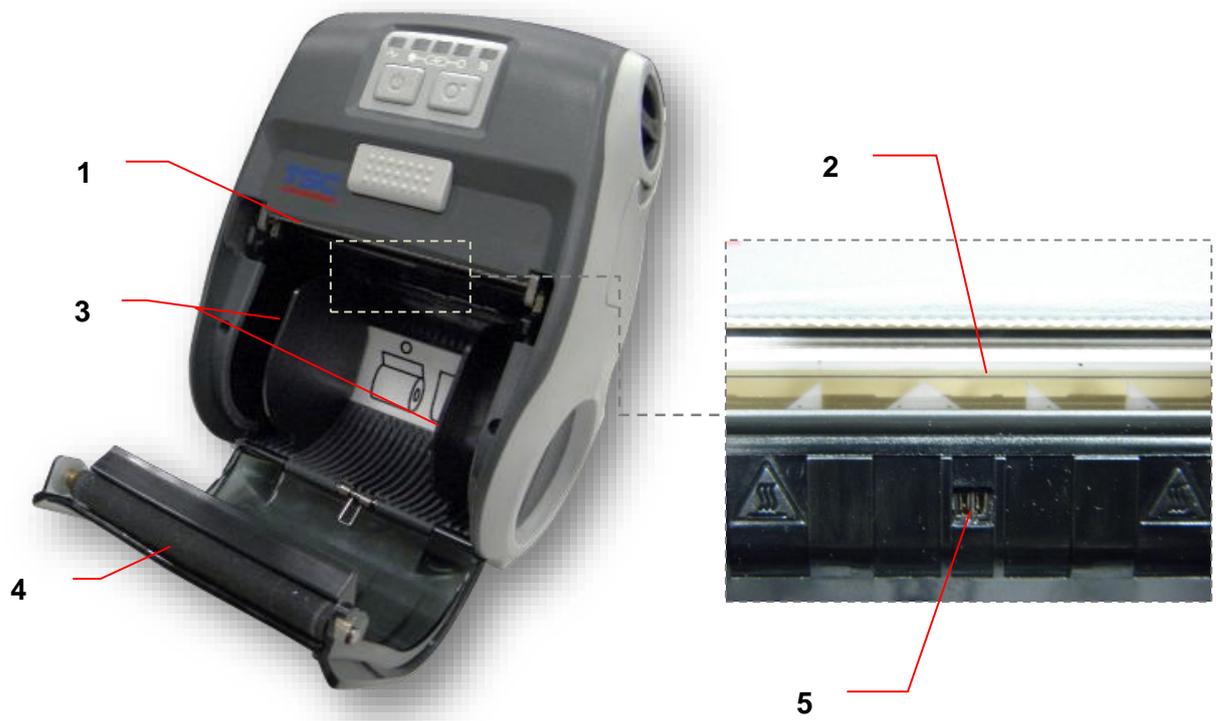

1. Tear edge
2. Print head
3. Media holder
4. Platen
5. Black mark sensor

Rear View

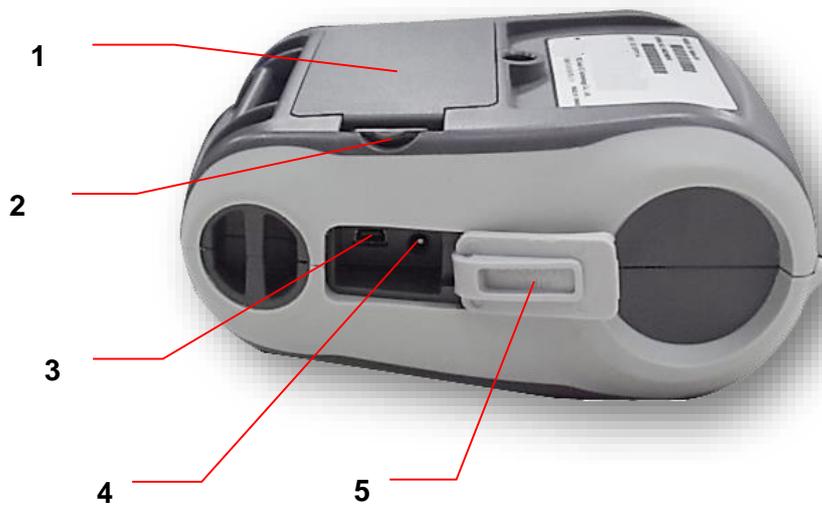


1. Li-ion battery
2. Battery open clasp
3. USB interface
4. Power jack
5. Interface cover





2. ELECTRONICS


2.1 Summary of Board Connectors

Main board top

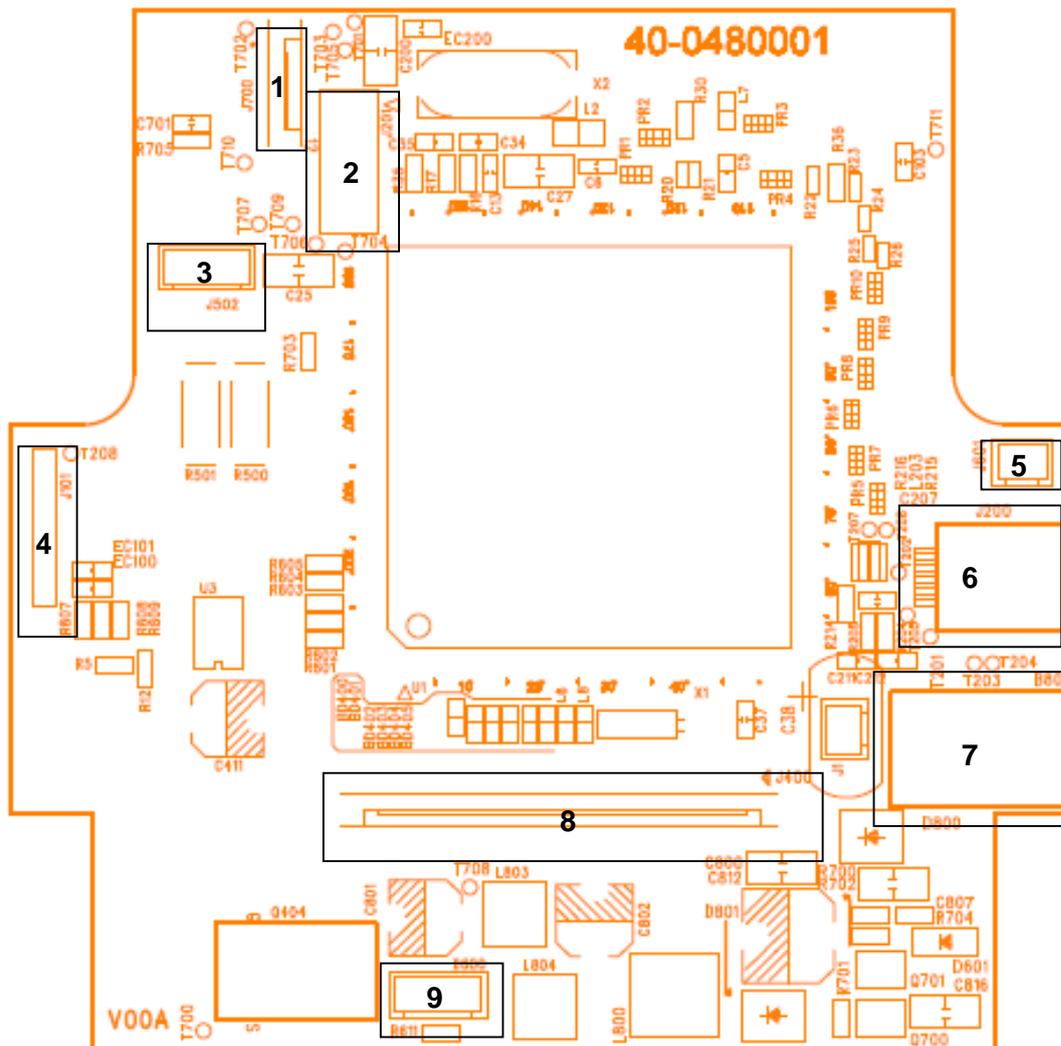


Connector	Description
1	LED & KEY board
2	WiFi or Bluetooth module connector

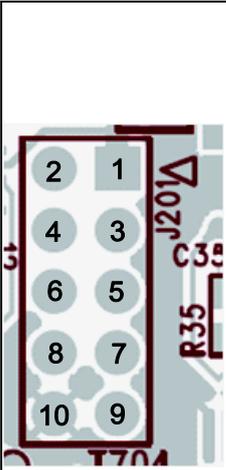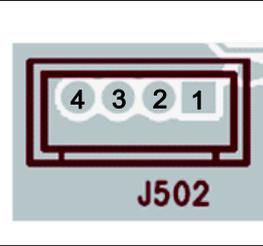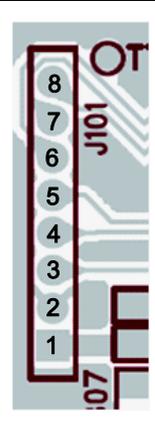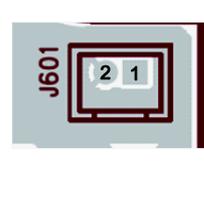	 <table border="1" data-bbox="890 152 1270 696"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>3.3V</td> </tr> <tr> <td>2</td> <td>BT/WiFi Reset</td> </tr> <tr> <td>3</td> <td>BT RXD</td> </tr> <tr> <td>4</td> <td>BT RTS</td> </tr> <tr> <td>5</td> <td>BT TXD</td> </tr> <tr> <td>6</td> <td>BT CTS</td> </tr> <tr> <td>7</td> <td>WiFi wake up</td> </tr> <tr> <td>8</td> <td>WiFi TCP</td> </tr> <tr> <td>9</td> <td>BT/WiFi Switch</td> </tr> <tr> <td>10</td> <td>GND</td> </tr> </tbody> </table>	Pin	Description	1	3.3V	2	BT/WiFi Reset	3	BT RXD	4	BT RTS	5	BT TXD	6	BT CTS	7	WiFi wake up	8	WiFi TCP	9	BT/WiFi Switch	10	GND
Pin	Description																						
1	3.3V																						
2	BT/WiFi Reset																						
3	BT RXD																						
4	BT RTS																						
5	BT TXD																						
6	BT CTS																						
7	WiFi wake up																						
8	WiFi TCP																						
9	BT/WiFi Switch																						
10	GND																						
3	Stepping motor																						
	 <table border="1" data-bbox="916 797 1279 1043"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>OUT1</td> </tr> <tr> <td>2</td> <td>OUT2</td> </tr> <tr> <td>3</td> <td>OUT1</td> </tr> <tr> <td>4</td> <td>OUT2</td> </tr> </tbody> </table>	Pin	Description	1	OUT1	2	OUT2	3	OUT1	4	OUT2												
Pin	Description																						
1	OUT1																						
2	OUT2																						
3	OUT1																						
4	OUT2																						
4	Download F/W connector																						
	 <table border="1" data-bbox="916 1133 1279 1574"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>3.3V</td> </tr> <tr> <td>2</td> <td>GND</td> </tr> <tr> <td>3</td> <td>RESET</td> </tr> <tr> <td>4</td> <td>BMS</td> </tr> <tr> <td>5</td> <td>NPCSO</td> </tr> <tr> <td>6</td> <td>MOSI</td> </tr> <tr> <td>7</td> <td>MISO</td> </tr> <tr> <td>8</td> <td>SPCK</td> </tr> </tbody> </table>	Pin	Description	1	3.3V	2	GND	3	RESET	4	BMS	5	NPCSO	6	MOSI	7	MISO	8	SPCK				
Pin	Description																						
1	3.3V																						
2	GND																						
3	RESET																						
4	BMS																						
5	NPCSO																						
6	MOSI																						
7	MISO																						
8	SPCK																						
5	Head open sensor																						
	 <table border="1" data-bbox="916 1659 1279 1865"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>HEAD</td> </tr> <tr> <td>2</td> <td>GND</td> </tr> </tbody> </table>	Pin	Description	1	HEAD	2	GND																
Pin	Description																						
1	HEAD																						
2	GND																						
6	USB & RS 232 connector																						
7	12V DC IN																						
8	TPH connector																						

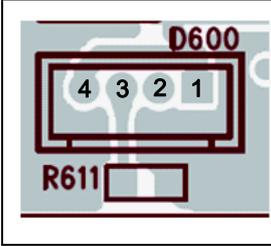9	Paper sensor											
		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>3.3V</td> </tr> <tr> <td>2</td> <td>BM_E</td> </tr> <tr> <td>3</td> <td>BM_R</td> </tr> <tr> <td>4</td> <td>3.3V</td> </tr> </tbody> </table>	Pin	Description	1	3.3V	2	BM_E	3	BM_R	4	3.3V
Pin	Description											
1	3.3V											
2	BM_E											
3	BM_R											
4	3.3V											

Main board bottom

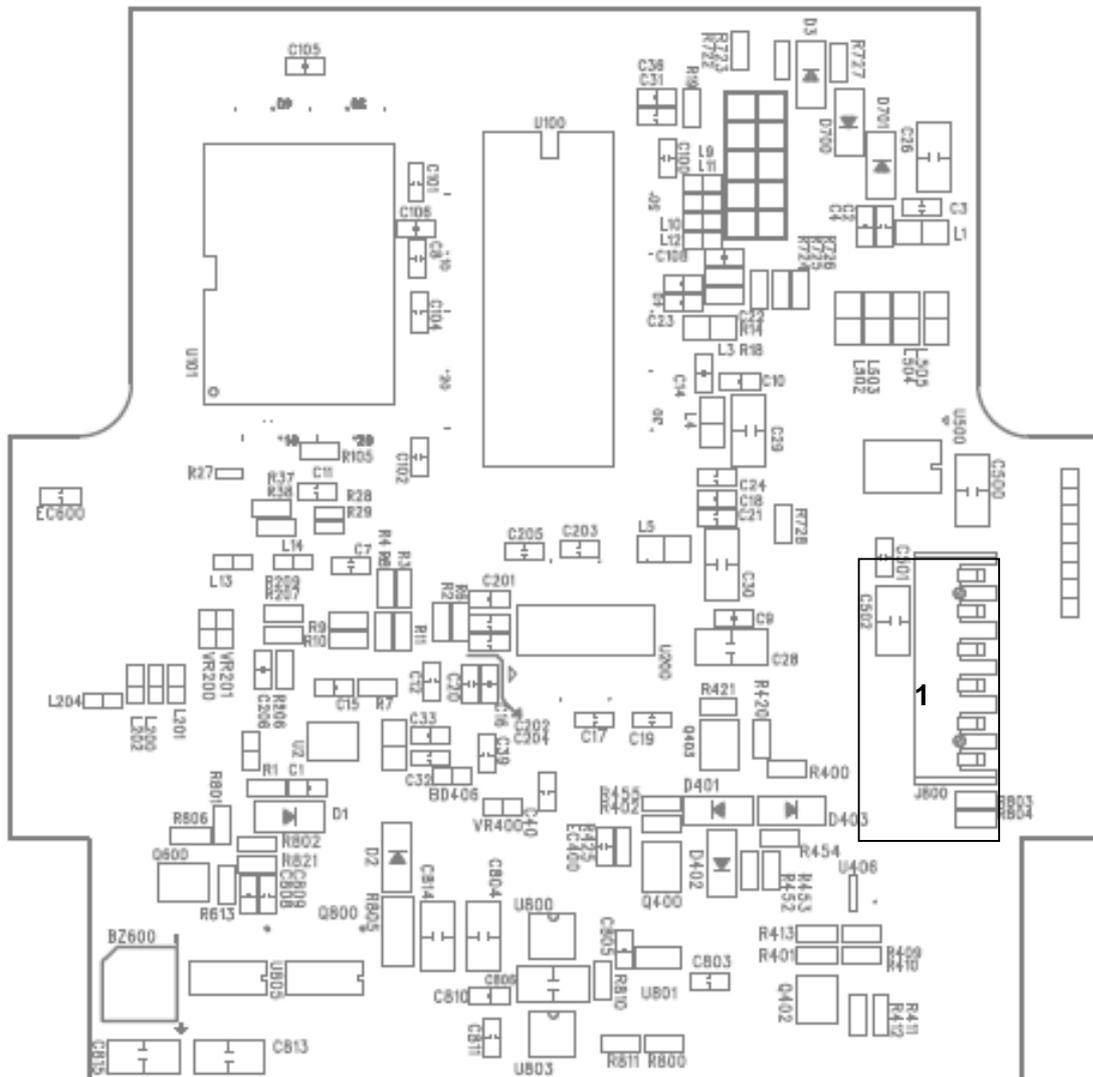

Connector	Description
1	Battery connector

3. MECHANISM

3.1 Replacing the Platen Roller (Including media cover)

1. Remove two screws from the back of the printer and two screws from the front of the printer.



2. Take the printer top cover off.



3. Use a tool to remove the shaft. Remove/Replace the media cover. (including the platen roller ass'y)




4. Reassemble the parts in the reverse procedures.

3.2 Replacing the Keys Control Board

1. Refer to section 3.1 to remove the printer top cover.
2. Remove two screws on the keys control board.




3. Loosen the connector lock then disconnect the flat cable from the keys control board.
Remove/Replace the keys control board.

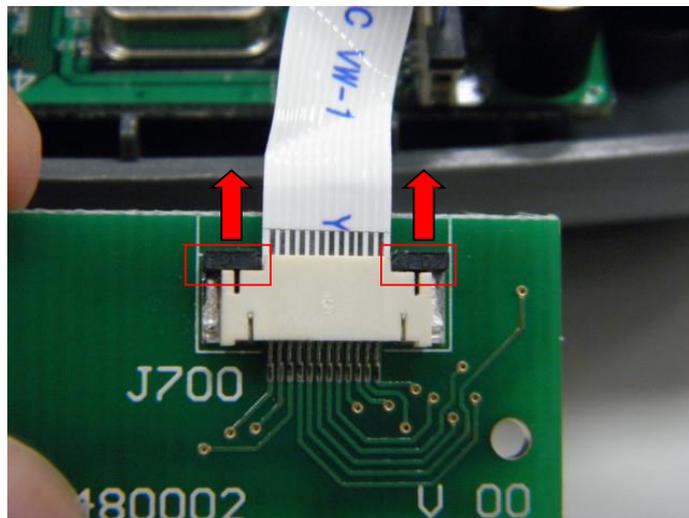

4. Reassemble the parts in the reverse procedures.

3.3 Replacing the Bluetooth Module (Option)

1. Refer to section 3.2 to remove the keys control board.
2. Remove two screws on the Bluetooth control board.

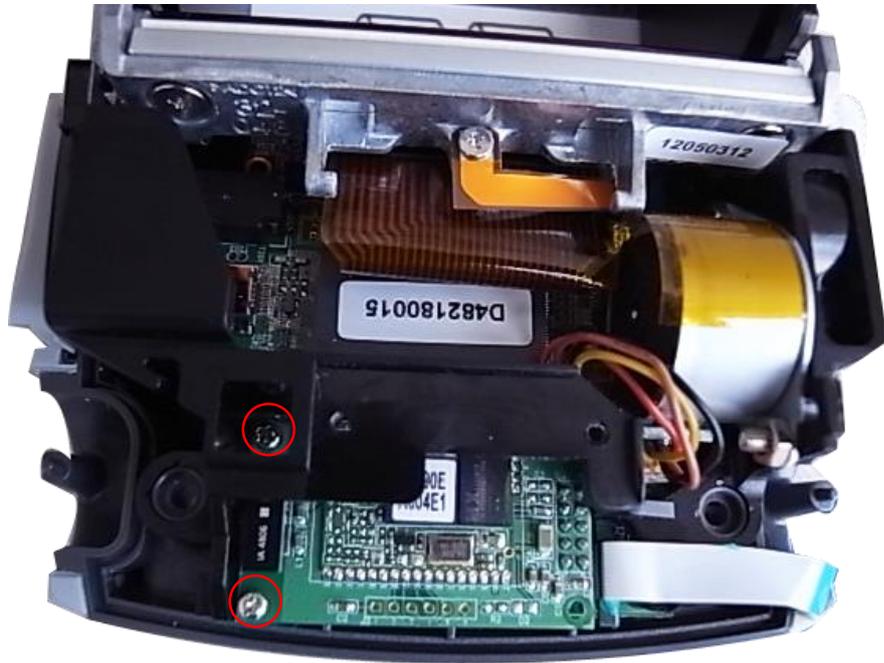

3. Disconnect the connector on the board.




4. Reassemble the parts in the reverse procedures.


3.4 Replacing the Media Holder Assembly

1. Remove two screws and media holder adjustment knob.



2. Take the interior mechanism from the printer bottom cover.
3. Plug the media holder adjustment knob to rotate the media holder to the closest position and remove a screw on the other side.

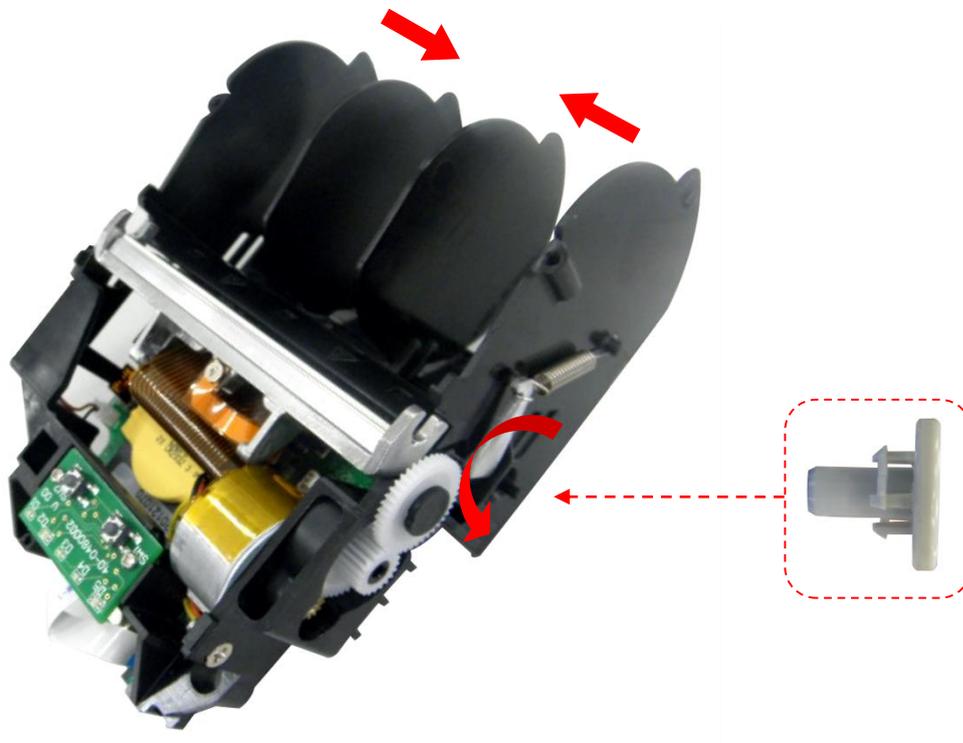

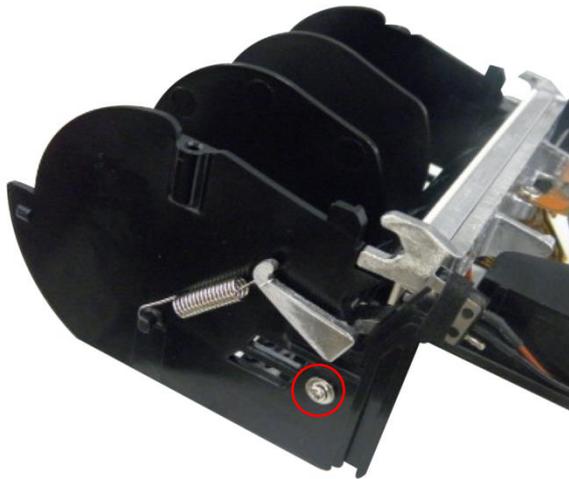

4. Take the media holder assembly from the mechanism.



5. Reassemble the parts in the reverse procedures.

3.5 Replacing the Main Board Assembly

1. Refer to section 3.2 to section 3.4 to remove key control board, Bluetooth control board (option), and the media holder assembly.
2. Remove two screws from the back of interior mechanism and disconnect all the connectors on the main board assembly.




3. Reassemble the parts in the reverse procedures.

3.6 Replacing the Print Head Assembly

1. Refer to section 3.2 to section 3.5 to remove key control board, Bluetooth control board (option), the media holder assembly, and main board assembly.
2. Use the long-nose pliers to remove two spring torsions on each side.




3. Take the gear holder and the gear, and push the print head holder on the each side to remove the print head assembly.

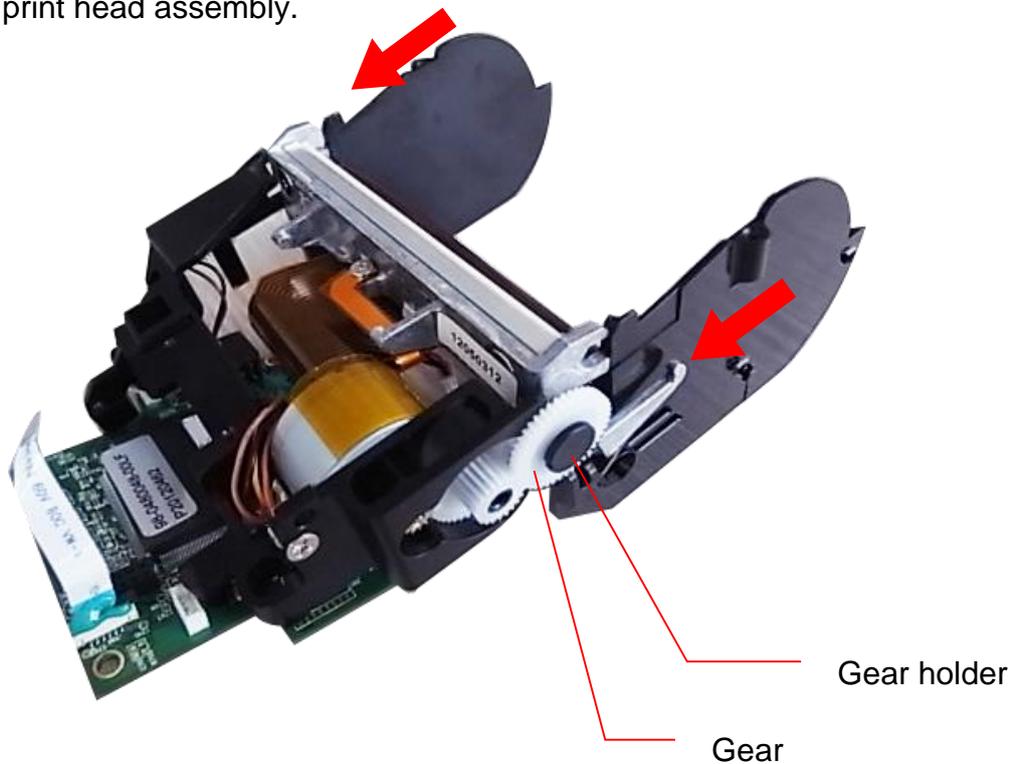

4. Reassemble the parts in the reverse procedures.

3.7 Replacing the Stepping Motor

1. Refer to section 3.4 and section 3.5 to remove media holder assembly and main board assembly.
2. Remove the gear holder and two gears.

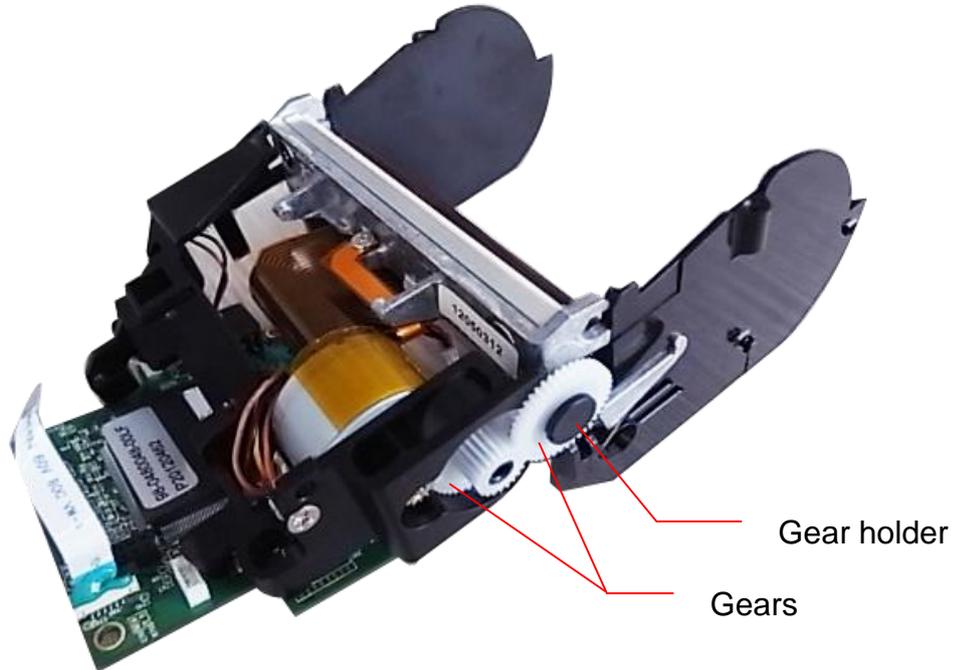


3. Remove two screws.



4. Reassemble the parts in the reverse procedures.

3.8 Replacing the black mark sensor assembly


1. Refer to section 3.2 to section 3.5 to remove key control board, Bluetooth control board (option), the media holder assembly, and main board assembly.
2. Remove a screw and replace the black mark sensor.

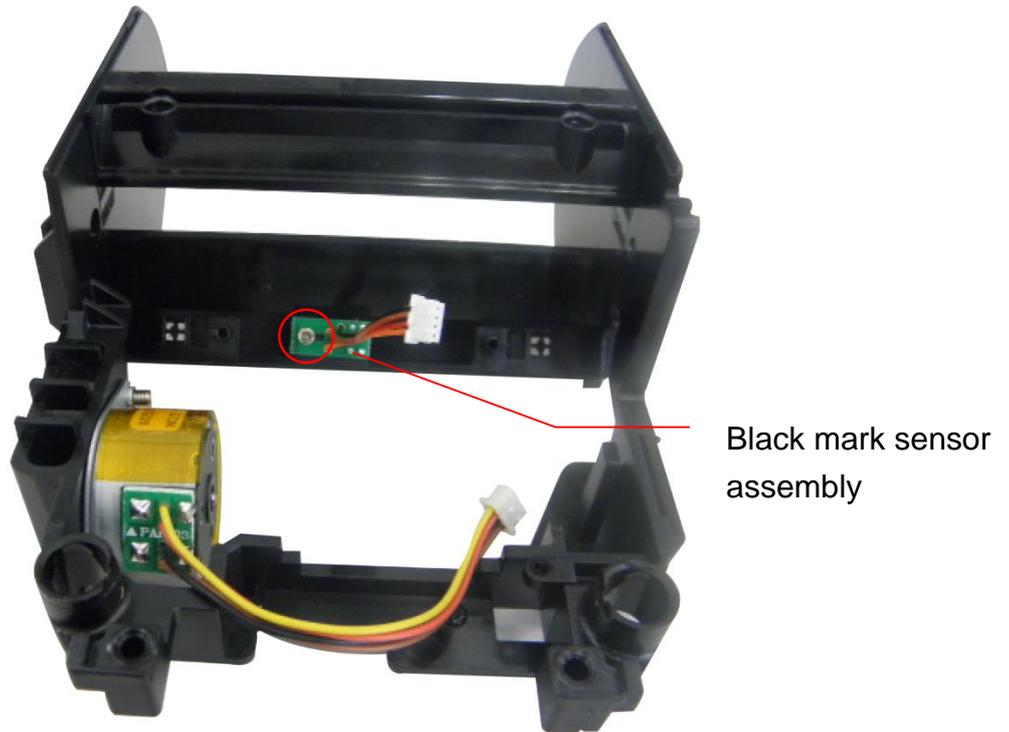

3. Reassemble the parts in the reverse procedures.

3.9 Replacing the Wi-Fi Module (Option)

1. Refer to section 3.1 take the printer top cover off. Disconnect the Wi-Fi antenna connector carefully.

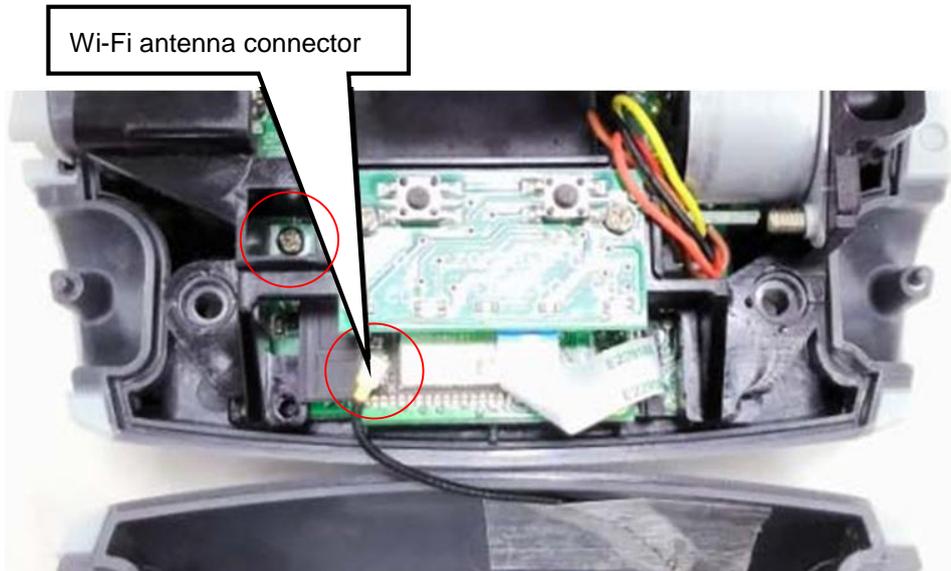

2. Refer to section 3.2 to remove the keys control board.
3. Remove one screw on the Wi-Fi control board. Please refer to above picture.
4. Replace the WiFi control board.
5. Reassemble the parts in the reverse procedures.

Note:

- This is the new Wi-Fi module's replacing instruction. It should work with the main board that is - 30LF version. (or later version)
- If you replace the main board, please check the Wi-Fi signal band on configuration page for your using region. If any questions, please contact the Customer Service Department of your purchased reseller or distributor for assistance.

US	EUR
<pre> ***** WIFI VERSION: 1.3.1c WIFI MAC ADDRESS: 00-23-A7-65-19-30 WIFI Region: US WIFI MODE: INFRASTRUCTURE WIFI SSID: RD_AP24 WIFI DHCP ENABLED: YES WIFI IP ADDRESS: 0.0.0.0 WIFI SUBNET MASK: 0.0.0.0 WIFI DEFAULT GATEWAY: 0.0.0.0 WIFI PRINTER NAME: PS-651930 WIFI RAW PORT: 9100 ***** </pre>	<pre> ***** WIFI VERSION: 1.3.1c WIFI MAC ADDRESS: 00-23-A7-65-19-30 WIFI Region: EUR WIFI MODE: INFRASTRUCTURE WIFI SSID: RD_AP24 WIFI DHCP ENABLED: YES WIFI IP ADDRESS: 0.0.0.0 WIFI SUBNET MASK: 0.0.0.0 WIFI DEFAULT GATEWAY: 0.0.0.0 WIFI PRINTER NAME: PS-651930 WIFI RAW PORT: 9100 ***** </pre>

3.10 Replacing the Open Sensor

1. Please refer to section 3.1 take the printer top cover off and replace a new one with platen roller.



※Old media cover




※New media cover

(If the media cover is already the new one, it doesn't need to replace the open sensor)


2. Remove the screw on the open sensor.



3. Unplug the old open sensor connector.

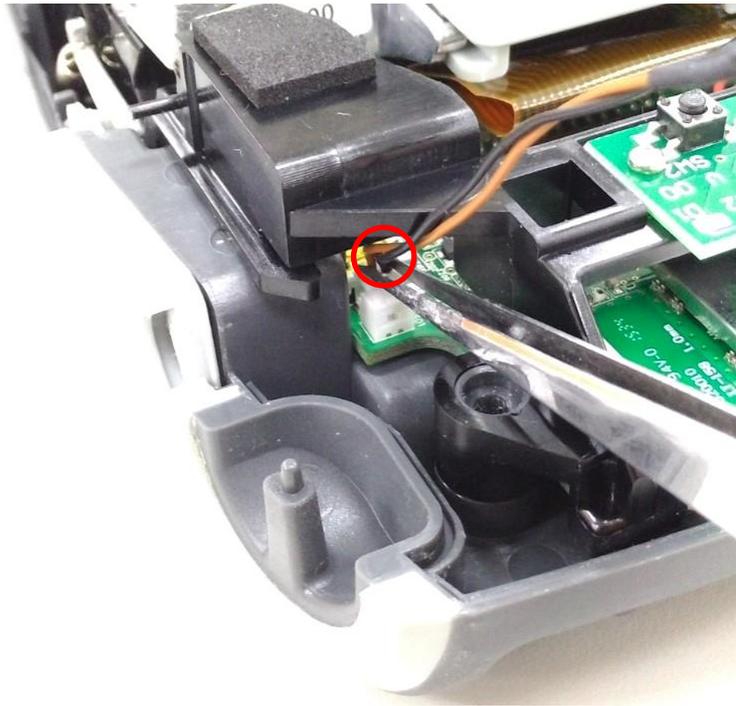


4. Then, insert the new open sensor connector.

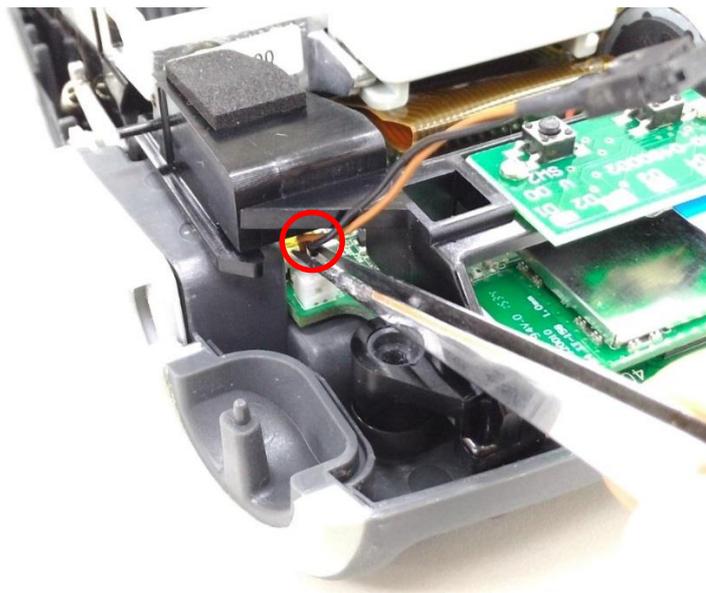


5. Install the elastic panel on the open sensor.


Note: the direction of elastic panel must be the same as illustrated

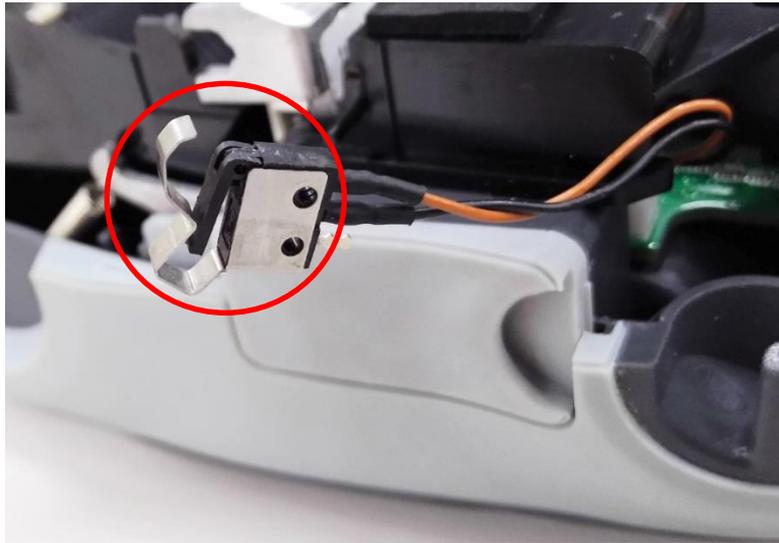


6. Place the open sensor on the side of media cover switch.

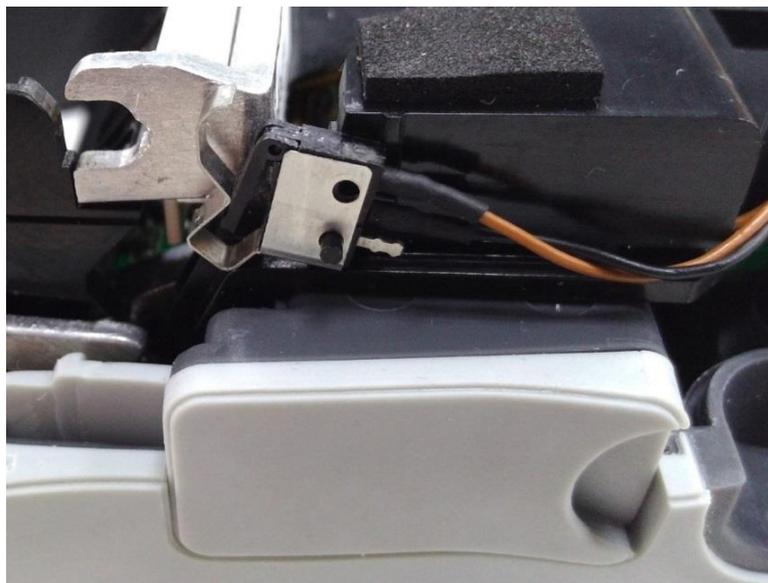

7. Lock the screw on the side of media cover switch.

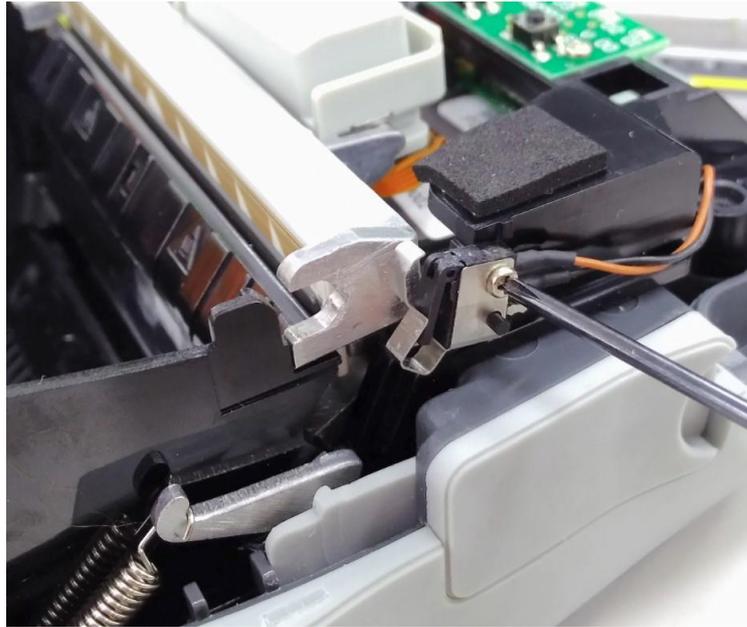

8. Fix the wire on the slot.

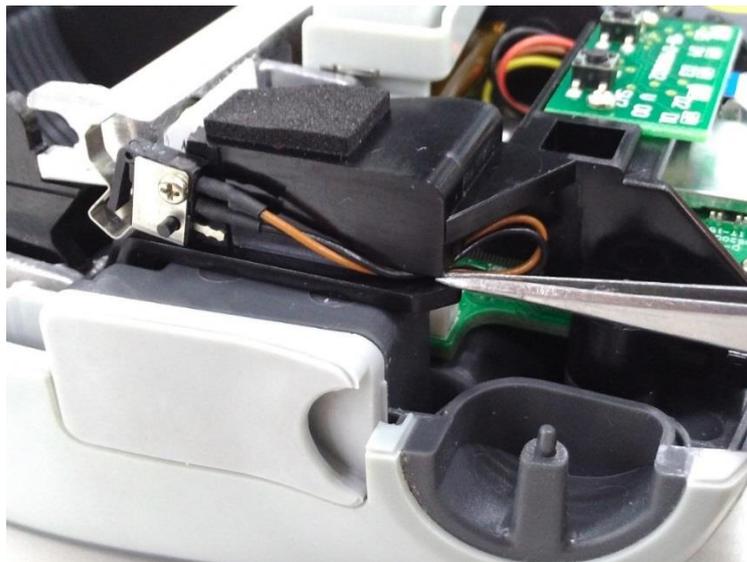

9. Reassemble the parts in the reverse procedures.

4. TROUBLESHOOTING

4.1 Common Problems

The following guide lists the most common problems that may be encountered when operating this bar code printer. If the printer still does not function after all suggested solutions have been invoked, please contact the Customer Service Department of your purchased reseller or distributor for assistance.

Problem	Possible Cause	Recovery Procedure
Power indicator does not illuminate	<ul style="list-style-type: none"> * The battery is not properly installed. * The battery is dead. 	<ul style="list-style-type: none"> * Reinstall the battery. * Switch the printer on. * Charge the battery.
- The printer status from DiagTool shows “ Head Open ”.	<ul style="list-style-type: none"> * The printer carriage is open. 	<ul style="list-style-type: none"> * Please close the print carriage.
- The printer status from DiagTool shows “ Out of Paper ”..	<ul style="list-style-type: none"> * Running out of media roll. * The media is installed incorrectly. * Black mark sensor is not calibrated. 	<ul style="list-style-type: none"> * Supply a new media roll. * Please refer to the steps on section 3.4 to reinstall the media roll. * Calibrate the black mark sensor.
- The printer status from DiagTool shows “ Paper Jam ”.	<ul style="list-style-type: none"> * Black mark sensor is not set properly. * Make sure media size is set properly. * Media may be stuck inside the printer mechanism. 	<ul style="list-style-type: none"> * Calibrate the black mark sensor. * Set media size correctly.
Memory full (FLASH / DRAM)	<ul style="list-style-type: none"> * The space of FLASH/DRAM is full. 	<ul style="list-style-type: none"> * Delete unused files in the FLASH/DRAM. * The max. numbers of DRAM is 256 files. * The max. user addressable memory space of DRAM is 256KB. * The max. numbers of file of FLASH is 256 files. * The max. user addressable memory space of FLASH is 2560KB.
Poor Print Quality	<ul style="list-style-type: none"> * Media is loaded incorrectly * Dust or adhesive accumulation on the print head. * Print density is not set properly. * Printhead element is damaged. 	<ul style="list-style-type: none"> * Reload the supply. * Clean the print head. * Clean the platen roller. * Adjust the print density and print speed. * Run printer self-test and check the print head test pattern if there is dot missing in the pattern. * Change proper media roll.
Missing printing on the left or right side of label	<ul style="list-style-type: none"> * Wrong label size setup. 	<ul style="list-style-type: none"> * Set the correct label size.
Gray line on the blank label	<ul style="list-style-type: none"> * The print head is dirty. * The platen roller is dirty. 	<ul style="list-style-type: none"> * Clean the print head. * Clean the platen roller.

Irregular printing	* The printer is in Hex Dump mode. * The RS-232 setting is incorrect.	* Turn off and on the printer to skip the dump mode. * Re-set the Rs-232 setting.
---------------------------	--	--


5. Maintenance

This session presents the clean tools and methods to maintain your printer.

1. Please use one of following material to clean the printer.

- Cotton swab
- Lint-free cloth
- Vacuum / Blower brush
- 100% ethanol

2. The cleaning process is described as following,

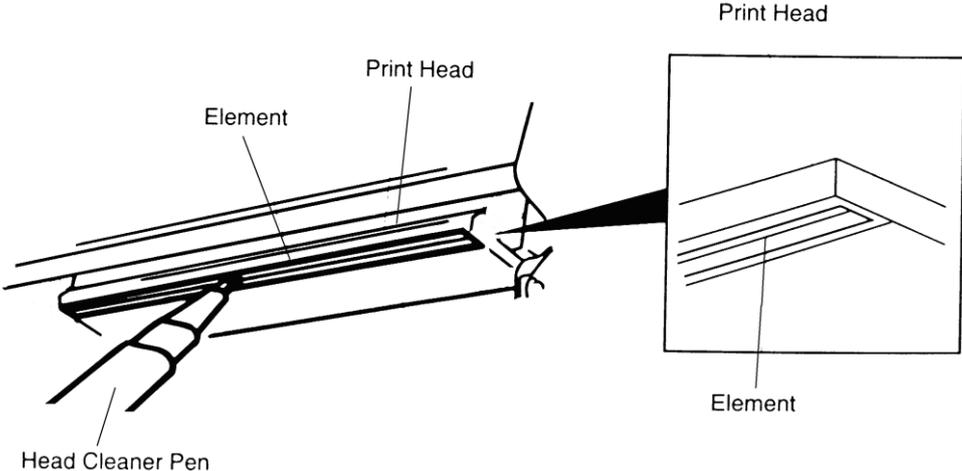Printer Part	Method	Interval
Print Head	1. Always turn off the printer before cleaning the print head. 2. Allow the print head to cool for a minimum of one minute. 3. Use a cotton swab and 100% ethanol to clean the print head surface.	Clean the print head when changing a new label roll
		
Platen Roller	1. Turn the power off. 2. Rotate the platen roller and wipe it thoroughly with 100% ethanol and a cotton swab, or lint-free cloth.	Clean the platen roller when changing a new label roll
Tear Bar/Peel Bar	Use the lint-free cloth with 100% ethanol to wipe it.	As needed
Sensor	Compressed air or vacuum	Monthly
Exterior	Wipe it with water-dampened cloth	As needed
Interior	Brush or vacuum	As needed

Note:

- Do not touch printer head by hand. If you touch it careless, please use ethanol to clean it.
- Please use 100% Ethenol. DO NOT use medical alcohol, which may damage the printer head.
- Regularly clean the print head and supply sensors once change a new ribbon to keep printer performance and extend printer life.



TSC Auto ID Technology Co., Ltd.

Corporate Headquarters

9F., No.95, Minquan Rd., Xindian Dist.,
New Taipei City 23141, Taiwan (R.O.C.)

TEL: +886-2-2218-6789

FAX: +886-2-2218-5678

Web site: www.tscprinters.com

E-mail: printer_sales@tscprinters.com

tech_support@tscprinters.com

Li Ze Plant

No.35, Sec. 2, Ligong 1st Rd., Wujie Township,
Yilan County 26841, Taiwan (R.O.C.)

TEL: +886-3-990-6677

FAX: +886-3-990-5577